

XSHOT 36685

XSHOT PRO-Series 1 Sinister Blaster User Manual

Model: 36685

1. IMPORTANT SAFETY INFORMATION

WARNING: Choking hazard - Small pieces - Not for children under 3 years.

Always wear eye protection when operating the blaster. Do not aim at eyes or face. Use only official XSHOT darts.

2. PRODUCT OVERVIEW

The XSHOT PRO-Series 1 Sinister Blaster is designed for advanced dart blasting, offering high performance and versatility. This model (36685) features a distinctive Sinister skin design and is compatible with both full and half-length darts.

Key Features:

- **Extended Range:** Capable of launching darts up to 43 meters (140 feet).
- **Dual Dart Compatibility:** Equipped with two quick-release dart clips, supporting both full and half-length darts.
- **Slam Fire Action:** Allows for rapid firing of the 20-dart clip in quick succession.
- **Air Pocket Technology Darts:** Includes specially designed darts for enhanced speed, accuracy, and range.

Included in the Box:

- 1x XSHOT Skins Pro Series Longshot Blaster
- 2x Dart Clips
- 20x XSHOT Pro Series Half-Length Darts
- 20x XSHOT Pro Series Full-Length Darts



Image: The XSHOT PRO-Series 1 Sinister Blaster, showcasing its red, white, and black design with an orange magazine.

3. SETUP INSTRUCTIONS

3.1. Unboxing and Inspection:

Carefully remove all components from the packaging. Inspect the blaster and darts for any damage. Ensure all listed items are present.

3.2. Loading Darts into Clips:

1. Take one of the provided dart clips.
2. Insert the XSHOT darts (either half-length or full-length) into the clip, ensuring they are fully seated.
3. Repeat for the second clip.



Image: Hands demonstrating how to load darts into the blaster's magazine.

3.3. Inserting the Dart Clip:

1. Locate the magazine well on the underside of the blaster.
2. Align the loaded dart clip with the magazine well.
3. Push the clip firmly upwards until it clicks securely into place.

4. OPERATING INSTRUCTIONS

4.1. Priming the Blaster:

To prime the blaster, pull the priming slide located at the rear of the blaster all the way back until it locks into place. Then push it forward until it clicks.

4.2. Firing a Single Dart:

1. Ensure the blaster is primed.
2. Aim the blaster at your target, ensuring no one is in the line of fire.
3. Pull the trigger to launch a single dart.

4.3. Using Slam Fire Action:

For rapid firing, hold down the trigger and continuously pump the priming slide back and forth. This will rapidly launch darts until the clip is empty.

TACTICAL RAIL

**FIRES UP TO 140FT
PER SECOND**



Image: The XSHOT PRO-Series 1 Sinister Blaster highlighting its tactical rail, 20-dart capacity, and slam fire action.

Your browser does not support the video tag.

Video: A product overview demonstrating the XSHOT blaster's features and operation.

5. MAINTENANCE

- **Cleaning:** Wipe the blaster with a dry or slightly damp cloth. Do not immerse in water.
- **Dart Care:** Keep darts clean and dry. Avoid bending or crushing darts to maintain optimal performance.
- **Storage:** Store the blaster and darts in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dart not firing or jamming	Blaster not fully primed; damaged or incorrect darts; dart clip not properly inserted.	Ensure priming slide is fully cycled. Use only official XSHOT darts. Check dart clip for secure fit. Remove any jammed darts carefully.
Reduced dart range/velocity	Worn out darts; blaster mechanism issue.	Replace old or damaged darts with new official XSHOT darts. Ensure blaster is clean and free of obstructions.

7. SPECIFICATIONS

Model Number: 36685

Product Dimensions: 2.56 x 12.01 x 23.62 inches

Item Weight: 1.21 pounds

Manufacturer Recommended Age: 14 years and up

Dart Compatibility: XSHOT Pro Series Half-Length Darts, XSHOT Pro Series Full-Length Darts

Max Firing Range: Up to 43m / 140 feet

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: ZURU