Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > LAUSAINT HOME /
- > LAUSAINT HOME 10'x13' Outdoor Patio Gazebo Instruction Manual

LAUSAINT HOME 10x13

LAUSAINT HOME 10'x13' Outdoor Patio Gazebo Instruction Manual

Model: 10x13

1. Introduction

Thank you for choosing the LAUSAINT HOME 10'x13' Outdoor Patio Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your gazebo. Please read these instructions thoroughly before beginning assembly and retain them for future reference.



Image 1: The LAUSAINT HOME 10'x13' Outdoor Patio Gazebo, featuring a smoke grey canopy and privacy screens, set up next to a pool.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always assemble the gazebo with at least two adults.
- Ensure all parts are securely fastened before use.
- Do not use the gazebo in severe weather conditions, including heavy winds, snow, or thunderstorms. Disassemble or secure the canopy during such conditions to prevent damage or injury.
- Anchor the gazebo firmly to the ground using the provided expansion bolts, stakes, and ropes.
- Keep all flame and heat sources away from the gazebo fabric.
- Regularly inspect the frame and fabric for any signs of wear or damage. Replace damaged parts immediately.
- Do not hang heavy objects from the gazebo frame or roof hooks beyond the specified weight capacity (44 lbs for roof hooks).

3. PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- · Galvanized Iron Frame Components
- Main Canopy Fabric (1500mm water-resistant polyester)
- Upper Canopy Fabric (vented double roof)
- Mosquito Netting (with zippers)
- Privacy Curtains (with zippers and Velcro straps)
- Expansion Bolts (12 pcs for concrete floors)
- Ground Stakes (12 pcs for soft ground)
- Wind Ropes (4 pcs)
- Assembly Hardware (screws, nuts, washers, tools)
- Instruction Manual



Image 2: Included expansion bolts, stakes, and ropes for securing the gazebo to various ground types.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have at least two people for this process.

- 1. Site Selection: Choose a flat, level area for your gazebo. Ensure there is adequate clearance around the structure.
- 2. **Unpack Components:** Lay out all frame parts, fabric, and hardware. Refer to the parts list to ensure everything is present.
- 3. **Assemble the Base Frame:** Connect the horizontal base bars to the vertical leg posts according to the diagrams in your included printed manual. Secure all connections loosely at first.
- 4. **Install Roof Frame:** Attach the roof support beams to the top of the leg posts. Gradually tighten all frame connections once the basic structure is formed.

5. Attach Canopy Fabrics:

- First, place the smaller upper canopy onto the top roof frame, ensuring the netting between the tops is correctly positioned for ventilation.
- Next, spread the main canopy fabric over the roof frame. Ensure it is taut and aligned. Utilize the zipper design for easier fitting if applicable.

6. **Install Mosquito Netting and Privacy Curtains:** Attach the mosquito netting and privacy curtains to the dual-track system on the gazebo frame. Ensure zippers are functional and Velcro straps are accessible for organization.

7. Secure the Gazebo:

- For concrete surfaces, use the provided expansion bolts to anchor each leg securely.
- For soft ground (lawn, garden), use the ground stakes and attach the wind ropes to the D-rings at the four corners, securing them to the ground.
- 8. Final Check: Verify all connections are tight and the gazebo is stable.



Image 3: Detail of the vented double roof, designed to promote airflow and repel mosquitoes.

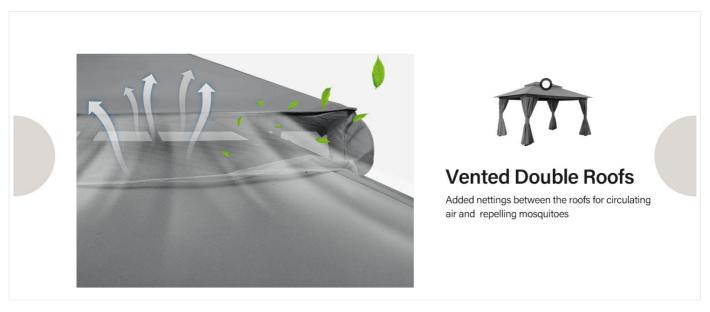


Image 4: The dual-track system allows independent operation of mosquito netting and privacy curtains.


5. OPERATING INSTRUCTIONS

- Mosquito Netting: Use the zippers to open or close the mosquito netting to protect against insects.
- **Privacy Curtains:** The privacy curtains can be zipped closed for full privacy or tied back using the Velcro straps for an open feel.
- **Decoration Hooks:** Utilize the integrated hooks on the roof frame for hanging lightweight decorations such as string lights or small fans. The maximum weight capacity for these hooks is 44 lbs.

• Corner D-Rings: The D-rings at the four corners can be used for additional wind ropes or to hang decorative items like wind chimes.



Image 5: Integrated hooks on the roof for hanging decorations like lights or fans.

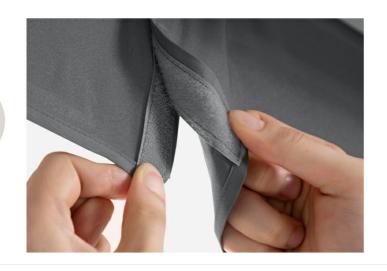



Prevent mosquitoes from entering through gaps effectively

Image 6: Velcro straps for easily organizing and tying back curtains and nettings.

6. MAINTENANCE

- Cleaning Fabric: Clean the canopy and curtains with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow fabric to air dry completely before storage.
- Frame Care: Wipe the galvanized iron frame with a damp cloth to remove dirt and debris. Inspect for rust or damage periodically.
- Water Drainage: The gazebo roof is designed with water leakage holes to prevent water accumulation. Regularly check these holes to ensure they are clear of debris.
- **Seasonal Storage:** For prolonged lifespan, especially during winter or extended periods of non-use, it is recommended to remove the canopy fabric and store it in a dry, protected area.
- **Regular Inspection:** Periodically check all bolts, screws, and anchoring points to ensure they remain tight and secure.

Water Leakage Holes

Prevents top water from collapsing Increase structural stability





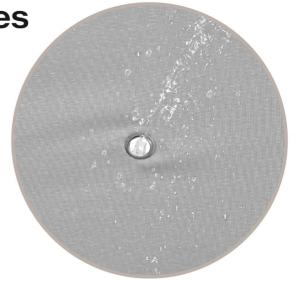




Image 7: Water leakage holes on the roof prevent water from pooling and increase structural stability.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; insufficient anchoring; uneven ground.	Ensure all bolts are tightened. Verify expansion bolts/stakes are properly installed. Relocate to a level surface if necessary. Use wind ropes for added stability.
Water pooling on the roof.	Drainage holes are blocked; canopy not taut.	Clear any debris from water leakage holes. Re-adjust canopy to ensure it is stretched tightly over the frame.
Mosquitoes or insects entering.	Netting not fully closed; gaps in netting.	Ensure all zippers on the mosquito netting are fully closed. Check for any tears or gaps in the netting and repair if found.
Difficulty zipping curtains/netting.	Fabric caught in zipper; zipper misalignment.	Gently pull fabric away from the zipper path. Ensure the fabric is aligned correctly before zipping. Apply a silicone-based lubricant if zipper is stiff.

8. SPECIFICATIONS

• Brand: LAUSAINT HOME

• Model: 10x13

• Product Dimensions: 157.5"L x 118.1"W x 106.3"H (10'x13' footprint)

• Frame Material: Galvanized Iron

Canopy Material: 1500mm Water-Resistant Polyester Fabric
UV Protection: UPF 50+ (blocks 99.99% of harmful UV rays)

• Water Resistance Level: Waterproof

• Item Weight: 110 Pounds

• Wind Resistance: Up to Level 7 winds (when properly anchored)

• Roof Frame Support: Up to 250 lbs

• Assembly Required: Yes

• Color: Smoke Grey

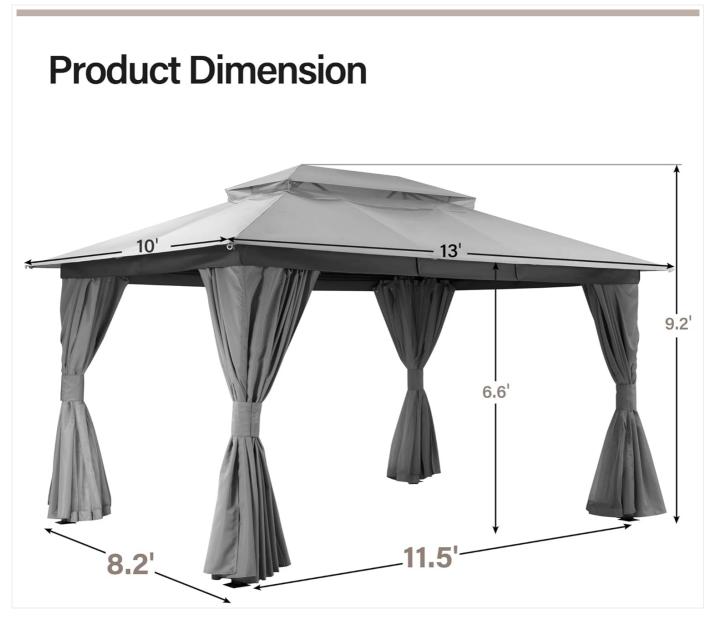


Image 8: Detailed product dimensions for the 10'x13' gazebo.

9. CUSTOMER SUPPORT AND WARRANTY

For any questions, missing parts, or assistance with your LAUSAINT HOME gazebo, please contact our customer support team.

- Returns: This product is eligible for 30-day easy returns. Please refer to your purchase platform's return policy for details
- Contact: For direct support, please visit the LAUSAINT HOME Store on Amazon or contact the seller directly through your order details.



© 2025 LAUSAINT HOME. All rights reserved.

Related Documents - 10x13



Lausaint Home GFS20202A Gazebo Assembly Instructions

Comprehensive assembly instruction manual for the Lausaint Home GFS20202A Gazebo, detailing parts and step-by-step assembly procedures.



LAUSAINT HOME BYY78-7 Plastic Outdoor Side Table Assembly Instructions

Step-by-step assembly guide for the LAUSAINT HOME BYY78-7 Plastic Outdoor Side Table. Includes all necessary tools for quick installation.



EROMMY 10x13 FT Gazebo Assembly Instructions | HWG-011JS-1

Detailed assembly instructions for the EROMMY 10x13 FT HWG-011JS-1 hardtop gazebo. Learn how to build your outdoor shelter with clear diagrams and part lists.



Erommy 10x13 FT Gazebo HWG20-035-1 Assembly Instructions

Comprehensive assembly guide for the Erommy 10x13 FT Gazebo (Model HWG20-035-1). Includes a detailed parts list, step-by-step instructions, and helpful tips for building your outdoor gazebo.



Erommy 10 x 13 FT Gazebo Assembly Instructions - HWG-011-1

Detailed assembly guide for the Erommy 10 \times 13 FT Gazebo (Model HWG-011-1), including a comprehensive parts list, required tools, and step-by-step instructions with textual descriptions of diagrams for building your outdoor structure.



EROMMY 10 x 13 FT Gazebo Assembly Instructions - Model HWG20-036JS

Comprehensive assembly guide for the EROMMY 10 \times 13 FT HWG20-036JS gazebo. Includes a detailed parts list and step-by-step instructions for building your outdoor shelter.