

HANNLOMAX HX-132CR

HANNLOMAX HX-132CR Alarm Clock Radio User Manual

Model: HX-132CR

INTRODUCTION

Thank you for purchasing the HANNLOMAX HX-132CR Alarm Clock Radio. This device combines a digital alarm clock, PLL FM radio, and convenient charging solutions for your mobile devices and smartwatches. Please read this manual carefully before use to ensure proper operation and to maximize your experience.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or shock hazards.
- Ensure the power adapter is compatible with your local power supply.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Keep the unit away from direct sunlight, heat sources, and excessive dust.
- Place the unit on a stable, flat surface.

PRODUCT FEATURES

- PLL FM Radio with 20 Preset Stations
- Digital Clock with Dual Alarms (Buzzer or Radio Wake-up)
- Dual USB Charging Ports: 1x USB Type-A (5V~1A) and 1x USB Type-C (5V~1A)
- Integrated Smartwatch Charging Holder (compatible with Apple and Samsung smartwatches)
- Adjustable Display Brightness

PACKAGE CONTENTS

- HANNLOMAX HX-132CR Alarm Clock Radio
- AC Power Adapter

PRODUCT OVERVIEW

Front Panel Controls and Display



Image: Front view of the HANNLOMAX HX-132CR with a smartwatch in the charging holder.

1. **AL1 / VOL- Button:** Adjusts Alarm 1, decreases volume.
2. **AL2 / VOL+ Button:** Adjusts Alarm 2, increases volume.
3. **▶/■ / AL. RESET / CLK. Button:** Power On/Off, Alarm Reset, Clock Set.
4. **PRESET / DIM. Button:** Radio Preset, Display Dimmer.
5. **NIGHT LIGHT Button:** Activates/Deactivates Night Light.
6. **▶▶ / HR. Button:** Tune Up / Next Track, Hour Adjustment.
7. **SNOOZE / SLEEP Button:** Snooze, Sleep Timer.
8. **◀◀ / MIN. Button:** Tune Down / Previous Track, Minute Adjustment.
9. **Digital LED Display:** Shows time, alarm status, radio frequency.
10. **Smartwatch Charging Holder:** Integrated holder for smartwatch charging cable.

Rear Panel Connections

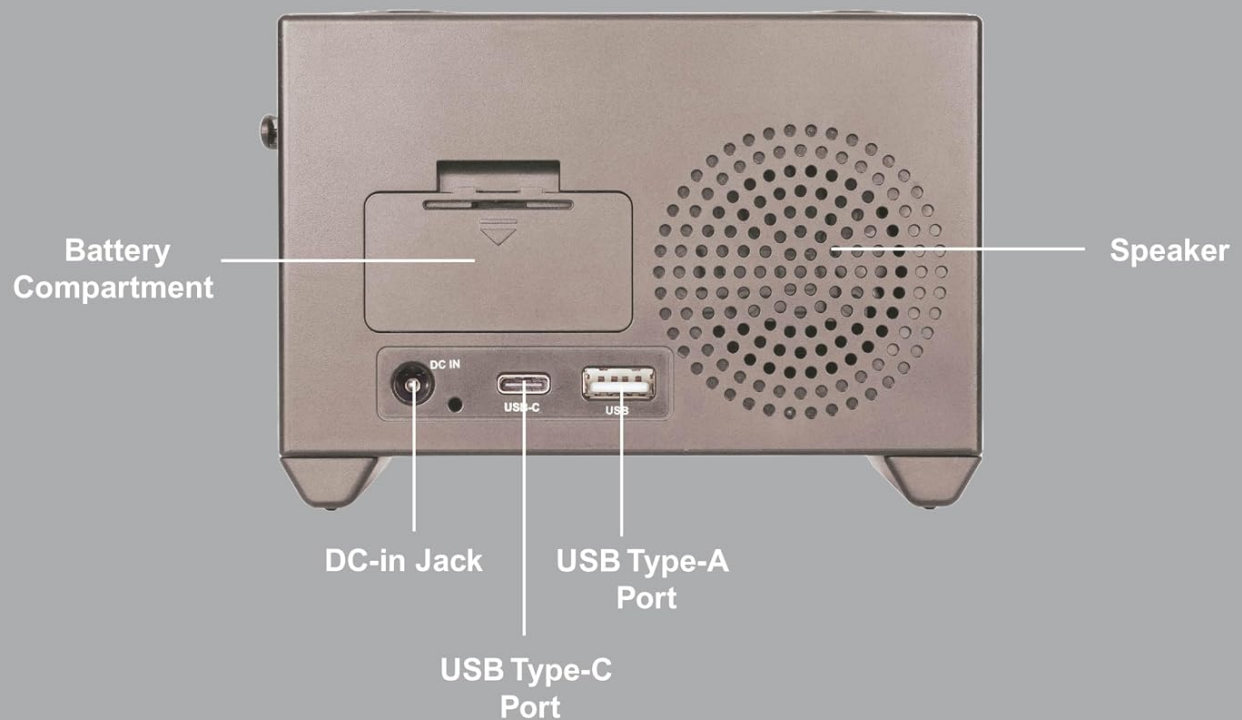


Image: Rear view of the HANNLOMAX HX-132CR showing power and USB ports.

11. **DC-in Jack:** For connecting the AC power adapter.
12. **USB Type-C Port:** For charging external devices (5V~1A).
13. **USB Type-A Port:** For charging external devices (5V~1A).
14. **Battery Compartment:** For backup batteries (not included).
15. **Speaker:** For audio output.

SETUP

Power Connection

1. Insert the DC plug of the supplied AC power adapter into the DC-in Jack on the rear of the unit.
2. Plug the AC adapter into a standard wall outlet. The unit will power on and the display will light up.

Battery Backup (Optional)

For time and alarm settings backup during a power outage, install 2 x AAA batteries (not included) into the battery compartment on the rear of the unit. Ensure correct polarity (+/-).

Smartwatch Charging Holder Setup

Apple / Samsung Smart Watch Charging Holder included



Image: Smartwatch charging holder with Apple and Samsung watches.

1. Open the drawer-type smartwatch charging holder located on the side of the unit.
2. Carefully route your smartwatch's charging cable (not included) through the designated channels within the holder.
3. Secure the charging puck in the holder's recess.
4. Connect the USB end of your smartwatch charging cable to either the USB Type-A or USB Type-C port on the rear of the alarm clock.
5. Place your smartwatch onto the charging puck in the holder.

OPERATION

Setting the Clock Time

1. In standby mode, press and hold the **▶/■ / AL. RESET / CLK.** button until the hour digits flash.
2. Press the **▶▶ / HR.** button to adjust the hour.
3. Press the **◀◀ / MIN.** button to adjust the minute.
4. Press the **▶/■ / AL. RESET / CLK.** button again to confirm and exit time setting mode.

Setting Alarms (Alarm 1 and Alarm 2)

The unit features two independent alarms.

1. **To Set Alarm 1:** Press and hold the **AL1 / VOL-** button until the alarm hour digits flash.
2. Use the **▶▶ / HR.** and **◀◀ / MIN.** buttons to set the desired alarm time.
3. Press **AL1 / VOL-** again to select the alarm source (Buzzer or Radio). The corresponding indicator (Buzzer AL1 or Radio AL1) will light up.

4. Press **AL1 / VOL-** once more to confirm and activate Alarm 1.
5. **To Set Alarm 2:** Follow the same steps using the **AL2 / VOL+** button.

FM Radio Operation

1. **Power On/Off:** Press the **▶/■** / **AL. RESET / CLK.** button to turn the radio on or off.
2. **Manual Tuning:** In radio mode, press the **▶▶ / HR.** or **◀◀ / MIN.** buttons briefly to fine-tune the frequency.
3. **Auto Scan:** Press and hold the **▶▶ / HR.** or **◀◀ / MIN.** buttons to automatically scan for the next available station.
4. **Volume Adjustment:** Use the **AL1 / VOL-** and **AL2 / VOL+** buttons.
5. **Setting Presets (20 stations):**
 - Tune to your desired station.
 - Press and hold the **PRESET / DIM.** button until "P01" flashes.
 - Use the **▶▶ / HR.** or **◀◀ / MIN.** buttons to select a preset number (P01-P20).
 - Press **PRESET / DIM.** again to save the station.
6. **Recalling Presets:** Briefly press the **PRESET / DIM.** button to cycle through saved stations.

USB Charging

The unit provides two USB ports for charging external devices:

- **USB Type-A Port:** 5V, 1A output.
- **USB Type-C Port:** 5V, 1A output.

Connect your device's USB charging cable (not included) to the appropriate port on the rear of the alarm clock. Charging will begin automatically.

Display Dimmer

Press the **PRESET / DIM.** button repeatedly to adjust the brightness of the LED display to your preference.

Night Light

Press the **NIGHT LIGHT** button to turn the integrated night light on or off.

Snooze Function

When an alarm sounds, press the **SNOOZE / SLEEP** button to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period.

Sleep Timer

While the radio is playing, press the **SNOOZE / SLEEP** button repeatedly to set a sleep timer (e.g., 10, 20, 30, 60, 90 minutes). The radio will automatically turn off after the selected time.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using battery backup, replace batteries annually or when the unit experiences frequent power outages.
- **Storage:** If storing the unit for an extended period, disconnect it from power and remove backup batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty outlet.	Check power adapter connection. Try a different outlet.
No sound from radio.	Volume too low; poor reception.	Increase volume. Adjust unit position for better reception.
Alarm does not sound.	Alarm not set or alarm volume too low.	Verify alarm time and activation. Ensure alarm volume is audible.
USB charging not working.	Cable faulty; device not compatible; unit not powered.	Try a different USB cable. Ensure the alarm clock is powered. Check device compatibility.

SPECIFICATIONS

- **Model:** HX-132CR
- **Power Input:** DC (via AC adapter)
- **Battery Backup:** 2 x AAA batteries (not included)
- **FM Frequency Range:** Standard FM range (e.g., 87.5 - 108 MHz)
- **USB Type-A Output:** 5V, 1A
- **USB Type-C Output:** 5V, 1A
- **Dimensions (W x H x D):** 13.5 cm x 10.8 cm x 6.5 cm (excluding smartwatch holder)
- **Weight:** 260 Grams
- **Material:** Plastic

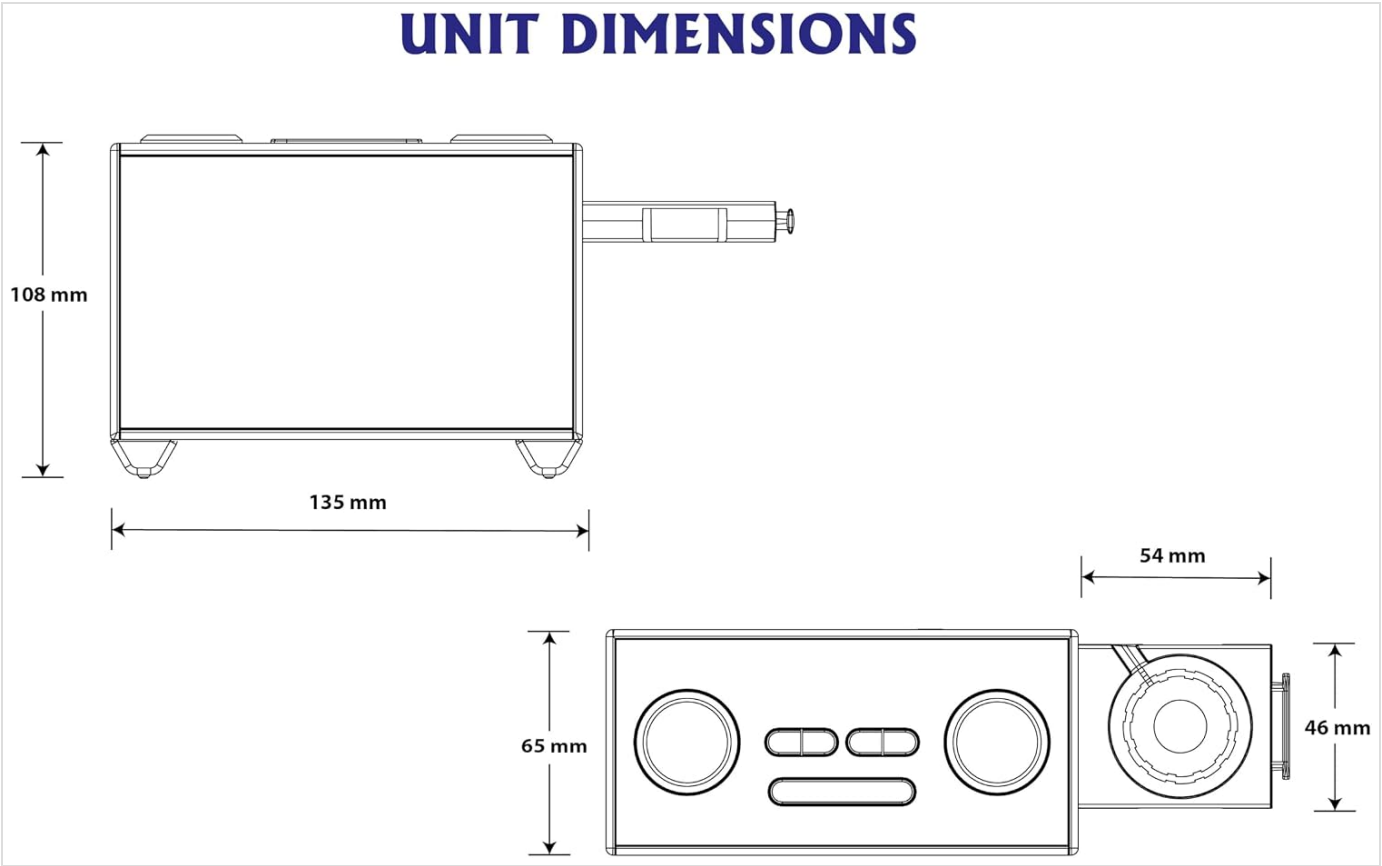


Image: Unit dimensions diagram.

WARRANTY AND SUPPORT

HANNLOMAX products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official HANNLOMAX website. Please retain your proof of purchase for warranty claims.

© 2026 HANNLOMAX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question