

[Manuals.plus](#) /

› [APD APETDOLA](#) /

› Wireless Cat Water Fountain Stainless Steel - User Manual

APD APETDOLA FS10 Pro

Wireless Cat Water Fountain Stainless Steel

Model: FS10 Pro | Brand: APD APETDOLA

PRODUCT OVERVIEW

The APD APETDOLA Wireless Cat Water Fountain (Model FS10 Pro) is a battery-operated, automatic pet fountain designed to provide fresh, filtered water for cats and dogs. Constructed from stainless steel, it offers a 4-liter (135 fl oz) capacity and features a cordless design for flexible placement. The fountain incorporates a multi-layer filtration system and offers various operating modes to encourage hydration.



Image: The APD APETDOLA Wireless Cat Water Fountain, showcasing its stainless steel design, 4-liter capacity, and included filter components.

PACKAGE CONTENTS

Before assembly, ensure all components are present in the package:

- Stainless Steel Water Tray x 1
- Stainless Steel Water Tank x 1
- Master Control Module x 1
- Type-C Cable x 1
- Adapter x 1

- Cleaning Brush x 1
- Filter Tray x 1
- Filter Cotton x 1
- Filter x 4
- User Manual x 1

Packing Accessories

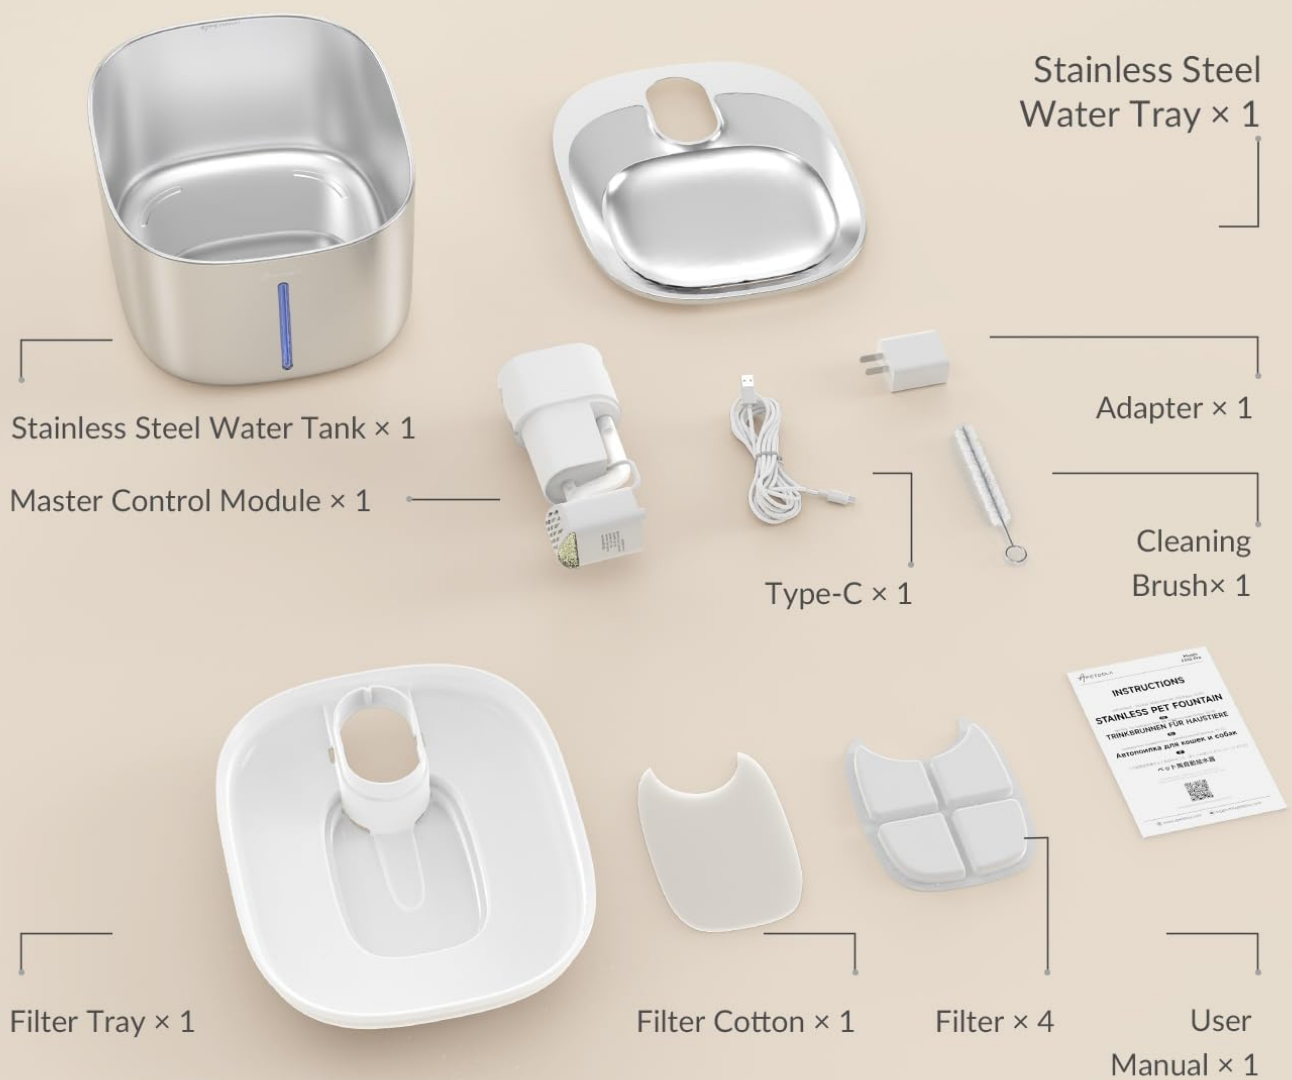


Image: All components of the APD APETDOLA Wireless Cat Water Fountain laid out, including the stainless steel tank, water tray, control module, filters, and cleaning tools.

SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your pet water fountain for use:

1. **Soak the Filter:** Submerge the filter in clean water for approximately 5 minutes before first use. This helps remove any loose carbon dust and prepares the filter for optimal performance.
2. **Fill the Water Tank:** Fill the stainless steel water tank with clean water up to the MAX line indicated on the side. The fountain has a capacity of 4 liters (135 fl oz).
3. **Assemble Components:** Carefully assemble all parts from bottom to top. Place the filter tray into the water tank, then insert the soaked filter. Position the master control module securely.
4. **Place the Water Tray:** Place the stainless steel water tray on top of the assembled unit, ensuring it sits correctly.
5. **Select Operating Mode:** Choose your desired working mode by pressing the button on the master control module. The fountain will then begin operation.

APETDOLA Cordless Pet Fountain Install Easily with 5 Steps



Soak the filter in water for about 5 minutes.



Fill the water tank with clean water.



Assemble all the parts from bottom to top.

Image: A visual representation of the 5-step installation process for the pet water fountain, from soaking the filter to starting operation.

OPERATING MODES

The fountain offers three distinct operating modes to suit your pet's preferences and conserve energy:

- **Sensor Mode:** The water flow automatically activates for 12 seconds when the built-in sensor detects your pet within a range of 4-6 feet and a 120° angle. This mode conserves battery life while encouraging pets to drink.
- **Timed Mode:** In this mode, the fountain dispenses water for 20 seconds every 12 minutes. This provides regular access to fresh water without continuous operation.
- **Continuous Mode:** When the fountain is plugged in via the Type-C cable and adapter, this mode provides a continuous flow of water. This is ideal for constant hydration.

Switch between modes using the single control button on the master module.



Sensor mode:

Water runs auto when cat approaches.



Timed Mode:

Unplugged, save energy by running water every 12 minutes.



Continuous Mode:

Plug in, for pets 24/7 hydration.

Image: A visual explanation of the three sensor modes: Sensor Mode (auto-activates), Timed Mode (runs every 12 minutes), and Continuous Mode (when plugged in).

MAINTENANCE

Regular cleaning and filter replacement are essential for maintaining water quality and the longevity of your fountain.

Cleaning

- **Weekly Cleaning:** It is recommended to clean the pump and the entire automatic cat water dispenser at least once a week.
- **Dishwasher Safe:** The stainless steel components (water tank and water tray) are dishwasher safe, simplifying the cleaning process. The wireless pump design allows for easy disassembly.
- **Avoid Electrical Components:** Ensure no water comes into contact with the battery or other electrical components during cleaning.

Filter Replacement

- **Frequency:** To maintain optimal water quality and your pet's health, it is recommended to change the filters every two weeks.
- **Filter Type:** The fountain utilizes a multi-layer filtration system designed to remove heavy metals, dirt, and other harmful substances.
- **Purchasing Filters:** Official replacement filters can be found by searching for ASIN B0C36JSP76.

Safe Cordless Water Fountains

No need to connect to DC power supply. The components are disassembled and assembled as easy as pie.



Image: The pet water fountain disassembled, illustrating the ease of separating components for thorough cleaning.

TROUBLESHOOTING

If you encounter issues with your pet water fountain, refer to the following common solutions:

- **No Water Flow:**

- Check water level: Ensure the water tank is filled above the MIN line.
- Check battery: If operating wirelessly, ensure the battery is charged. The low battery indicator light will illuminate red.
- Clean pump: A clogged pump can restrict water flow. Disassemble and clean the pump thoroughly.
- Filter obstruction: A dirty or improperly installed filter can impede water flow. Replace the filter if necessary.

- **Excessive Noise:**

- Low water level: Ensure the water level is sufficient to prevent the pump from running dry.
- Pump cleanliness: Debris in the pump can cause noise. Clean the pump.
- Proper assembly: Ensure all components are correctly assembled and seated to prevent vibrations.

- **Indicator Lights:**

- **Red Light:** Indicates low battery. Recharge the fountain using the provided Type-C cable and adapter.
- **Flashing Light:** A flashing light (typically green or blue, depending on model) may indicate a filter replacement reminder. Long press the on/off button to turn it off after replacing the filter.

User-friendly Indicator Lights

You will know when recharge and filter changes are needed with a simple glance

Low Battery Reminder

Filter Replacement Reminder

Note: Light flashes to remind to replace filter once a month, long press the on/off-key to turn it off.





Image: A detailed view of the fountain's control panel, highlighting the indicator lights for low battery and filter replacement reminders.

SPECIFICATIONS

Feature	Detail
Model Name	FS10 Pro
Capacity	4 Liters (135 Fluid Ounces)
Material	Stainless Steel, ABS, PP
Power Source	Cordless & Coded Electric (Battery Operated)
Battery	1 Lithium Ion battery (included), 4000mAh capacity
Battery Life	Up to 60-100 days on a single charge (wireless mode)
Filtration System	6-Layer Circulating Filtration (KDF, Activated Carbon, Ionic Resin, Maifan Stone, Tourmaline, Acupuncture Cotton)
Noise Level	Approximately 25dB
Dimensions (LxWxH)	10.63 x 9.06 x 5.91 inches (10"L x 8.5"W x 5"H)
Item Weight	3.27 pounds
Target Audience	Cats, Dogs, Pets (All Life Stages, All Breed Sizes)
Specific Uses	Indoor, Outdoor

Large 135 fl oz/4L capacity

  Water content ensures thirst is always quenched.

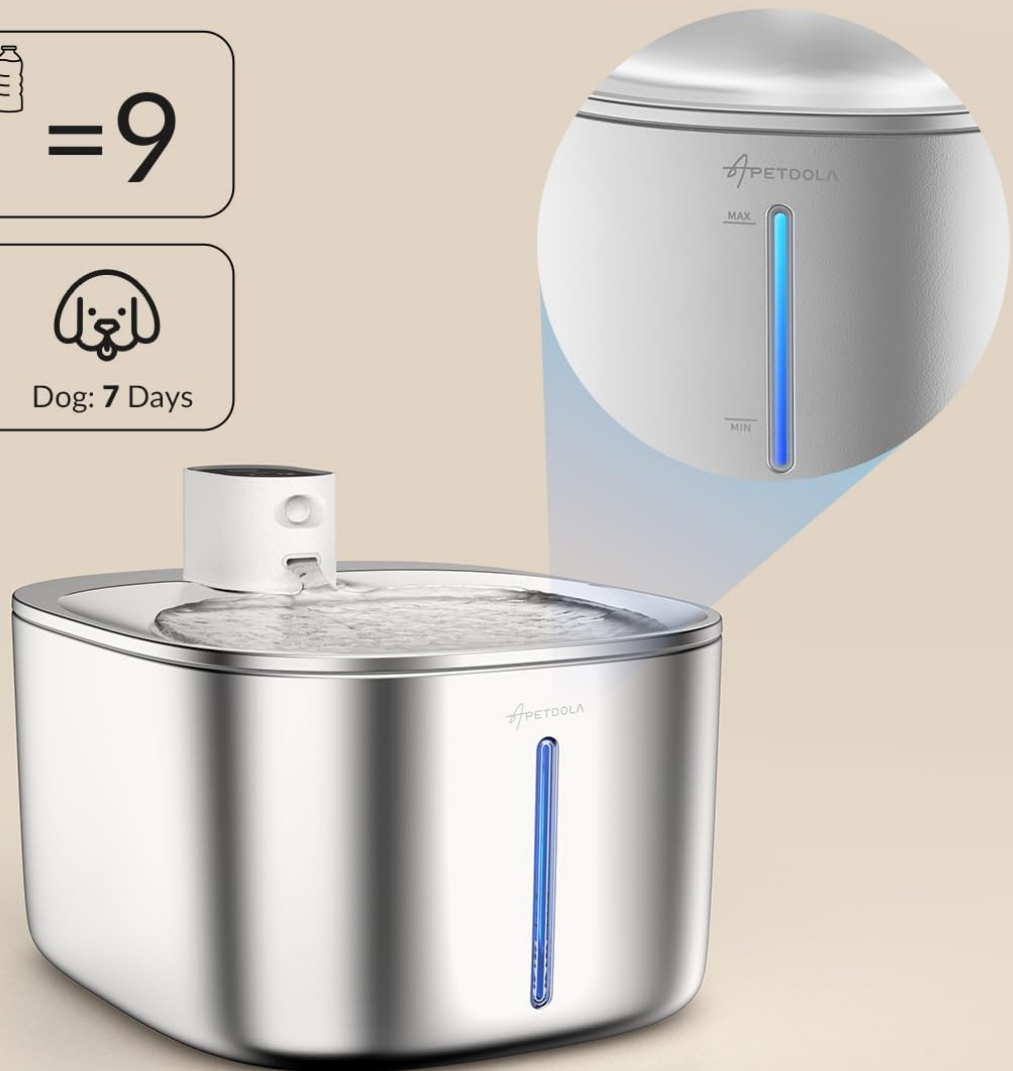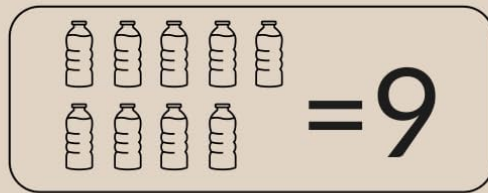

The water level window can clearly see how much water is left through

Image: The pet water fountain highlighting its 135 fl oz (4L) capacity, sufficient for extended use by cats or dogs.

WARRANTY AND SUPPORT

The APD APETDOLA Wireless Cat Water Fountain (Model FS10 Pro) comes with a warranty period of 18 months from the date of purchase.

For technical support, warranty claims, or any inquiries regarding your product, please contact APD APETDOLA customer service. Refer to the contact information provided in your product packaging or visit the official APD APETDOLA website for assistance.

Manufacturer: APD APETDOLA

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question