

[manuals.plus](#) /

› [Itel](#) /

› [itel PAD ONE 10.1-inch Tablet User Manual](#)

Itel P10001L

itel PAD ONE 10.1-inch Tablet User Manual

Model: P10001L

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your itel PAD ONE 10.1-inch tablet. Please read this guide thoroughly to ensure proper usage and to maximize your device's performance and longevity.

2. WHAT'S IN THE Box

Upon unboxing your itel PAD ONE tablet, verify that all the following items are included:

- itel PAD ONE Tablet
- Charger
- USB Cable
- Plastic Case
- SIM Ejector Pin
- Protective Film

Your browser does not support the video tag.

Video: Unboxing and feature highlights of the itel PAD ONE tablet.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your itel PAD ONE tablet.



Image: Front view of the itel PAD ONE tablet, showcasing the 10.1-inch display and front camera.



Image: Back view of the itel PAD ONE tablet, highlighting the rear camera module and itel branding.

 


Image: Side view of the itel PAD ONE tablet, illustrating its slim profile and button placement.

Key Components:

- **Display:** 10.1-inch HD+ IPS screen.
- **Front Camera:** Located above the display.
- **Rear Camera:** Located on the back panel, includes flash.
- **Power Button:** Typically on the side, used to power on/off or wake/sleep the device.
- **Volume Buttons:** Located near the power button, for adjusting audio levels.
- **USB-C Port:** For charging and data transfer.
- **Speaker Grilles:** Dual stereo speakers for enhanced audio.
- **SIM/SD Card Slot:** For inserting SIM cards for 4G connectivity and microSD cards for expandable storage.

4. INITIAL SETUP

1. **Charge the Tablet:** Connect the provided USB cable to the tablet's USB-C port and the charger. Plug the charger into a power outlet. Allow the tablet to charge fully before first use.

- 2. Insert SIM/SD Card (Optional):** Use the SIM ejector pin to open the SIM/SD card tray. Carefully place your 4G VoLTE SIM card and/or microSD card into the designated slots. Ensure correct orientation and reinsert the tray.
- 3. Power On:** Press and hold the Power button until the itel logo appears on the screen.
- 4. Initial Configuration:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
- 5. Google Kids Space:** If setting up for a child, you can configure Google Kids Space during the initial setup or later through the settings.

5. BASIC OPERATION

Navigation:

- **Touch:** Tap icons to open apps or select items.
- **Swipe:** Move your finger across the screen to scroll, switch between home screens, or navigate within apps.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on images, maps, or web pages.
- **Long Press:** Press and hold an item for additional options or to move it.

Status Bar and Notifications:

The status bar at the top of the screen displays important information such as time, battery level, Wi-Fi signal, and notification icons. Swipe down from the top of the screen to access the notification panel and quick settings.

6. CONNECTIVITY

Wi-Fi:

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if required.

4G VoLTE Calling:

The itel PAD ONE supports 4G VoLTE calling. Ensure a compatible SIM card is inserted and activated. You can make and receive calls directly from your tablet.

Bluetooth:

To pair with a Bluetooth device:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Select **Pair new device** and choose your device from the available list.

7. CAMERA USAGE

Your itel PAD ONE tablet is equipped with an 8MP wide-angle front camera and a 5MP rear camera with flash.

- 1. Open Camera App:** Tap the Camera icon on your home screen or app drawer.
- 2. Switch Cameras:** Tap the camera switch icon to toggle between the front and rear cameras.
- 3. Take Photos:** Tap the Shutter button to capture a photo.
- 4. Record Videos:** Switch to video mode and tap the Record button to start/stop recording.
- 5. Flash:** For the rear camera, tap the flash icon to enable/disable or set to auto.

8. GOOGLE KIDS SPACE

Google Kids Space offers a safe and engaging environment for children to explore apps, books, and videos. It requires a Google account for your child and can be managed by parents through Family Link.

- 1. Access Kids Space:** During initial setup, you can choose to set up Google Kids Space. If skipped, you can find the Kids Space icon in your app drawer.
- 2. Parental Controls:** Use the Google Family Link app on your own device to manage screen time, app approvals, and content filters for your child's Kids Space profile.

9. MAINTENANCE AND CARE

- Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive cleaners or solvents.
- Battery Life:** To optimize battery life, reduce screen brightness, close unused apps, and disable Wi-Fi/Bluetooth when not in use.
- Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to **Settings > System > System update**.
- Storage Management:** Periodically clear cache, uninstall unused apps, and transfer large files to external storage to free up internal memory.
- Environmental Conditions:** Avoid exposing the tablet to extreme temperatures, direct sunlight, or excessive moisture.

10. TROUBLESHOOTING

Common Issues and Solutions:

- Tablet not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- Screen unresponsive:** Try restarting the tablet by holding the Power button for about 10-15 seconds.
- Apps crashing or freezing:** Close the problematic app and reopen it. If the issue persists, clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache) or uninstall and reinstall the app.
- Poor Wi-Fi connection:** Ensure you are within range of the Wi-Fi router. Restart your router and the tablet. Forget the network and reconnect.
- Slow performance:** Close background apps, clear unnecessary files, and ensure sufficient free storage. Consider a factory reset as a last resort (back up your data first).

If you encounter issues not covered here, please refer to the support section or contact customer service.

11. SPECIFICATIONS

Feature	Detail
Model Name	Pad One (P10001L)
Display	10.1 Inches HD+ IPS (1280 x 800 pixels)
Processor	Octa-Core Unisoc (up to 1.6 GHz)
RAM	4 GB
Internal Storage	128 GB (Expandable up to 512GB)
Operating System	Android 12 Go
Rear Camera	5 MP with Flash
Front Camera	8 MP Wide Angle
Battery	6000 mAh (22.7 Watt Hours)
Connectivity	4G VoLTE, Wi-Fi (802.11b/g/n), Bluetooth
Audio	Dual Stereo Speakers
Dimensions (LxWxH)	24.1 x 16 x 0.8 cm
Weight	523 g

Your browser does not support the video tag.

Video: Overview of itel PAD ONE technical specifications and features.

12. WARRANTY AND SUPPORT

The itel PAD ONE tablet comes with a 1-year warranty. For warranty claims, technical support, or further assistance, please contact Itel customer service or visit the official Itel store.

For more information, visit the [Itel Store on Amazon.in](#).

Related Documents - P10001L

<p>A665L User Manual</p>	<p><u>itel A665L User Manual</u></p> <p>User manual for the itel A665L smartphone, covering device overview, parts identification, SIM/SD card installation, charging, and FCC compliance information.</p>
	<p><u>itel T1 Neo True Wireless Earbuds User Manual</u></p> <p>User manual for the itel T1 Neo True Wireless Half In-Ear Earbuds, covering features, operation, charging, and safety information.</p>
<p>Vision 3 User Manual</p>	<p><u>Vision 3 Smartphone User Manual - Features, Installation, and Safety Information</u></p> <p>Comprehensive user manual for the Vision 3 smartphone, covering installation, charging, FCC compliance, and SAR information. Learn about your device's features and specifications.</p>
<p>A667L User Manual</p>	<p><u>itel A667L User Manual: Features, Installation, and Safety Information</u></p> <p>Comprehensive user manual for the itel A667L smartphone, covering exploded diagram specifications, phone layout, SIM/SD card installation, charging instructions, FCC compliance, and SAR information.</p>
<p>A50 User Manual</p>	<p><u>itel A50 User Manual and Exploded Diagram</u></p> <p>Comprehensive user manual for the itel A50 smartphone, including an exploded diagram, component identification, and setup instructions. Covers SIM card installation, charging, and FCC compliance information.</p>

[**Itel IKP-31 User Manual**](#)

User manual for the Itel IKP-31 mobile device, covering its specifications, parts, and basic operations.