

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gugxiom](#) /
- › [Gugxiom Portable MP3 Music Player User Manual](#)

Gugxiom Gugxiomxcgaydve39-13

Gugxiom Portable MP3 Music Player User Manual

Model: Gugxiomxcgaydve39-13

Brand: Gugxiom

1. INTRODUCTION

Thank you for choosing the Gugxiom Portable MP3 Music Player. This compact and stylish device is designed to provide high-quality audio playback on the go. Featuring a slim 1.8-inch LCD screen, it supports a wide range of audio formats including MP3, WMA, FLAC, APE, AAC, OGG, and ACELP, ensuring a versatile listening experience. Its durable aluminum alloy construction makes it an ideal companion for daily use.

This manual provides detailed instructions on how to set up, operate, and maintain your MP3 player, along with troubleshooting tips and product specifications.



Image: The Gugxiom Portable MP3 Music Player in blue, shown with its included wired earphones and USB charging cable.

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Gugxiom Portable MP3 Music Player
- USB Charging Cable
- Earphones

3. SETUP

3.1. Charging the Device

Before first use, fully charge your MP3 player. The battery takes approximately 2 hours to fully charge and provides up to 8 hours of continuous playback.

1. Connect the small end of the USB charging cable to the charging port on the MP3 player.
2. Connect the standard USB end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The screen will indicate charging status. Disconnect the cable once charging is complete.

Long lasting battery

Battery takes about 2 hours to fully charge

Up to 8 hours of use on a full charge



Image: The MP3 player displayed alongside a graphic of a fully charged battery, illustrating its long-lasting battery capability.

3.2. Inserting a Memory Card

The MP3 player supports external memory cards up to 64GB (card not included). A memory card is required to store and play music files.

1. Locate the memory card slot on the side of the MP3 player.
2. Gently insert a compatible memory card (e.g., microSD) into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card further in until it springs out.

Large memory

Supports up to 64G memory capacity,
(note: card not included)
Original for MYMAHDI memory card
recommended



Image: The MP3 player shown with text highlighting its support for large memory capacities up to 64GB via an external card.

3.3. Transferring Music Files

Music files can be transferred from your computer to the MP3 player via the USB cable.

1. Connect the MP3 player to your computer using the provided USB cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, FLAC, APE, AAC, OGG, ACELP) into the player's storage or the inserted memory card.
4. Safely eject the device from your computer before disconnecting the USB cable.

4. OPERATING THE DEVICE

4.1. Controls Overview

The MP3 player features intuitive controls for easy navigation and playback.

1.8IN SCREEN MP3 PLAYERS

INTRODUCTION:



Image: A diagram illustrating the button layout and functions on the MP3 player, including Play/Pause, Menu, Volume, and track navigation.

- **MENU Button:** Access the main menu or go back to the previous screen.
- **Play/Pause Button (Center):** Start or pause playback.
- **Previous/Backward Button (Left):** Short press for previous track, long press for fast rewind.
- **Next/Forward Button (Right):** Short press for next track, long press for fast forward.
- **VOL (Volume) Buttons (Up/Down):** Adjust the playback volume.

4.2. Power On/Off

To power on the device, press and hold the Play/Pause button until the screen lights up. To power off, press and hold the Play/Pause button again until the screen turns off.

4.3. Playing Music

1. From the main menu, navigate to the 'Music' option and press the Play/Pause button to select.
2. Browse through your music library, artists, albums, or playlists.
3. Select a song and press the Play/Pause button to begin playback.
4. Use the Previous/Next buttons to skip tracks and the VOL buttons to adjust volume.

4.4. Supported Audio Formats

The player supports a variety of lossless and compressed audio formats for high-quality sound:

- MP3
- WMA
- FLAC
- APE
- AAC
- OGG
- ACELP



Lossless sound quality

Supports MP3, WMA, FLAC, APE, AAC, OGG and ACELP

Image: The MP3 player displayed with a graphic emphasizing its lossless sound quality and listing the various supported audio formats.

Note: This MP3 player does not support Bluetooth functionality.

5. MAINTENANCE

5.1. Cleaning

To keep your MP3 player in optimal condition:

- Wipe the device with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture into openings.

5.2. Storage

When not in use, store the MP3 player in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your MP3 player, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device won't turn on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, try a soft reset by holding the power button for 10-15 seconds.
Cannot transfer files to the device.	Incorrect USB connection; full memory; driver issue.	Ensure the USB cable is securely connected. Check available storage space. Try a different USB port or computer.
No sound from earphones.	Volume too low; faulty earphones; incorrect audio file.	Increase volume. Test with another pair of earphones. Ensure the audio file is not corrupted and is a supported format.
Screen is unresponsive or frozen.	Software glitch.	Perform a soft reset by holding the power button until the device restarts.
Memory card not detected.	Card not inserted correctly; incompatible card; faulty card.	Reinsert the memory card, ensuring it clicks into place. Try a different, compatible memory card. Ensure the card is formatted correctly.

7. SPECIFICATIONS

Feature	Detail
Model Number	Gugxiomxcgaydve39-13
Screen Size	1.8 Inches LCD
Memory Storage Capacity	Supports up to 64 GB (external memory card, not included)
Connectivity Technology	USB
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Battery Life	Up to 8 hours playback (fully charged)
Charging Time	Approximately 2 hours
Item Weight	2.89 ounces
Package Dimensions	6.5 x 3.15 x 0.94 inches
Material	Premium Aluminum Alloy
Special Features	Equalizer, Hi-Res Audio

8. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent personal injury or equipment damage:



1 Warning

Do not attempt to disassemble, modify or repair the product yourself to avoid personal injury or equipment damage.

2 Warnung

Versuchen Sie nicht, das Produkt selbst zu zerlegen, zu modifizieren oder zu reparieren, da dies zu Verletzungen oder Geräteschäden führen kann.

3 Avertissement

N'essayez pas de démonter, de modifier ou de réparer le produit vous-même, car vous risqueriez de vous blesser ou d'endommager l'équipement.

4 Advertencia

No intente desmontar, modificar o reparar el producto usted mismo para evitar lesiones personales o daños en el equipo.

5 Ostrzeżenie

Nie próbuj rozkładać, modyfikować ani naprawiać produktu samodzielnie, aby uniknąć urazu osobistego lub uszkodzenia sprzętu.

6 Waarschuwing

Probeer het product niet zelf te demonteren, aan te passen of te repareren, want dit kan leiden tot letsel of schade aan het apparaat.

7 Varning

Försök inte att demontera, modifiera eller reparera produkten själv, eftersom det kan leda till personskador eller skador på apparaten.

8 Attenzione

Non tentare di smontare, modificare o riparare autonomamente il prodotto per evitare lesioni personali o danni all'apparecchiatura.

9 Uyarı

Kendiniz ürünü sökmeye, değiştirmeye veya tamir etmeye kalkışmayın, kişisel yaralanma veya ekipman hasarı oluşabilir.

Image: A warning graphic with an exclamation mark, stating: "Do not attempt to disassemble, modify or repair the product yourself to avoid personal injury or equipment damage."

- Do not attempt to disassemble, modify, or repair the product yourself. This can lead to personal injury or equipment damage and will void any warranty.
- Keep the device away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charging cable.
- Do not expose the battery to excessive heat, such as direct sunlight or fire.

