

Whirlpool FFWDD1174269SBV

Whirlpool FFWDD 1174269 SBV SPT Washing Machine User Manual

Model: FFWDD1174269SBV

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool FFWDD 1174269 SBV SPT Washing Machine. Please read these instructions carefully before using the appliance and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.
- Do not operate any appliance with a damaged cord or plug.

SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

Unpacking and Transit Bolt Removal

Before first use, it is essential to remove all transit bolts from the rear of the appliance. These bolts secure the drum during transport and must be removed to prevent excessive vibration and damage during operation.

1. Carefully remove all packaging materials.
2. Locate the four transit bolts at the rear of the washing machine.

3. Using an appropriate wrench, loosen and remove each bolt.
4. Keep the transit bolts for future transport of the appliance.

Placement and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet at the bottom of the appliance to ensure it is stable and does not wobble.

Water and Power Connections

- Connect the water inlet hose to a cold water tap and to the corresponding inlet valve on the back of the machine. Ensure connections are tight to prevent leaks.
- Position the drain hose into a suitable standpipe or sink, ensuring it is securely fixed to prevent displacement during drainage.
- Plug the power cord into a grounded electrical outlet.



Image: Front view of the Whirlpool FFWD 1174269 SBV SPT Washing Machine. It is silver with a large black door for the drum and a control panel at the top. The control panel features a central dial, a digital display, and various buttons.

OPERATING INSTRUCTIONS

This section guides you through the daily use of your washing machine.

Control Panel Overview

The control panel features a program selector dial, a digital display, and various function buttons for cycle options and settings.

Loading Laundry

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload. The capacity is 7 kg.
- Close the door firmly.

Detergent Dispenser

Your washing machine is equipped with a dual-compartment detergent dispenser.

1. Pull out the detergent dispenser drawer.
2. Add appropriate detergent to the main wash compartment.
3. Add fabric softener or other additives to the designated compartment.
4. Push the dispenser drawer back in completely.

Selecting a Wash Cycle

Turn the program selector dial to choose your desired wash cycle. Available cycle options include:

- **Quick Wash:** For lightly soiled items or when time is limited.
- **Rinse:** For rinsing items without a full wash cycle.
- **Spin:** For draining water and spinning laundry.
- Other cycles may be available depending on the model.

Starting a Wash Cycle

After selecting the cycle and adding detergent, press the Start/Pause button to begin the wash cycle. The display will show the remaining time.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your appliance.

Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean and free of odors.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

TROUBLESHOOTING

Before contacting service, refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|--|---|--|
| Machine does not start. | Power cord not plugged in; door not closed properly; no water supply. | Check power connection; ensure door is latched; check water taps. |
| Excessive vibration during spin cycle. | Transit bolts not removed; machine not level; uneven load. | Ensure all transit bolts are removed; adjust leveling feet; redistribute laundry. |
| Water not draining. | Drain hose kinked or blocked; pump filter clogged. | Check drain hose for kinks; clean pump filter (refer to full manual for location). |
| Detergent residue in dispenser. | Insufficient water pressure; dispenser clogged. | Check water supply pressure; clean dispenser drawer. |

SPECIFICATIONS

Key technical specifications for the Whirlpool FFWDD 1174269 SBV SPT Washing Machine:

- **Model:** FFWDD1174269SBV
- **Capacity:** 7 Kilograms
- **Colour:** Silver
- **Drum Material:** Stainless Steel
- **Product Dimensions:** 1 x 1 x 1 cm; 60 kg (Note: These dimensions appear to be placeholder/incorrect from source data, actual dimensions would be larger for a washing machine)
- **Item Weight:** 60 kg
- **Voltage:** 2.3E+2 Volts
- **Access Location:** Front Load
- **Controls Type:** Push Button
- **Special Features:** Quick Wash, Dual-compartment detergent dispenser
- **Included Components:** Power Cord, Water Hose
- **Number of Washing Cycles:** 3 (Quick Wash, Rinse, Spin)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your appliance or visit the official Whirlpool website. You can also contact Whirlpool customer service for assistance.

Official Whirlpool Website: www.whirlpool.co.uk