

## AEG FSB64907Z

# AEG FSB64907Z Integrated Dishwasher User Manual

Model: FSB64907Z

[Safety Information](#)   [Setup](#)   [Operating Instructions](#)   [Maintenance](#)   [Troubleshooting](#)  
[Specifications](#)   [Warranty & Support](#)

## 1. IMPORTANT SAFETY INFORMATION

---

Read this manual carefully before installing and using the appliance. The manufacturer is not responsible for any injuries or damages resulting from incorrect installation or usage. Always keep this manual with the appliance for future reference.

### General Safety

- This appliance is intended for household use only.
- Do not install or use a damaged appliance.
- Follow the installation instructions provided with the appliance.
- Always be careful when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Ensure the appliance is properly earthed.
- Do not use high-pressure water jets to clean the appliance.
- Keep detergents and rinse aid out of reach of children.
- Ensure the appliance is disconnected from the power supply before any maintenance.

## 2. SETUP AND INSTALLATION

---

### Unpacking

Carefully remove all packaging materials. Check the appliance for any transport damage. If damaged, do not install or use it, and contact your supplier.

## Positioning and Installation

The AEG FSB64907Z is an integrated dishwasher designed to be built into kitchen cabinetry. The front panel is not included and must be supplied separately to match your kitchen design.



Image: The AEG FSB64907Z integrated dishwasher shown installed within kitchen cabinetry, demonstrating its seamless integration. The door is slightly open, revealing the interior.



Image: An integrated dishwasher in a kitchen setting. A text overlay clarifies that the product is integrated and the decorative front panel is not supplied, requiring a custom panel to match kitchen aesthetics.

Ensure the appliance is level and stable. Connect the water inlet and outlet hoses according to local plumbing regulations. The electrical connection must comply with local safety standards. Refer to the detailed installation guide provided with the appliance for specific measurements and connection points.

## First Use

Before the first wash cycle, ensure the salt dispenser is filled with dishwasher salt and the rinse aid dispenser is filled with rinse aid. Run an empty cycle to clean the interior of the appliance.

## 3. OPERATING INSTRUCTIONS

---

### Control Panel Overview

The AEG FSB64907Z features a touch control panel for easy program selection and monitoring. The Ecometer guides you to the most suitable program for reducing energy and water consumption.



## LAVADO EFICIENTE DE LA VAJILLA

Ecometer te orienta sobre el programa más adecuado para reducir el consumo de energía y agua.

Image: A user's hand adjusting settings on the dishwasher's control panel. The digital display clearly shows the "Ecometer" feature, which helps optimize wash cycles for energy and water efficiency.

### Loading the Dishwasher

Load dishes carefully to ensure optimal cleaning and drying. Scrape off large food particles before loading. The MaxiFlex cutlery drawer provides flexible storage for various utensils, including larger items.



## CAJÓN DE CUBERTERÍA MAXIFLEX

El cajón permite almacenar de manera práctica cubiertos de todos los tamaños, incluso utensilios más grandes o de formas menos habituales.

Image: A detailed view of the dishwasher's top rack, featuring the MaxiFlex cutlery drawer. The drawer is organized with various cutlery and larger kitchen tools, demonstrating its versatile loading capacity.

### Program Selection

The dishwasher offers 7 programs and 3 temperature settings to suit different washing needs. Select the appropriate program based on the type and soil level of your dishes.

- **Intensive:** For heavily soiled dishes.
- **AutoSense:** Automatically adjusts cycle based on soil level.
- **Eco:** Energy and water efficient program for normal soil.
- **GlassCare:** Gentle program for delicate glassware.
- **Quick:** For lightly soiled dishes requiring a fast wash.
- **Rinse & Hold:** For rinsing dishes that will be washed later.
- **Machine Care:** Program for cleaning the dishwasher itself.

### AirDry Technology

The AirDry technology automatically opens the dishwasher door by 10 cm during the drying phase. This allows natural air to

circulate, improving drying results and reducing energy consumption.



Image: A split image demonstrating the effectiveness of AirDry technology. One side shows dishes still wet ("SIN AIRDRY"), while the other shows perfectly dry dishes ("CON AIRDRY"), illustrating the benefit of automatic door opening for natural drying.

## 4. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and longevity of your dishwasher.

### Cleaning the Filters

The filter system should be checked and cleaned regularly to prevent food particles from clogging the spray arms and affecting wash performance.



Image: A user's hands cleaning the dishwasher's filter components under running water in a kitchen sink, demonstrating the simple process of removing and rinsing the filter to maintain hygiene and performance.

## Cleaning the Spray Arms

Periodically check the spray arm nozzles for blockages. Remove the spray arms and rinse them under running water if necessary.



Image: An interior shot of the dishwasher tub, highlighting the lower spray arm and the filter assembly at the bottom. This view is useful for understanding where to check for blockages and perform routine cleaning.

## Adding Salt and Rinse Aid

Monitor the salt and rinse aid indicators on the control panel. Refill as needed to ensure optimal washing and drying results and to prevent limescale buildup.

## 5. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start.	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean.	Incorrect loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, use appropriate detergent.
Water not draining.	Clogged filter, kinked drain hose, blocked drain pump.	Clean the filter, check drain hose for kinks, consult manual for drain pump access.
Excessive noise during operation.	Dishes interfering with spray arms, foreign object in pump, improper installation.	Rearrange dishes, check for foreign objects, ensure appliance is level.
Dishes are not dry.	Insufficient rinse aid, AirDry feature disabled, incorrect program.	Refill rinse aid, ensure AirDry is active, select a program with drying phase.

## 6. TECHNICAL SPECIFICATIONS

Key technical data for the AEG FSB64907Z Integrated Dishwasher:



Image: A detailed product information sheet displaying various technical specifications and performance metrics for the dishwasher, including energy consumption and water usage.

Ficha de información del producto				
<b>Nombre o marca comercial del proveedor:</b>		AEG		
<b>Dirección del proveedor:</b>		Electrolux - 26 al. Powstancow Slaskich 30-570 - Krakow - PL		
<b>Identificador del modelo:</b>		FSB64907Z 911536563		
<b>Parámetros generales del producto:</b>				
Parámetro	Valor	Parámetro	Valor	
Capacidad asignada <sup>(b)</sup> (ps)	14	Dimensiones en cm	Altura	82
			Anchura	60
			Profundidad	55
EEl <sup>(b)</sup>	43,9	Clase de eficiencia energética <sup>(b)</sup>	C <sup>(d)</sup>	
Índice de rendimiento de lavado <sup>(b)</sup>	1,121	Índice de rendimiento de secado <sup>(b)</sup>	1,061	
Consumo de energía en kWh [por ciclo], sobre la base del programa «eco» utilizando una carga con agua fría. El consumo real de energía dependerá de cómo se utilice el aparato.	0,746	Consumo de agua en litros [por ciclo], sobre la base del programa «eco». El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	10,5	
Duración del programa <sup>(b)</sup> (h: min)	4:00	Tipo	Built-In	
Ruido acústico aéreo emitido <sup>(b)</sup> [dB(A) re 1pW]	44	Clase de ruido acústico aéreo emitido <sup>(b)</sup>	B <sup>(d)</sup>	
Modo apagado (W) (en su caso)	0,50	Modo preparado (W) (en su caso)	0,50	
Inicio aplazado (W) (en su caso)	4,00	Modo preparado en red (W) (en su caso)	-	
<b>Duración mínima de la garantía ofrecida por el proveedor:</b>			0 meses	
<b>Información adicional:</b>				
Enlace al sitio web del proveedor en el que se encuentra la información a la que se refiere el punto 6 del anexo II del Reglamento (UE) 2019/2022 de la Comisión: <a href="https://support.electroluxgroup.eu/external/PISlink/Products/911536563">https://support.electroluxgroup.eu/external/PISlink/Products/911536563</a>				
<small><sup>(a)</sup> this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU) 2017/1369.</small>				
<small><sup>(b)</sup> para el programa «eco».</small>				
<small><sup>(c)</sup> changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.</small>				
<small><sup>(d)</sup> if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.</small>				

Image: The energy efficiency label for the AEG FSB64907Z dishwasher, indicating its Class C energy rating, 75 kWh/100 cycles energy consumption, 14 place settings capacity, 10.5 liters water consumption per cycle, 4:00 hour program duration, and 44 dB noise level.

Specification	Value
Model Number	FSB64907Z
Capacity	14 Place Settings
Energy Efficiency Class	C
Noise Level	44 dB(A)
Water Consumption per Cycle	10.5 Liters
Energy Consumption per 100 Cycles	75 kWh
Number of Programs	7
Dimensions (H x W x D)	81.8 x 59.6 x 55 cm (approx.)

Specification	Value
Voltage	230 Volts
Material	Stainless Steel

## 7. WARRANTY AND SUPPORT

---

This appliance comes with a user manual included in the box. For detailed warranty information, please refer to the warranty card provided with your purchase or contact your local AEG service center. Warranty terms may vary by region.

For technical assistance, spare parts, or service requests, please visit the official AEG website or contact their customer support. When contacting support, please have your model number (FSB64907Z) and serial number ready.

You can find more information and support resources on the official AEG website: [www.aeg.com](http://www.aeg.com)