

[Manuals.plus](#) /

> [UltraPro](#) /

> [UltraPro 4-Device Replacement Remote for LG Instruction Manual](#)

UltraPro 67209

UltraPro 4-Device Replacement Remote for LG

Model: 67209

Brand: UltraPro

[Instructions](#) [Introduction](#) [Features](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

The UltraPro 4-Device Universal Replacement LG Remote is designed to provide comprehensive control over your LG TV and up to three additional audio/video components. This remote serves as a direct replacement for original LG TV remotes, offering preprogrammed functionality for LG TVs and Roku boxes, along with universal compatibility for thousands of other devices. It integrates essential LG-specific functions, advanced DVR controls, and simple menu navigation to enhance your home entertainment experience.





Figure 1: Front and side view of the UltraPro 4-Device Replacement Remote.

2. KEY FEATURES

- **Multi-Device Control:** Capable of operating up to four audio and video components, including TVs, Blu-ray/DVD players, cable/satellite receivers, Roku boxes, other streaming media players, and soundbars.
- **LG Replacement TV Remote:** Features a preprogrammed TV device button and specific LG function keys for immediate use with LG TVs.

- **Simple Setup:** Supports automatic code search and direct code entry programming methods. Includes master volume control for consistent volume adjustment across devices. The STRM button is preprogrammed for Roku boxes.
- **Extensive Code Library:** Compatible with all major brands and supports thousands of the latest audio and video devices. *Note: Not compatible with radio frequency devices such as Roku Streaming Sticks and Amazon Fire TV/Sticks.*
- **Enhanced Functionality:** Includes a DVD/Blu-ray player open/close button, advanced DVR functions, simple menu navigation, and a dot button for direct sub-channel access.



PREPROGRAMMED FOR LG TVs

Regain control of your LG TV with the UltraPro
4-Device Universal Replacement LG TV Remote

Also works as a universal remote for ALL MAJOR BRANDS

Figure 2: The remote is preprogrammed for LG TVs and functions as a universal remote for other major brands.

4 DEVICE

Control your TV and up to three other devices





+







All brand names and products listed/shown are trademarks or registered trademarks of their respective owners.

Remote can be programmed to operate any compatible AV device

Figure 3: This remote can control your TV and up to three additional devices, such as soundbars, streaming players, and Blu-ray/DVD players.

3. SETUP GUIDE

3.1. Battery Installation

Before using the remote, install two AAA batteries (not included). Ensure correct polarity (+/-) as indicated inside the battery compartment.

1. Open the battery compartment cover on the back of the remote.
2. Insert two new AAA batteries, matching the positive (+) and negative (-) terminals with the markings in the compartment.
3. Close the battery compartment cover securely.

3.2. Programming Your Remote

The remote is preprogrammed for LG TVs. For other devices, use one of the following programming methods:

3.2.1. Automatic Code Search

This method scans through codes to find the correct one for your device.

1. Turn on the device you wish to program (e.g., Blu-ray player).
2. Press and hold the desired device button (e.g., **B-RAY**) until the indicator light turns on.
3. While holding the device button, press and release the **POWER** button. The indicator light will blink.
4. Point the remote at the device and repeatedly press the **POWER** button until the device turns off.
5. Once the device turns off, immediately press the **OK** button to save the code. The indicator light will turn off.
6. Test the remote's functions with the device. If some functions do not work, repeat the process to find a better code.

3.2.2. Direct Code Entry

This method requires you to look up the specific code for your device brand (refer to the manufacturer's website or included code list, if any).

1. Turn on the device you wish to program.
2. Press and hold the desired device button (e.g., **AUD**) until the indicator light turns on.
3. Enter the 4-digit code for your device brand using the number buttons.
4. If the code is valid, the indicator light will turn off. If it blinks and stays on, the code is invalid; re-enter the correct code.
5. Test the remote's functions with the device. If some functions do not work, try another code from the list for your brand.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your UltraPro 4-Device Replacement Remote.



Figure 4: Overview of remote control buttons and their primary functions.



Figure 5: Detailed view of specific button functions including TV, STRM, B-RAY, AUD, and LG-specific keys.

4.1. Device Selection Buttons

- **TV:** Selects the TV mode. Preprogrammed for LG TVs.
- **STRM:** Selects the streaming device mode. Preprogrammed for Roku boxes.
- **B-RAY:** Selects the Blu-ray/DVD player mode. Programmable.
- **AUD:** Selects the audio device mode (e.g., soundbar, receiver). Programmable.

4.2. General Control Buttons

- **POWER ():** Turns the selected device on or off.
- **INPUT:** Cycles through video inputs on your TV or selected device.
- **Number Pad (0-9):** Used for direct channel entry and code programming.
- **VOL (+/-):** Adjusts the volume. Master volume control allows this to work across devices.

- **MUTE** (): Mutes or unmutes the audio.
- **CH** (▲/▼): Changes channels up or down.
- **RATIO**: Adjusts the aspect ratio of the display (functionality may vary by device).
- **DOT** (.): Used for direct sub-channel access (e.g., 7.1).

4.3. Navigation and Menu Buttons

- **MENU**: Opens the main menu of the selected device.
- **HOME**: Returns to the home screen (LG-specific function).
- **Q.MENU**: Opens the quick menu (LG-specific function).
- **Directional Pad** (◀ ▲ ▼ ▶): Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **BACK**: Returns to the previous screen or menu.
- **GUIDE**: Displays the program guide.
- **EXIT**: Exits the current menu or application.

4.4. Advanced and Special Function Buttons

- **Colored Buttons (A, B, C, D)**: Provide access to special functions, often used for DVRs, cable/satellite receivers, or interactive features. Their function varies by device and context.
- **Playback Controls** (◀◀, ▶, ■, ▶▶): Control media playback (Rewind, Play, Stop, Fast Forward).
- **Record** (●): Initiates recording on compatible DVRs.
- **DVD/Blu-ray Open/Close** (▲ with line): Opens or closes the disc tray on compatible players.
- **FAV**: Accesses favorite channels or content.
- **INFO**: Displays information about the current program or content.
- **MY APPS**: Accesses installed applications (LG-specific function).
- **SETUP**: Used for remote programming and settings.

5. MAINTENANCE

5.1. Battery Replacement

Replace batteries when the remote's performance degrades or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5.2. Cleaning

To clean the remote, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting liquids inside the remote.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote does not operate your device.	<p>Batteries are dead or inserted incorrectly.</p> <p>Remote is not programmed for the device.</p> <p>Remote is not pointed directly at the device's IR sensor.</p> <p>Obstruction between remote and device.</p>	<p>Replace batteries with new AAA batteries, ensuring correct polarity.</p> <p>Reprogram the remote using Automatic Code Search or Direct Code Entry (refer to Section 3.2).</p> <p>Ensure a clear line of sight between the remote and the device.</p> <p>Remove any obstructions.</p>
Some buttons work, but others do not.	<p>Incorrect code programmed.</p> <p>Device does not support that specific function.</p>	<p>Try another code for your device brand (refer to Section 3.2).</p> <p>Consult your device's original manual to confirm supported functions.</p>
Master Volume Control is not working.	Master Volume Control not set up.	Refer to the full instruction manual (if available from manufacturer) for setting up master volume control.

7. PRODUCT SPECIFICATIONS

Attribute	Detail
Model Number	67209
Brand	UltraPro
Compatible Devices	Television, Blu-ray/DVD players, Cable/Satellite receivers, Roku boxes, Streaming media players, Soundbars
Max Number of Supported Devices	4
Color	Black
Special Feature	Ergonomic, Universal
Package Dimensions	8.9 x 2.48 x 1.54 inches
Item Weight	3.52 ounces
Batteries Required	2 AAA batteries (not included)
Manufacturer	Jasco Products
Date First Available	February 8, 2023



Figure 6: Dimensions of the UltraPro 4-Device Replacement Remote.

8. SUPPORT AND WARRANTY

8.1. Technical Support

For any questions or issues regarding your UltraPro 4-Device Replacement Remote, free U.S.-based technical support is available Monday-Friday, 7 AM-8 PM, Central Time. Online step-by-step programming videos are also available to assist with setup and operation.

Please refer to the product packaging or manufacturer's website for specific contact information and support resources.

8.2. Warranty Information

Warranty information is typically provided with the product packaging or available on the manufacturer's official website. Please retain your proof of purchase for warranty claims.



© 2025 UltraPro. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.