

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Electric Pepper Grinder KYMQ-14-BS User Manual

CIRCLE JOY KYMQ-14-BS

CIRCLE JOY Electric Pepper Grinder KYMQ-14-BS User Manual

Model: KYMQ-14-BS

INTRODUCTION

Thank you for choosing the CIRCLE JOY Electric Pepper Grinder. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Keep this product out of reach of children to prevent accidents.
- Do not wash the electrical product directly with water. Use a damp cloth for cleaning.
- Ensure batteries are inserted with correct polarity.
- Remove batteries if the grinder will not be used for an extended period.
- Do not attempt to disassemble or repair the grinder yourself. Contact customer support if service is required.
- Avoid grinding substances other than dry spices (e.g., pepper, salt).

PRODUCT OVERVIEW

The CIRCLE JOY Electric Pepper Grinder features a durable design and convenient operation. Key components include a premium ABS material casing, a wear-resistant ceramic grinding core, a bright LED light for visibility during use, a visual silo to monitor spice levels, and an adjustable coarseness knob.



Figure 1: Product Features Diagram. This image highlights the main parts and materials of the electric pepper grinder.

PACKAGE CONTENTS

- CIRCLE JOY Electric Pepper Grinder (1 unit)

SETUP

1. Battery Installation

1. Locate the battery compartment at the top of the grinder.
2. Lift up the battery cover by pulling back the buckle with your fingers.
3. Insert 4 AAA alkaline batteries (not included) according to the polarity markings inside the compartment.
4. Close the battery cover securely.

**Powered by 4 AAA Alkaline Batteries
(NOT INCLUDED), Long working Duration**



Figure 2: Battery Installation. This image illustrates how to open the battery compartment and insert AAA batteries.

2. Filling the Grinder with Spices

1. Twist the top section of the grinder to open the spice silo.
2. Carefully pour your desired spices (e.g., whole peppercorns, coarse salt) into the transparent silo. Do not overfill.
3. Twist the top section back into place to close the silo securely.



Figure 3: Setup and Operation Steps. This image provides a visual guide for battery insertion, filling the grinder, adjusting grind size, and activating the grinding mechanism.

OPERATION

1. Grinding Spices

1. Hold the grinder over your food or dish.
2. Press and hold the button located on the top of the grinder. The grinder will activate, and the LED light will illuminate.
3. Release the button to stop grinding.

2. Adjusting Coarseness

1. Locate the adjustable knob at the bottom of the grinder.
2. Rotate the knob clockwise for a finer grind.
3. Rotate the knob counter-clockwise for a coarser grind.
4. Test the grind size and adjust as needed for your preference.

Multi-Circle Adjustment



Suitable for Grinding Various Spices



Figure 4: Coarseness Adjustment. This image details how to adjust the grind size from fine to coarse using the bottom knob.

MAINTENANCE AND CLEANING

- **Cleaning the Exterior:** Wipe the exterior of the grinder with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Cleaning the Grinding Mechanism:** For best performance, periodically clean the ceramic grinding mechanism. You can grind a small amount of rice to help clear any residue. Use a small brush (not included) to remove any spice particles.
- **Storage:** Store the grinder in a dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not operate.	No batteries or batteries incorrectly installed.	Check battery installation and replace if necessary. Ensure correct polarity.

Problem	Possible Cause	Solution
Grinder operates slowly or inconsistently.	Low battery power.	Replace all 4 AAA batteries with new ones.
No spice is dispensed.	Silo is empty or grinding mechanism is blocked.	Refill the spice silo. Clean the grinding mechanism to remove any blockages.
Grind size is not as expected.	Coarseness knob needs adjustment.	Adjust the coarseness knob at the bottom of the grinder.

SPECIFICATIONS

Feature	Detail
Model Number	KYMQ-14-BS
Brand	CIRCLE JOY
Power Source	4 x AAA Batteries (not included)
Material	Plastic
Dimensions (L x W x H)	73 x 73 x 196 mm
Item Weight	552 Grams
Capacity	70 ml
Recommended Use	Seasoning and food preparation
Dishwasher Safe	No

WARRANTY INFORMATION

For information regarding the product warranty, please refer to the documentation provided with your purchase or contact CIRCLE JOY customer support directly.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your CIRCLE JOY Electric Pepper Grinder, please contact the manufacturer's customer support. Contact details can typically be found on the product packaging or the official CIRCLE JOY website.