



[Manuals.plus](#) /

› [MARVUE TECH](#) /

› MARVUE Pad M11 10-inch Android 11 Wi-Fi Tablet User Manual

MARVUE TECH Pad M11

MARVUE Pad M11 10-inch Android 11 Wi-Fi Tablet User Manual

Model: MARVUE Pad M11 | Brand: MARVUE TECH

1. INTRODUCTION

This user manual provides comprehensive instructions for the MARVUE Pad M11 10-inch Android 11 Wi-Fi Tablet. Please read this manual carefully before using your device to ensure proper operation and to maximize its performance and lifespan. Keep this manual for future reference.



Image: The MARVUE Pad M11 tablet, showcasing its display with "Android 11" text.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- MARVUE Pad M11 Tablet
- Power Adapter (5V2A Type-C compatible)
- USB Type-C Cable
- User Manual

3. SETUP

3.1 Initial Charging

Before first use, fully charge the tablet using the provided power adapter and USB Type-C cable. Connect the cable to the tablet's Type-C port and the adapter to a power outlet. A full charge typically takes 2-3 hours.



Image: The tablet being charged via its Type-C port, indicating a full battery.

3.2 Power On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the MARVUE logo appears.
- **To Power Off:** Press and hold the power button, then select "Power Off" from the options on the screen.
- **Sleep Mode:** If the tablet does not power on, it might be in sleep mode due to low battery. Charge it for 2-3 hours with the original charger before attempting to power it on again.

3.3 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired 2.4G Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.



Image: The tablet displaying a video call, emphasizing stable 2.4G Wi-Fi connectivity.

3.4 Micro SD Card Installation and Initialization

The tablet supports Micro SD card expansion up to 512GB. When using a Micro SD card for the first time, it must be initialized.

1. Locate the Micro SD card slot on the side of the tablet.
2. Insert the Micro SD card into the slot until it clicks into place.
3. A notification will appear on the screen. Tap on it to set up the SD card.
4. Follow the on-screen prompts to format and initialize the SD card. This process will erase all data on the card, so ensure any important data is backed up.

Note: This tablet does not support SIM cards for cellular data.

4. OPERATING INSTRUCTIONS

4.1 Android 11 Features

The MARVUE Pad M11 runs on Android 11 OS, offering an enhanced user experience with features such as:

- **Screen Lock:** Secure your device with various lock methods.
- **Dark Mode:** Reduce eye strain and save battery life by switching to a darker theme.
- **User Assist:** Access helpful tips and support for your device.
- **Digital Wellbeing & Parental Controls:** Monitor and manage screen time, and set usage limits for children.
- **Screen Record:** Capture screen activity directly from your device.



Image: The tablet in use, highlighting features like Dark Mode and Eye Protection Mode.

4.2 Using Applications

With Google GMS certification, you can access a wide range of applications from the Google Play Store, including popular apps like LINE, Netflix, YouTube, Facebook, and TikTok.

1. **Download Apps:** Open the **Play Store** app, search for your desired application, and tap **Install**.
2. **Open Apps:** Tap on the app icon from your home screen or app drawer.
3. **Close Apps:** Swipe up from the bottom of the screen and swipe the app card away, or use the back button to exit.

Recommendation: To maintain optimal performance, avoid running too many applications simultaneously,

especially resource-intensive games. For demanding applications, consider higher-performance tablets.



MARVUE M 11は32GB大容量、まだ128GBSDカードの対応で、動画、オンラインショッピング、オンラインチャット、音楽、学習、電子書籍様々なコンテンツがこの一台で

32GB

128GB拡張 (別売)

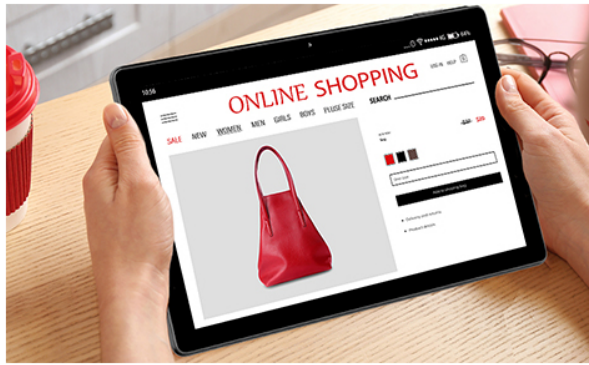


Image: Users engaging with the tablet for various activities like online shopping and educational content.

4.3 Camera and Multimedia

The tablet features a 2MP front camera and an 8MP rear camera, suitable for daily photography and video calls. The 1280x800 IPS HD display and dual speakers provide a quality audio-visual experience.

- **Taking Photos/Videos:** Open the **Camera** app and tap the shutter button.
- **Video Calls:** Use compatible communication apps (e.g., Google Meet, Zoom) for video conferencing.
- **Audio Output:** Connect wired headphones via the 3.5mm audio jack or pair wireless headphones via Bluetooth.

写真とビデオ通話をお楽しみます

デュアルカメラ
2MP+8MP

安定のワイヤレス接続
2.4G WIFI

デュアルスピーカー
立体感サウンドエフェクト



Image: The tablet being used for a video call, demonstrating its camera capabilities.



Image: The tablet displaying a music app, emphasizing its dual speakers for high-quality audio and the Allwinner A133 CPU.

5. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge it regularly, and use only the provided or compatible 5V2A Type-C charger.
- **Software Updates:** Periodically check for system updates in [Settings](#) > [System](#) > [System update](#) to ensure optimal performance and security.

6. TROUBLESHOOTING

6.1 Tablet Does Not Turn On

- Ensure the tablet is sufficiently charged. Connect the original charger and allow it to charge for 2-3 hours before attempting to power on.
- Press and hold the power button for at least 10-15 seconds to perform a forced restart.

6.2 Slow Performance or App Crashes

- Close unnecessary background applications.
- Clear cache for frequently used apps in **Settings** > **Apps & notifications** > [App Name] > **Storage & cache** > **Clear cache**.
- Restart the tablet.
- Ensure there is sufficient free storage space. Delete unused files or apps if storage is low.
- *Note: This tablet is not designed for heavy gaming or running many demanding applications simultaneously.*

6.3 Wi-Fi Connection Issues

- Ensure Wi-Fi is enabled on the tablet.
- Restart your Wi-Fi router.
- Forget the network and reconnect: Go to **Settings** > **Network & Internet** > **Wi-Fi**, tap on the network name, then **Forget**. Reconnect as described in Section 3.3.
- Ensure you are connecting to a 2.4G Wi-Fi network.

6.4 Micro SD Card Not Recognized

- Ensure the Micro SD card is properly inserted into the slot.
- If it's the first time using the card, ensure it has been initialized as described in Section 3.4.
- Try using a different Micro SD card to rule out a faulty card.

7. SPECIFICATIONS

Feature	Detail
Brand	MARVUE TECH
Model Name	MARVUE Pad M11
Operating System	Android 11
Display Size	10 inches
Display Resolution	1280 x 800 IPS HD
CPU	Allwinner A133 Quad-Core, 1.6 GHz
RAM	2GB
Internal Storage	32GB
Expandable Storage	Micro SD up to 512GB (card not included)
Front Camera	2MP
Rear Camera	8MP
Battery Capacity	6000mAh
Charging Port	Type-C (5V2A compatible charger only)
Connectivity	Wi-Fi (802.11 a/b/g/n, 2.4G), Bluetooth

Feature	Detail
Audio Jack	3.5mm
Dimensions	18 x 18 x 18 cm (approximate)
Weight	550 g
SIM Card Support	No
GPS Navigation	No



MARVUE M11
Android 11 Go edition
多機能 WIFIタブレット

- Android 11.0
- 2MP+8MP
- 2.4GHz
- 4 コア
- 10.1 ディスプレイ
- 6000mah
- 1280*800
- 2GB+32GB

Image: An overview of the MARVUE M11 tablet's key features and specifications.

8. WARRANTY AND SUPPORT

The MARVUE Pad M11 comes with a one-year warranty period from the date of purchase.

For any questions or issues, please contact customer support. You can typically find contact information on the product page or through the seller's official website.