

HONITURE S14

HONITURE S14 Cordless Vacuum Cleaner User Manual

Model: S14 | Brand: HONITURE

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your HONITURE S14 Cordless Vacuum Cleaner. Keep this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush head or other accessories.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

2. PRODUCT OVERVIEW

The HONITURE S14 is a versatile cordless vacuum cleaner designed for efficient cleaning across various surfaces. It features a powerful motor, multiple suction modes, and an ergonomic design for ease of use.

Key Features

- **450W Brushless Motor & 38KPa Suction:** Equipped with a stable 450W brushless motor, the S14 offers powerful suction up to 38KPa in strong mode, effectively removing dirt, debris, pet hair, and cat litter from various surfaces including hardwood floors, medium-pile carpets, and tiles.
- **Ergonomic Design:** The vacuum can lay flat up to 180° to reach under furniture, ensuring thorough cleaning. Its lightweight design allows for easy placement on tables or sofas.

- **OLED Display & 7-Stage Filtration:** An OLED display shows battery level, charging status, and suction mode. The 7-stage cyclone filtration system with a HEPA filter captures 99.99% of fine particles down to 0.3 microns, releasing fresh, aromatic air (aroma chip included).
- **Detachable Battery & 55-Minute Runtime:** The large-capacity detachable battery provides up to 55 minutes of continuous operation in eco mode (30 minutes in standard, 18 minutes in strong mode). An optional spare battery (sold separately) allows for extended cleaning without interruption.
- **Versatile Attachments:** Includes a crevice nozzle and a 2-in-1 combination nozzle for cleaning curtains, sashes, sofa gaps, and keyboards. The slim, self-propelled power head allows for smooth cleaning in narrow spaces.

Product Components

S14コードレス掃除機



Figure 2.1: All included accessories for the HONITURE S14 Cordless Vacuum Cleaner.

1. Wall Mount Bracket
2. Main Unit
3. Power Head
4. Cleaning Brush
5. HEPA Filter
6. Sponge Filter
7. Aroma Chip

8. Power Adapter
9. Roller Brush (inside Power Head)
10. 2-in-1 Brush Nozzle
11. Crevice Nozzle
12. Extension Pipe
13. User Manual

3. ASSEMBLY AND SETUP

3.1 Attaching the Battery

Align the detachable battery with the main unit and slide it into place until it clicks securely.



Figure 3.1: Detachable battery installation.

3.2 Assembling the Vacuum Cleaner

1. Insert the extension pipe into the main unit until it locks.
2. Attach the power head to the other end of the extension pipe until it clicks.
3. For handheld use, attach desired nozzles (crevice nozzle or 2-in-1 brush nozzle) directly to the main unit.

3.3 Charging the Battery

The battery can be charged while attached to the main unit or separately. Connect the power adapter to the

charging port on the main unit or directly to the battery. The OLED display will show the charging status.



Figure 3.2: Wall-mounted storage and charging.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Suction Modes

Press the power button to turn the vacuum cleaner on or off. Use the mode selection button on the OLED display to switch between Eco, Standard, and Strong suction modes. The OLED display provides real-time information on battery life and current mode.

動画表示 OLEDディスプレイ

充電残量/吸引モード/故障アラム/解決方法がビデオで表示する



エコモード



標準モード



強力モード



Figure 4.1: OLED display interface.

4.2 Using the Power Head

The power head is equipped with an LED light to illuminate dark areas, ensuring no dirt is missed. Its flexible design allows for 180° left/right rotation and 90° up/down movement, making it easy to clean around furniture and in tight corners.



Figure 4.2: Cleaning under low furniture.

4.3 Using Attachments

- **Crevice Nozzle:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Brush Nozzle:** Use the brush for delicate surfaces like keyboards or upholstery, and the nozzle for general dusting.

5. MAINTENANCE

5.1 Emptying the Dust Cup

The 1.5L dust cup features a one-touch release mechanism for hygienic emptying without direct contact with dirt. Simply press the release button to open the bottom flap and dispose of the contents.



Figure 5.1: One-touch dust cup emptying.

5.2 Cleaning Filters

The dust cup and filters (HEPA and sponge) are detachable and washable. Rinse them with water and allow them to air dry completely before reassembling. Regular cleaning ensures optimal suction performance and extends the lifespan of the filters.

超強サイクロン排塵システム

タツマキのように極大な遠心力生み出し、
0.3ミクロンもの微細な粒子を99.9%捕集して新鮮な排気出す。



Figure 5.2: 7-stage cyclone filtration system components.

5.3 Cleaning the Roller Brush

Periodically check the roller brush in the power head for tangled hair or debris. Remove the roller brush by following the instructions in the manual and clean it using the provided cleaning brush or scissors if necessary. Reinsert the roller brush securely.

6. TROUBLESHOOTING

If you encounter any issues with your HONITURE S14, please refer to the table below for common problems and

their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into place.
Low suction power	Dust cup is full, filters are clogged, or attachments are blocked.	Empty the dust cup. Clean or replace the filters. Check all attachments and pipes for blockages.
Roller brush not rotating	Hair or debris tangled in the brush, or the brush is not properly installed.	Remove and clean the roller brush. Ensure it is correctly reinstalled.
Short battery runtime	Using strong mode continuously, or battery degradation.	Use Eco or Standard mode for longer runtime. If battery life significantly decreases, consider purchasing a replacement battery.
Unusual noise	Blockage in the air path or foreign object in the brush head.	Check for and remove any blockages in the hose, pipe, or brush head.

7. SPECIFICATIONS

Feature	Specification
Brand	HONITURE
Model Number	S14
Motor Power	450 W
Suction Power	Up to 38 KPa
Runtime	Up to 55 minutes (Eco Mode)
Dust Cup Capacity	1.5 Liters
Filtration Type	7-stage Cyclone with HEPA Filter
Special Features	OLED Display, LED Headlight, Detachable Battery, Aroma Chip
Product Weight	2.5 kg (Main unit + battery + extension pipe + brush head)
Dimensions (L x W x H)	120 x 30.5 x 20.5 cm
Control Method	Touch

8. WARRANTY AND SUPPORT

The HONITURE S14 Cordless Vacuum Cleaner comes with a 3-year manufacturer's warranty upon registration. For warranty claims, technical support, or any product-related inquiries, please contact HONITURE customer service

through the platform of purchase or visit the official HONITURE website.

Please retain your proof of purchase for warranty validation.