

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [vidaXL](#) /

› [vidaXL Garden Parasol 70.9" x 43.3" Anthracite User Manual \(Model 3001675\)](#)

vidaXL 3001675

vidaXL Garden Parasol 70.9" x 43.3" Anthracite User Manual

Model: 3001675

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your vidaXL Garden Parasol. Please read this manual thoroughly before use and retain it for future reference.

The vidaXL Garden Parasol is designed to offer effective sun protection for outdoor spaces such as gardens, patios, and balconies. It features a durable aluminum pole and a polyester canopy, providing adjustable shade and UV protection.



Image: The vidaXL Garden Parasol providing shade over a patio area.

SAFETY INFORMATION

- Always ensure the parasol is securely anchored in a heavy, stable base (not included) to prevent tipping, especially in windy conditions.
- Do not use the parasol during strong winds, heavy rain, or storms. Close and secure it to prevent damage or injury.
- Keep the parasol away from open flames, heaters, or other heat sources.
- Ensure children and pets are supervised when near the parasol.
- Regularly check all connections and fasteners to ensure they are tight and secure.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Garden Parasol (Canopy, Pole sections, Frame components)

- Assembly hardware (if applicable)

Note: A parasol base is not included and must be purchased separately for proper installation.

SETUP AND ASSEMBLY

Assembly of the vidaXL Garden Parasol is required. Follow these steps for proper setup:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble the Pole:** Connect the pole sections together. Ensure they are firmly joined.
3. **Attach Canopy to Frame:** Secure the canopy fabric to the frame components. Refer to the image below for typical attachment points.



Image: Detail of the canopy fabric attachment to the frame.

4. **Mount Canopy Assembly to Pole:** Attach the assembled canopy and frame to the top section of the main pole.
5. **Insert into Base:** Place the assembled parasol pole into a suitable, heavy parasol base. Tighten any securing screws or knobs on the base to hold the pole firmly in place.

OPERATING INSTRUCTIONS

The vidaXL Garden Parasol offers adjustable features for optimal sun protection.

1. **Opening the Parasol:** Gently push the canopy upwards until it fully extends and locks into its open position.
2. **Adjusting Height:** Locate the height adjustment mechanism on the main pole. Loosen the knob, adjust the pole to the desired height, and then securely tighten the knob.



Image: Visual guide for adjusting the parasol height.

3. **Tilting the Canopy:** Use the tilting mechanism located near the top of the pole to angle the canopy. This allows you to block the sun as it moves throughout the day.



Image: Demonstration of the parasol canopy tilting capability.

4. **Closing the Parasol:** Reverse the opening procedure. Gently release the locking mechanism (if present) and lower the canopy. Secure it with any ties or straps provided to prevent it from opening unintentionally.

MAINTENANCE

Proper maintenance will extend the life of your garden parasol.

- **Cleaning:** Wipe the canopy fabric and pole with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the canopy is completely dry before folding or storing to prevent mold and mildew growth.
- **Storage:** During periods of non-use, especially in winter or severe weather, store the parasol in a dry, protected area. A

protective cover is recommended.

- **Inspection:** Periodically check all nuts, bolts, and moving parts for tightness and wear. Tighten as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Parasol is unstable or tips over easily.	Insufficiently heavy base; loose pole connections.	Ensure a heavy, stable parasol base is used. Check and tighten all pole connections and base fasteners. Do not use in high winds.
Difficulty opening or closing the canopy.	Mechanism obstruction; damaged parts; dirt accumulation.	Inspect the opening/closing mechanism for any obstructions. Clean any dirt or debris. If parts are damaged, contact support.
Canopy fabric appears loose or sags.	Improper assembly; fabric stretching over time.	Review assembly instructions to ensure the canopy is correctly attached. Minor stretching is normal over time.

SPECIFICATIONS

Model Number	3001675
Brand	vidaXL
Canopy Dimensions (Length x Width)	70.9 inches x 43.3 inches (180 cm x 110 cm)
Shape	Rectangular
Color	Anthracite
Material	Polyester Fabric, Aluminum Pole
Overall Height (Pole)	81.9 inches (208 cm)
Pole Diameter	0.9 inches (2.3 cm)
Weight	5.27 lbs (2.39 kg)
Assembly Required	Yes

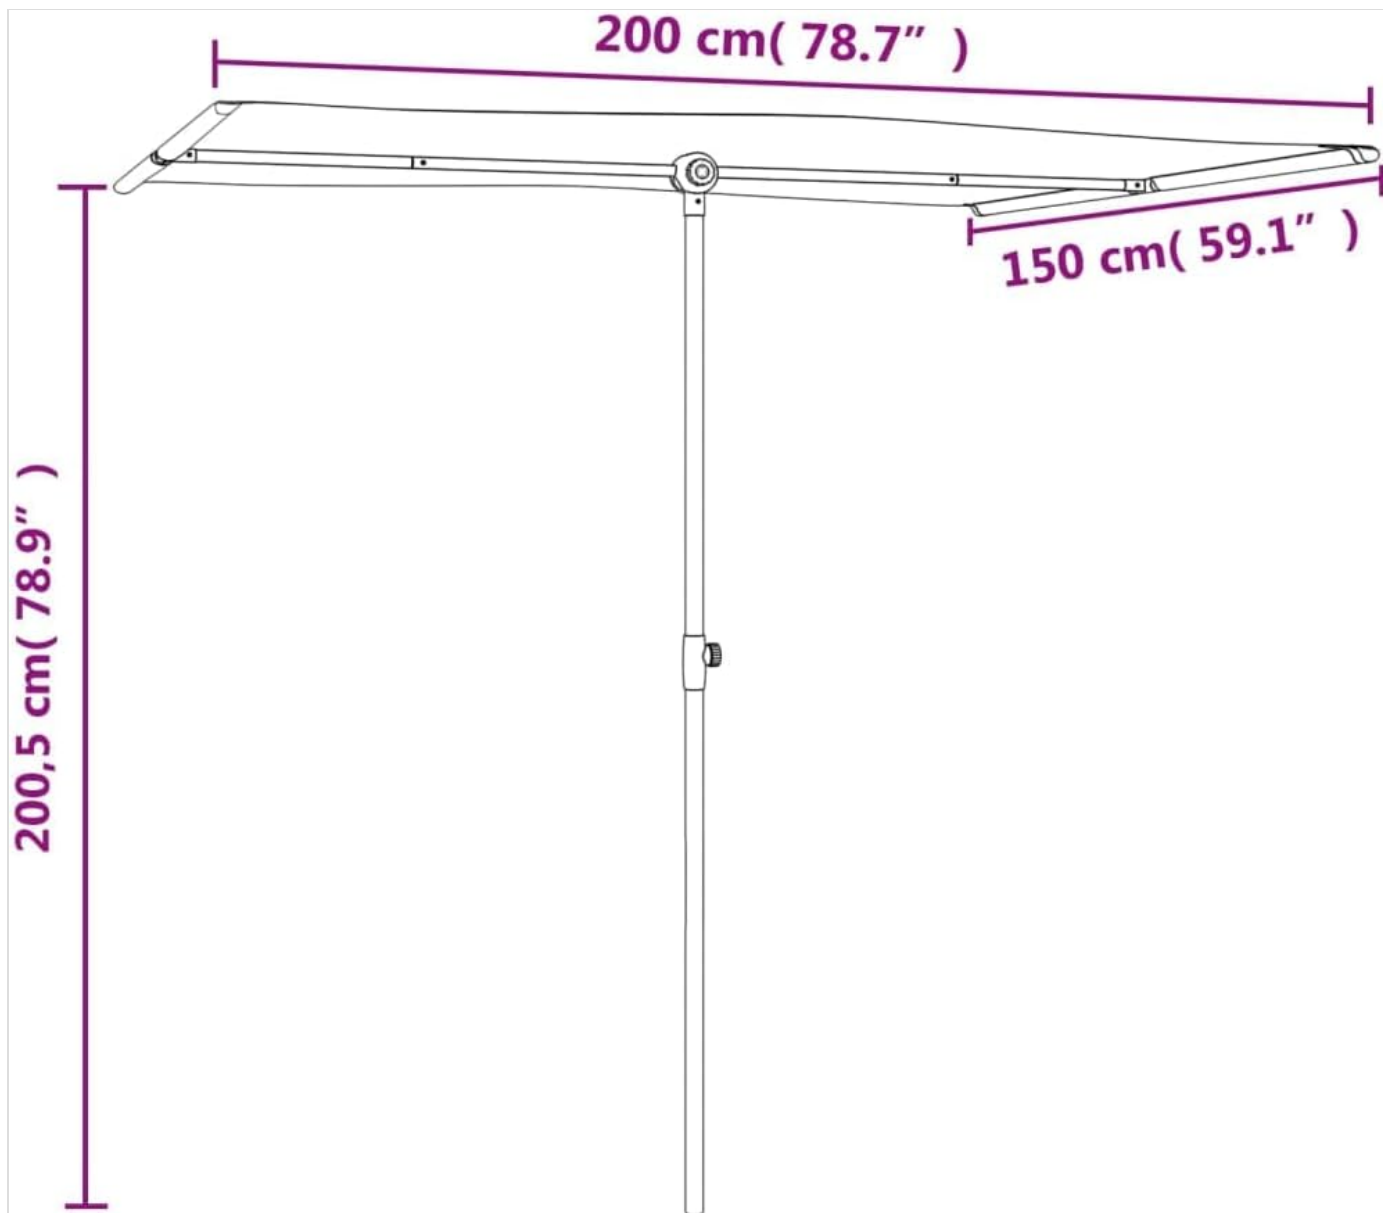


Image: Dimensional diagram of a vidaXL parasol. Note: The diagram shows 78.7" x 59.1" (200cm x 150cm) which is a different variant. Please refer to the text specifications for the exact dimensions of this 70.9" x 43.3" model.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact vidaXL customer service directly. Refer to your purchase documentation or the vidaXL official website for contact details.

You can visit the official vidaXL store for more information: [vidaXL Store on Amazon](#)