



[Manuals.plus](#) /

› [Lomiluskr](#) /

› Lomiluskr Ergonomic Dual Mode Wireless Mouse User Manual

Lomiluskr B0BVC1PD15

Lomiluskr Ergonomic Dual Mode Wireless Mouse User Manual

Model: B0BVC1PD15

INTRODUCTION

Thank you for choosing the Lomiluskr Ergonomic Dual Mode Wireless Mouse. This manual provides detailed instructions for setting up, operating, and maintaining your new mouse. This device offers both 2.4G wireless and Bluetooth connectivity, an ergonomic design for comfortable use, adjustable DPI settings, and smart power-saving features.



Image: Lomiluskr Ergonomic Dual Mode Wireless Mouse in Milk Tea color.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring correct polarity (+/-). An AA battery is included with the mouse.
4. Close the battery compartment cover securely.

2. Connecting the Mouse

The mouse supports two connection modes: 2.4G Wireless and Bluetooth.

2.1. 2.4G Wireless Connection (for Laptops, PCs with USB ports)

1. Locate the USB receiver, usually stored in the battery compartment of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the power switch on its underside.

4. The mouse should connect automatically. No additional drivers are typically required.



Image: Side view of the mouse, showing its ergonomic contour, suitable for 2.4G wireless connection.

2.2. Bluetooth Connection (for Smartphones, Tablets, or Bluetooth-enabled PCs)

1. Ensure the mouse is powered on.
2. Press and hold the Bluetooth pairing button located on the underside of the mouse for a few seconds until the indicator light starts blinking, indicating it's in pairing mode.
3. On your device (smartphone, tablet, or PC), go to Bluetooth settings.
4. Search for new devices and select "Lomiluskr Mouse" (or similar name) from the list.
5. Confirm the pairing on your device. The indicator light on the mouse will stop blinking once connected.

Note: Bluetooth mode consumes more power than 2.4G mode.

2.4G&Bluetooth Dual Mode Ergonomic Design Mouse



Image: The mouse supports both 2.4G and Bluetooth connectivity, shown with multiple color options.

OPERATING INSTRUCTIONS

1. Button Functions



Image: Diagram illustrating the various buttons and their functions on the mouse.

- **Left Click:** Primary selection and interaction.
- **Right Click:** Opens contextual menus.
- **Scroll Wheel:** Scrolls content up or down.
- **Wheel Click:** Acts as a middle button, often used for opening links in new tabs or auto-scrolling.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Back Button:** Navigates backward in web browsers or file explorers.

2. Adjusting DPI (Sensitivity)

The mouse features three adjustable DPI levels: 1200, 1600, and 2400. DPI (Dots Per Inch) determines the sensitivity of the mouse cursor. A higher DPI means the cursor moves further with less physical mouse movement.

1. Locate the DPI button, positioned behind the scroll wheel on the top of the mouse.
2. Press the DPI button to cycle through the available DPI settings (1200 → 1600 → 2400 → 1200).
3. The default DPI setting is 1600.

Three-level Adjustable DPI

* The default is 1600 DPI



Image: Visual guide to adjusting the mouse's DPI settings.

3. Smart Power Saving Mode

To conserve battery life, the mouse will automatically enter a sleep mode after 3-5 minutes of inactivity. To wake the mouse, simply click any button.

MAINTENANCE

1. Cleaning

- Wipe the mouse surface with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the PU cover and other components.
- Ensure no liquid enters the mouse's internal components.

Covered with PU Leather

The part of the palm holding the mouse is covered with high-quality PU leather
More comfortable to hold and non-slip



Image: The mouse features a PU leather cover for comfort and grip, which should be cleaned gently.

2. Battery Replacement

When the mouse performance degrades or it fails to respond, it may be time to replace the AA battery. Follow the battery installation steps in the "Setup" section to replace the battery.

3. Storage

When not in use for extended periods, turn off the mouse to further conserve battery life. Store the USB receiver in its designated slot within the battery compartment to prevent loss.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Mouse not responding or connecting.	<ul style="list-style-type: none"> • Check if the mouse is powered on. • Replace the AA battery. • For 2.4G connection: Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. • For Bluetooth connection: Ensure Bluetooth is enabled on your device and the mouse is properly paired. Re-pair the mouse if necessary. • Restart your computer or device.
Cursor lag or skipping (2.4G mode).	<ul style="list-style-type: none"> • Ensure the USB receiver is not obstructed and is close to the mouse. • Try plugging the USB receiver into a different USB port, preferably a direct port on your computer rather than a hub. • Check for interference from other wireless devices. • Consider using Bluetooth mode if the issue persists, as some environments may have 2.4G interference.
DPI setting not changing.	<ul style="list-style-type: none"> • Ensure you are pressing the correct DPI button (behind the scroll wheel). • Click the button firmly to cycle through the settings. • If the mouse is unresponsive, check the battery.
Mouse performs double-clicks unexpectedly.	<ul style="list-style-type: none"> • This can sometimes indicate a low battery. Try replacing the AA battery. • Check your operating system's mouse settings for click speed or double-click sensitivity.

SPECIFICATIONS

Feature	Detail
Model	B0BVC1PD15
Dimensions	124 x 77 x 43 mm (4.88 x 3.03 x 0.04 inches)
Weight	88g (3.1 ounces)
Connectivity	2.4G Wireless, Bluetooth
Power Supply	1 x AA Battery (included)
DPI Settings	1200 / 1600 (Default) / 2400
Special Features	Ergonomic Design, PU Cover, Soundless Keys, Smart Power Saving
Movement Detection Technology	Optical

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Lomilusk website.

