

[manuals.plus](#) /› [Logitech](#) /› [Logitech M220 Silent Wireless Mouse User Manual](#)

Logitech M220

Logitech M220 Silent Wireless Mouse User Manual

Model: M220 | Brand: Logitech

1. PRODUCT OVERVIEW

The Logitech M220 Silent Wireless Mouse offers a compact, ambidextrous design with advanced optical tracking for precise navigation. It features an 18-month battery life and plug-and-play connectivity, making it compatible with various operating systems including PC, Mac, and Linux laptops.

Key Features:

- Silent Click:** Enjoy over 90% noise reduction for a quiet user experience.
- Reliable Wireless Connection:** A plug-and-forget nano receiver provides a strong wireless connection up to 33 feet (10 meters).
- Advanced Optical Tracking:** Ensures precise movements on almost any surface.
- Broad Compatibility:** Works seamlessly with Windows, macOS, Chrome OS, and Linux.
- Ergonomic & Ambidextrous Design:** Offers comfort and precision for both left- and right-handed users.
- Extended Battery Life:** Up to 18 months on a single AA battery, with an automatic sleep mode to conserve power.

2. SETUP INSTRUCTIONS

1. Install the Battery:



Image: The underside of the mouse with the battery cover removed, revealing the slot for a single AA battery. The USB receiver is typically stored near the battery compartment.

Open the battery compartment cover on the underside of the mouse. Insert one AA battery, ensuring correct polarity (+/-). Close the cover securely.

2. Connect the USB Receiver:



Image: The bottom of the mouse, displaying the power switch, optical sensor, and the slot where the USB receiver is stored.

Locate the USB nano receiver, usually stored inside the battery compartment. Plug the receiver into an available USB port on your computer. The mouse should connect automatically.

3. Power On the Mouse:

Slide the On/Off switch on the bottom of the mouse to the 'On' position. The mouse is now ready for use.

4. Video Guide: Battery and USB Receiver Installation

Video: A user demonstrates how to open the battery compartment, insert the AA battery, and retrieve the USB receiver from the Logitech Silent Wireless Mouse. This visual guide assists with the initial setup process.

Video: This clip shows the process of installing the battery and connecting the USB receiver for the Logitech Wireless Mouse, highlighting its compact size and ease of use.

3. OPERATING INSTRUCTIONS

The Logitech M220 mouse is designed for intuitive and comfortable use. Its ambidextrous shape ensures a natural fit for both left and right hands.

- **Left-Click Button:** Use for selecting items, opening files, or activating functions.
- **Right-Click Button:** Use for accessing context menus or secondary functions.
- **Scroll Wheel:** Roll up or down to navigate through documents and web pages. The scroll wheel also functions as a middle-click button for additional actions in some applications.



Image: A top-down view of the rose-colored Logitech M220 mouse, clearly showing the main left and right click buttons and the central scroll wheel.



Image: A side profile of the Logitech M220 mouse, illustrating its contoured shape designed for comfortable grip.

4. MAINTENANCE

- **Battery Replacement:** When the mouse becomes unresponsive or the cursor movement is erratic, it may be time to replace the AA battery. Follow the battery installation steps in Section 2.
- **Cleaning:** Use a soft, lint-free cloth to gently wipe the surface of the mouse. For the optical sensor, use a dry cotton swab to remove any dust or debris. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, turn off the mouse using the On/Off switch to conserve battery life. The USB receiver can be stored inside the battery compartment for safekeeping.

5. TROUBLESHOOTING

- **Mouse Not Responding:**

- Ensure the mouse is turned on.
- Check if the battery is correctly installed and has sufficient charge. Replace if necessary.
- Verify the USB receiver is securely plugged into a working USB port on your computer.
- Try plugging the USB receiver into a different USB port.
- Restart your computer.

- **Erratic Cursor Movement:**

- Clean the optical sensor on the underside of the mouse.
- Ensure you are using the mouse on a suitable surface. Highly reflective or transparent surfaces may affect tracking.

- **Connectivity Issues:**

- Ensure the mouse is within the 33-foot (10-meter) operating range of the USB receiver.
- Avoid placing the receiver near other wireless devices or large metal objects that could cause interference.

6. SPECIFICATIONS

Feature	Detail
Model	M220
Brand	Logitech
Connectivity Technology	Wireless (2.4 GHz USB Receiver)
Movement Detection Technology	Optical (1000 DPI)
Battery Life	Up to 18 months (1x AA battery)
Special Feature	Silent Clicks, Ambidextrous Design
Item Weight	2.39 ounces
Package Dimensions	3.7 x 2.44 x 1.42 inches
Compatibility	PC, Mac, Laptop (Windows, macOS, Chrome OS, Linux)



Image: A visual representation of the mouse's dimensions, indicating its compact size for portability and comfortable use.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Logitech website or contact their customer service. The product typically comes with a limited hardware warranty, details of which can be found in the product packaging or on the manufacturer's support pages.

Keep your proof of purchase for any warranty claims.