

[manuals.plus](#) /› [Hoover](#) /› **Hoover HF103X Cordless Stick Vacuum Cleaner Instruction Manual****Hoover HF103X**

Hoover HF103X Cordless Stick Vacuum Cleaner Instruction Manual

Model: HF103X

1. INTRODUCTION AND OVERVIEW

The Hoover HF103X is a versatile cordless stick vacuum cleaner designed for efficient and flexible cleaning. It features a powerful motor, extended battery life, a flexible tube for reaching difficult areas, and a convenient Park & GO function. The multi-surface LED brush enhances visibility during cleaning, and integrated accessories provide comprehensive cleaning solutions.



Image: The Hoover HF103X cordless stick vacuum cleaner in its full upright configuration and as a handheld unit.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the power supply voltage matches the rating on the charger.

- Do not use the vacuum cleaner to pick up water, flammable liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the appliance if it is damaged or malfunctioning.
- Only use manufacturer-recommended attachments and accessories.
- Store the appliance indoors in a dry place when not in use.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Hoover HF103X Cordless Stick Vacuum Cleaner (main unit)
- Floor and Carpet Brush with LED lights
- Flexible Tube
- 2-in-1 Accessory (Crevice Tool and Dusting Brush)
- Long Crevice Tool
- Wall Mount
- Battery Charger
- Instruction Manual



Image: Various accessories included with the HF103X, such as the crevice tool, furniture brush, wall mount, LED floor nozzle, and flexible tube.

4. PRODUCT FEATURES

- **Effortless Cleaning:** Designed for flexible cleaning, reaching all corners with comfort.
- **Continuous Mode:** Lock the trigger for continuous suction without holding the power button.
- **Quick Park&GO:** Temporarily park the vacuum in an upright position on hard floors. For longer storage, use the wall mount.
- **LED Brush Lights:** Front LED lights on the main brush illuminate dark areas and under furniture for improved visibility.
- **LED Battery Status:** Intuitive LED system to monitor battery charge level.
- **Removable Battery:** The battery can be removed for convenient charging.
- **Large Dust Container:** 0.9 L capacity for fewer interruptions during cleaning.



Image: Illustrates the HF1's effective suction power, large 0.9 L dust container, and adjustable suction modes (TURBO and ECO).



VOLLER KOMFORT

freistehendes Abstellen
mit Park & Go Funktion

Image: Close-up of the practical LED light on the floor nozzle, illuminating the cleaning path.

HF1 FLEX ZUBEHÖR

- Fugendüse im Griff
- Ausziehbarer Möbelpinsel
- Wandhalterung
- Bodendüse mit LED
- Flex-Rohr mit Knickgelenk



Image: Highlights the removable battery for charging anywhere, up to 30 minutes runtime (equivalent to 120 m²), and the effective universal nozzle suitable for all floor types.

5. SETUP

5.1 Assembly

1. Unpack all components from the box.
2. Attach the main unit to the flexible tube. Ensure it clicks securely into place.
3. Connect the floor and carpet brush to the other end of the flexible tube.
4. For handheld use, detach the main unit from the flexible tube and attach desired accessories directly.

5.2 Charging the Battery

1. The battery may not be fully charged upon purchase. Fully charge the battery before first use.
2. Remove the battery from the main unit by pressing the release button.
3. Connect the charger to the battery and plug it into a power outlet.
4. The LED indicators on the battery will show the charging status. Once all LEDs are solid, the battery is fully charged.

5. Disconnect the charger and reinsert the battery into the main unit until it clicks.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Suction Modes

1. To turn on the vacuum, press the power button once for ECO mode.
2. Press the power button a second time for TURBO mode (maximum suction).
3. To turn off the vacuum, press the power button a third time.

6.2 Using Continuous Mode

For extended cleaning without continuously holding the trigger, activate the continuous mode:

- While the vacuum is running, locate the trigger lock button (refer to the diagram in your printed manual for exact location).
- Engage the trigger lock to maintain continuous suction.
- To disengage, press the trigger lock button again.

6.3 Utilizing the Flexible Tube and Handheld Mode



Qualität
von Hoover

Der HF1 überzeugt mit effektiver
Saugleistung bei **10 % mehr Airwatt**
als sein Vorgänger H-FREE 100.

Extra **großer 0,9 L Staubbehälter**
für weniger Unterbrechungen.

Saugstärke über Modi anpassen:

TURBO 1x Drücken

ECO 2x Drücken



Image: The Hoover HF103X in use, demonstrating the flexible tube for reaching under furniture and the handheld mode for elevated surfaces.

- The flexible tube allows the vacuum to bend, making it easier to clean under low furniture without excessive bending.
- To convert to handheld mode, press the release button to detach the main unit from the flexible tube. Attach the 2-in-1 accessory or long crevice tool directly to the main unit for cleaning upholstery, car interiors, or tight spaces.

6.4 Park & GO Function



Image: A user temporarily parking the Hoover HF103X upright using the Park & GO function, illustrating its convenience for short breaks during cleaning.

The Park & GO function allows the vacuum to stand upright independently on hard floors for temporary pauses during cleaning. Ensure the vacuum is on a stable, flat surface. Do not leave the vacuum unattended in this position for extended periods, especially on uneven surfaces or carpets. For long-term storage, always use the provided wall mount.

7. MAINTENANCE

7.1 Emptying the Dustbin

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Press the dustbin release button and remove the dustbin from the main unit.
3. Hold the dustbin over a waste bin and press the bottom release latch to open the dustbin flap and empty its contents.
4. Close the flap and reattach the dustbin to the main unit.

7.2 Cleaning the Filters

Regularly clean the filters to maintain optimal suction performance.

1. Remove the dustbin as described above.

2. Twist and pull out the filter assembly from the dustbin.
3. Separate the pre-motor filter and the mesh filter.
4. Tap the filters gently to remove loose dust. For a deeper clean, rinse them under lukewarm water.
5. Allow filters to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum. Do not use a dryer or heat source.

7.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Ensure the vacuum is off and the battery is removed.
2. Locate the brush roll access latch on the bottom of the floor brush.
3. Open the latch and remove the brush roll.
4. Use scissors or a brush to remove any tangled hair or debris.
5. Reinsert the brush roll and secure the access latch.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or not inserted correctly.	Ensure battery is fully charged and securely inserted.
Low suction power	Dustbin full, filters clogged, or blockage in the tube/brush.	Empty dustbin, clean filters, check for and remove blockages.
Brush roll not rotating	Hair or debris tangled in brush roll, or brush roll access latch not secured.	Clean brush roll, ensure it is properly reinserted and latched.
Short battery runtime	Battery not fully charged, or operating in TURBO mode.	Fully charge battery. Use ECO mode for longer runtime.

9. SPECIFICATIONS

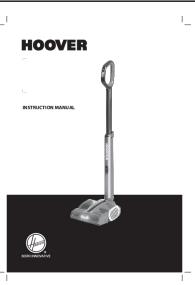
- **Model Number:** HF103X (39401006)
- **Power:** 180 Watts
- **Voltage:** 22 Volts
- **Battery Type:** Lithium-ion (1 included)
- **Autonomy:** Up to 30 minutes
- **Noise Level:** 86 Decibels
- **Weight:** 2.5 Kilograms
- **Dustbin Capacity:** 0.9 Liters
- **Filter Type:** Fabric
- **Recommended Surface:** Hard floors (with universal nozzle for all floors)
- **Special Features:** Front LED light, Lightweight, Bagless, Flexible tube

- **Color:** Titanium Grey / Venetian Red

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Hoover website. For technical support, spare parts, or service inquiries, please contact Hoover customer service through their official channels.

Related Documents - HF103X

	<p><u>Hoover Cordless Vacuum Cleaner User Manual - Operation & Maintenance Guide</u> Official user manual for Hoover cordless vacuum cleaners (e.g., HF1 series). Provides setup, operation, safety, maintenance, and troubleshooting instructions for optimal performance.</p>
	<p><u>Hoover Sprint Cordless Stick Vacuum Cleaner Instruction Manual</u> User guide for the Hoover Sprint 21.6v Cordless Stick Vacuum Cleaner (SI216RB), detailing setup, operation, maintenance, safety, and troubleshooting.</p>
	<p><u>Hoover H-Free 800 Cordless Vacuum Cleaner Instruction Manual</u> Comprehensive instruction manual for the Hoover H-Free 800 cordless vacuum cleaner, covering safe operation, assembly, maintenance, troubleshooting, accessories, and warranty.</p>
	<p><u>Hoover HF6 Cordless Vacuum Cleaner User Manual</u> User manual for the Hoover HF6 cordless stick vacuum cleaner. Learn about product components, assembly, charging, operation modes, maintenance, and troubleshooting for optimal performance.</p>
	<p><u>Hoover LINX Cordless Stick Vacuum Cleaner Owner's Manual</u> Comprehensive owner's manual for the Hoover LINX Cordless Stick Vacuum Cleaner, covering operation, maintenance, safety instructions, and troubleshooting.</p>



[Hoover LINX Cordless Stick Vacuum Owner's Manual](#)

Comprehensive owner's manual for the Hoover LINX Cordless Stick Vacuum, detailing operation, safety, maintenance, battery information, troubleshooting, and warranty. Includes step-by-step instructions and part identification.