

MOOKEENONE UNIVERSAL

MOOKEENONE Reusable Coffee Capsules Filter Pods Instruction Manual

For Tassimo Machine Types CTPM12, CTPM07, CTPM05UC

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your MOOKEENONE Reusable Coffee Capsules Filter Pods. These capsules are designed to be compatible with specific Tassimo coffee machine models, offering an alternative to single-use pods. Please read these instructions carefully before first use.

PACKAGE CONTENTS

- 1 x MOOKEENONE Reusable Coffee Capsule
- 1 x Coffee Spoon
- 1 x Cleaning Brush

COMPATIBILITY

The MOOKEENONE Reusable Coffee Capsules are compatible with the following Tassimo machine types:

- TYPE CTPM12
- TYPE CTPM07
- TYPE CTPM05UC

Please verify your Tassimo machine's model number to ensure compatibility.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the reusable coffee capsule, spoon, and brush with warm soapy water. Rinse thoroughly and allow to air dry completely.
3. **Inspect:** Ensure the capsule and lid are free from any damage or debris.

OPERATING INSTRUCTIONS



Image: The MOOKEENONE reusable coffee capsule, featuring a black base and an orange lid. Both components display a fine mesh filter for optimal coffee extraction. The lid is designed to securely fit onto the base.

1. **Open the Capsule:** Gently separate the lid from the capsule base.
2. **Fill with Coffee:** Use the provided spoon to fill the capsule with your preferred ground coffee. Do not overfill; leave a small gap (approximately 1-2mm) from the rim to allow for proper sealing and water flow. *Ensure the coffee grounds are suitable for espresso or drip coffee makers, not too fine (which can clog) or too coarse (which can result in weak coffee).*
3. **Close the Capsule:** Place the lid securely onto the capsule base, ensuring it is properly aligned and sealed.
4. **Insert into Machine:** Open the capsule holder in your Tassimo machine. Insert the filled MOOKEENONE reusable capsule into the holder, ensuring it sits correctly.
5. **Brew:** Close the machine's lid and follow your Tassimo machine's standard brewing instructions.
6. **Remove and Dispose:** After brewing, carefully remove the hot capsule from the machine. Allow it to cool before opening and disposing of the used coffee grounds.

MAINTENANCE AND CLEANING

Regular cleaning is essential to ensure optimal performance and longevity of your reusable coffee capsule.

- **After Each Use:**

- a. Allow the capsule to cool.
- b. Open the capsule and discard used coffee grounds.
- c. Rinse the capsule and lid under running water.
- d. Use the provided cleaning brush to remove any remaining coffee particles from the filter mesh and internal components.
- e. Rinse again thoroughly.
- f. Allow to air dry completely before storing or reusing.

- **Deep Cleaning (Periodically):** For a more thorough clean, you may soak the capsule components in a solution of warm water and mild dish soap for 15-30 minutes. Rinse extensively to remove all soap residue.
- **Storage:** Store the clean, dry capsule in a cool, dry place.

Caution: Do not use abrasive cleaners or scouring pads, as these can damage the capsule's surface and filter mesh.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Weak coffee / Watery taste	Insufficient coffee grounds; coffee too coarse; capsule not sealed properly.	Ensure capsule is filled adequately (but not overfilled); use finer grind coffee; check lid seal.
No coffee / Slow drip	Coffee grounds too fine; capsule overfilled; filter clogged.	Use slightly coarser grind; do not overfill; clean capsule thoroughly, especially the filter mesh.
Capsule difficult to close/insert	Capsule overfilled; grounds on rim; incorrect alignment.	Reduce coffee amount; clean rim of capsule; ensure lid is aligned correctly before closing.

SPECIFICATIONS

- **Brand:** MOOKEENONE
- **Model:** UNIVERSAL
- **Compatible Tassimo Models:** TYPE CTPM12, TYPE CTPM07, TYPE CTPM05UC
- **Material:** Durable plastic with metal filter mesh
- **Package Dimensions:** 1.97 x 0.79 x 0.79 inches
- **Item Weight:** 2.11 ounces

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your MOOKEENONE Reusable Coffee Capsules, please contact the manufacturer directly through their official channels or the retailer from whom the product was purchased. Please retain your proof of purchase for warranty claims, if applicable.

© 2023 MOOKEENONE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question