Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Chefman /
- > Chefman Air Fryer Toaster Oven Combo with Probe Thermometer, 12-In-1 Stainless Steel Convection Countertop, 10 Inch Pizza, 4 Slices of Toast, Cooking, Baking, Toasting, Roaster Oven Airfryer 20QT Stainless Steel ExactTemp Oven + Air Fryer

Chefman RJ50-SST2-P

Chefman Air Fryer Toaster Oven Combo User Manual

Model: RJ50-SST2-P | Brand: Chefman

1. Introduction

This manual provides essential information for the safe and efficient operation of your Chefman Air Fryer Toaster Oven Combo. Please read it thoroughly before first use and keep it for future reference.

The Chefman ExacTemp™ Oven+Air Fryer offers compact countertop convenience with advanced cooking and time-saving features. It integrates a meat thermometer for precise cooking and offers 9 versatile cooking functions.



Image: The Chefman Air Fryer Toaster Oven Combo, showcasing a perfectly roasted chicken and vegetables inside, ready for cooking.

Key Features:

- 12-in-1 Functionality: Offers Air Fry, Toast, Broil, Bake, Dehydrate, and more, with specific presets for meat, fish, and chicken.
- Integrated Probe Meat Thermometer: Provides real-time temperature updates for precise cooking.
- 9 One-Touch Presets: Includes Air Fry, Air Roast, Toast, Bake, Air Broil, Bagel, Air Bake, Reheat, and Dehydrate.
- Customizable Temperature Range: From 95°F to 450°F.
- Convenience Features: Mute alarm, flip reminder, rest indicator, automatic shut-off, interior light.
- Family Size Capacity: 20-quart capacity, fits 4 slices of toast, a 10-inch pizza, or a 6-pound chicken.
- Dishwasher-Safe Parts: Nonstick, dishwasher-safe accessories for easy cleanup.
- Safety Features: Advanced over-heat protection and automatic shut-off.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. Read all instructions.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- 13. Do not use appliance for other than intended use.
- 14. Oversized foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
- 15. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- 16. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- 17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- 18. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. PARTS AND ACCESSORIES

Your Chefman Air Fryer Toaster Oven Combo comes with the following accessories:

- · Baking Rack
- · Air Fry Basket
- 2 Dehydrating Racks
- Broil Pan
- Probe Thermometer
- Pull-Out Crumb Tray (integrated)



Image: A visual representation of all the dishwasher-safe accessories included with your Chefman Air Fryer Toaster Oven Combo, designed for easy cleanup.

4. SETUP AND FIRST USE

Unpacking:

- 1. Carefully remove all packaging materials and any promotional labels or stickers from your appliance.
- 2. Ensure all parts and accessories listed in the "Parts and Accessories" section are present.
- 3. Wipe down the exterior of the oven with a damp cloth. Clean all accessories with warm, soapy water, rinse thoroughly, and dry completely.

Placement:

- Place the oven on a stable, level, heat-resistant surface.
- Ensure there is adequate space (at least 4-6 inches) on all sides of the oven for proper ventilation.

• Do not place the oven directly under cabinets or near flammable materials.

Before First Use:

It is recommended to run the oven empty for about 15 minutes on a high temperature setting (e.g., Air Fry at 400°F) to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal and will dissipate.

5. OPERATING INSTRUCTIONS

Your Chefman Air Fryer Toaster Oven Combo features an intuitive digital control panel and multiple cooking functions to simplify your meal preparation.

Control Panel Overview:



Probe Thermometer



9 Cooking Presets



95°F-450°F Range



CHEFMAN ExacTemp™ 20-Quart Air Fryer Oven

The digital display shows temperature, time, and selected functions. Buttons allow for easy selection of cooking modes, temperature adjustment, and time setting.


Cooking Functions:

Select from the following 9 cooking functions:







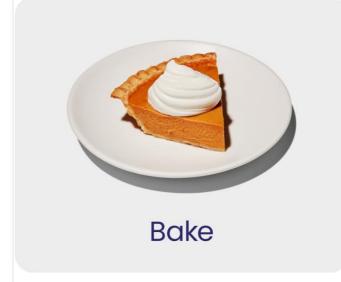



9-in-1 Functionality

Air fry, toast, broil, bake, and dehydrate and more all in one countertop appliance

Image: Visual representation of the 9-in-1 functionality, showing examples of food prepared using Air Fry, Toast, Broil, Bake, and Dehydrate settings.

- Air Fry: Ideal for crispy foods with little to no oil.
- · Air Roast: For roasting meats and vegetables evenly.
- Toast: Perfect for bread, bagels, and pastries.
- Bake: For cakes, cookies, and casseroles.

- · Air Broil: For quick browning and melting.
- Bagel: Optimized for toasting bagels.
- Air Bake: Combines baking with air circulation for faster, more even results.
- Reheat: For warming up leftovers.
- Dehydrate: For making dried fruits, vegetables, and jerky.



Image: A close-up of the control panel, illustrating the ease of selecting one of the 9 cooking presets with a single touch.

Using the Integrated Probe Thermometer:

The integrated probe thermometer ensures your food reaches the perfect internal temperature. Simply insert the probe into the thickest part of your food, avoiding bones. Plug the probe into the designated port on the oven. The display will show the live internal temperature, and you can set a target temperature. The oven will automatically adjust cooking or alert you when the target is reached.



Perfectly cooked food in minutes

Integrated cooking thermometer alerts you when it's time to flip, rest, and enjoy your food

Image: A detailed view of the integrated cooking thermometer precisely inserted into a roasted chicken, ensuring perfectly cooked food.

Capacity and Usage Tips:

The 20-quart capacity is designed for family-sized meals. It can accommodate up to 4 slices of toast, a 10-inch pizza, or a 6-pound chicken.



Perfectly sized for family meals or entertaining guests

Image: The Chefman Air Fryer Toaster Oven, demonstrating its XL family-size capacity with a whole roasted chicken and vegetables, suitable for large meals.

For air frying, ensure food is in a single layer in the air fry basket for optimal crispiness. Shake or flip food halfway through cooking for even results.



Crispy Without the Calories

Cook your favorite guilty-pleasure snacks with a fraction of the oil and none of the guilt

Image: A hand removing a basket of golden-brown French fries from the air fryer, illustrating how to achieve crispy results with less oil.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Chefman Air Fryer Toaster Oven Combo.

General Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- The interior can be wiped with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.

Accessory Cleaning:

All included accessories (baking rack, air fry basket, dehydrating racks, broil pan, and probe thermometer) are dishwasher-safe for convenient cleaning. The pull-out crumb tray should be emptied and cleaned regularly.

7. TROUBLESHOOTING

If you encounter any issues with your Chefman Air Fryer Toaster Oven Combo, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not properly closed.	Ensure the power cord is securely plugged into a working outlet. Check if the door is fully closed.
Food is not cooking evenly.	Overcrowding the basket; incorrect temperature/time setting.	Do not overcrowd the basket; cook in batches if necessary. Shake or flip food halfway through. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous cooking; cooking high-fat foods.	Clean the appliance and accessories thoroughly after each use. This is normal when cooking fatty foods; ensure proper ventilation.
Digital display not working or flickering.	Electrical issue; internal component malfunction.	Unplug the unit for a few minutes and plug it back in. If the problem persists, contact customer support.

For issues not listed here, please contact Chefman Customer Support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Chefman Dual Function Digital Air Fryer Oven with Temperature Probe, Stainless Steel
Model Number	RJ50-SST2-P
Brand	Chefman
Color	Stainless Steel
Capacity	20 Quarts
Product Dimensions	16.59"D x 15.8"W x 14.11"H
Item Weight	17.6 Pounds
Material	Stainless Steel
Output Wattage	1800 Watts

Feature	Detail
Voltage	120 Volts
Control Method	Touch
Min Temperature Setting	95 Degrees Fahrenheit
Max Temperature Setting	450 Degrees Fahrenheit
Has Nonstick Coating	Yes
Dishwasher Safe Parts	Yes (Accessories only)
UPC	810087844738

9. WARRANTY INFORMATION

Your Chefman Air Fryer Toaster Oven Combo is backed by a **1-year assurance** provided by Chefman. This warranty covers defects in material and workmanship under normal use and conditions. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the official Chefman website or contact customer support.

10. CUSTOMER SUPPORT

For any questions, assistance, or troubleshooting beyond what is covered in this manual, please contact Chefman Customer Support.

You can often find support information, FAQs, and contact details on the official Chefman website. Please have your model number (RJ50-SST2-P) and proof of purchase ready when contacting support.

Online Resources: www.chefman.com

User Guide (PDF): Download PDF

© 2023 Chefman. All rights reserved.

Related Documents - RJ50-SST2-P



Chefman EXACTEMPTM Oven+Air Fryer RJ50-SST2-P-CA-SERIES Quick Start Guide

Quick start guide for the Chefman EXACTEMPTM Oven+Air Fryer, model RJ50-SST2-P-CA
SERIES. Learn about features, control panel, setup, cleaning, and how to use cooking functions and the probe thermometer.



Chefman Toast-Air Air Fryer Oven RJ50-M User Manual and Guide

Comprehensive user guide for the Chefman Toast-Air Air Fryer Oven (Model RJ50-M), covering features, operating instructions, safety precautions, cleaning, troubleshooting, and warranty information.



Chefman Toast-Air Air Fryer + Oven User Guide and Recipes

Comprehensive guide to the Chefman Toast-Air Air Fryer + Oven (Model RJ50-SS-M20), including operating instructions, features, cleaning, maintenance, troubleshooting, and a collection of recipes.



Chefman EasyAir Oven + Fryer RJ50-15T User Manual and Guide

Comprehensive user manual for the Chefman EasyAir Oven + Fryer (Model RJ50-15T). This guide provides detailed instructions on setup, operation, safety precautions, cooking functions, tips, cleaning, troubleshooting, and warranty information for the appliance.



Chefman Toast-Air Oven+ Air Fryer User Guide RJ50-SS-M18

Comprehensive user guide for the Chefman Toast-Air Oven+ Air Fryer (Model RJ50-SS-M18). Learn about safety instructions, features, operating procedures, cooking tips, troubleshooting, cleaning, and warranty information.



Chefman Toast-Air French-Door Air Fryer + Oven User Manual RJ50-FDAF-D25

User manual for the Chefman Toast-Air French-Door Air Fryer + Oven (Model RJ50-FDAF-D25). Includes setup, operation, safety guidelines, cooking functions, tips, cleaning instructions, troubleshooting, and warranty information.

Documents - Chefman - RJ50-SST2-P



Chefman EXACTEMPTM Oven+Air Fryer RJ50-SST2-P-CA-SERIES Quick Start Guide

Quick start guide for the Chefman EXACTEMPTM Oven+Air Fryer, model RJ50-SST2-P-CA-SERIES. Learn about features, control panel, setup, cleaning, and how to use cooking functions and the probe thermometer.

lang:en score:44 filesize: 817.11 K page_count: 2 document date: 2023-01-25



[pdf] Quick Start Guide Guide

FR Document Library Toaster Oven Air Fryers Chefman RJ50 SST2 P QSG v 1715835686 cdn shopify s files 1 0576 5755 7158 |||

CHEFMAN 2023 **RJ50-SST2-P**-CA-SERIES_FR_QSG_FINAL_OTP_012523 EXACTEMPMC FOUR FRITEUSE Air chaud GUIDE D INITIATION RAPIDE Caractristiques Panneau de commande Avant I emploi initial Nettoyage et entretien Comment utiliser les fonctions de cuisson Comment utiliser le thermomtre sonde RJ50-SST2...

lang:fr score:43 filesize: 823.99 K page count: 2 document date: 2023-01-25



[pdf] User Manual Instructions Frequently Asked Questions Troubleshooting Guide Guide Warranty

Download Now ExacTemp™ Chefman Oven Air Fryer RJ50 SST2 P SERIES UG DIGITAL 061824 v 1745942416 cdn shopify s files 1 0576 5755 7158 |||

EXACTEMPTM Oven AIR fryer USER GUIDE Safety Instructions Features Operating Instructions Cooking Tips Troubleshooting/FAQs Cleaning and Maintenance Notes Terms and Conditions Warranty Registration COVER DRAWING **RJ50-SST2-P**-SERIES COOKING FORWARDTM Welcome Whether this is your first C... lang:en score:42 filesize: 677.41 K page_count: 28 document date: 2024-06-20



[pdf] User Manual Instructions Frequently Asked Questions Troubleshooting Guide Guide Warranty

US Document Library Toaster Oven Air Fryers Chefman RJ50 SST2 P UG v 1715835686 cdn shopify s files 1 0576 5755 7158 |||

EXACTEMPTM Oven Air fryer USER GUIDE Safety Instructions Features Operating Instructions Cooking Tips Troubleshooting/FAQs Cleaning and Maintenance Notes Terms and Conditions Warranty Registration **RJ50-SST2-P**-CA-SERIES COOKING FORWARDTM Welcome Whether this is your first Chefman applian...

lang:en score:40 filesize: 1.36 M page count: 56 document date: 2023-01-25



[pdf] User Manual Instructions Frequently Asked Questions Troubleshooting Guide Guide Warranty

RJ50 SST2 P CA SERIES UG FINAL LIVE 031623 indd FR Document Library Toaster Oven Air Fryers Chefman v 1715835686 cdn shopify s files 1 0576 5755 7158 |||

EXACTEMPTM Oven Air fryer USER GUIDE Safety Instructions Features Operating Instructions Cooking Tips Troubleshooting/FAQs Cleaning and Maintenance Notes Terms and Conditions Warranty Registration **RJ50-SST2-P**-CA-SERIES COOKING FORWARDTM Welcome Whether this is your first Chefman applian...

lang:en score:38 filesize: 1.26 M page_count: 56 document date: 2023-03-16



[pdf] User Manual Instructions Frequently Asked Questions Troubleshooting Guide Guide Warranty

User Manual Chefman 20 qt 12 in 1 Air Fryer Oven with Probe Thermometer Costco 2813942 UserManual mobilecontent costco live resource img static us |||

EXACTEMPTM Oven AIR fryer USER GUIDE Safety Instructions Features Operating Instructions Cooking Tips Troubleshooting/FAQs Cleaning and Maintenance Notes Terms and Conditions Warranty Registration **RJ50-SST2-P**-SERIES COOKING FORWARDTM Welcome Whether this is your first Chefman appliance ...

lang:en score:37 filesize: 475.61 K page count: 28 document date: 2024-07-12




[pdf]

Untitled US Document Library Toaster Oven Air Fryers Chefman RJ50 SST2 P CB v 1715835833 cdn shopify s files 1 0576 5755 7158 |||

RECIPE BOOK ACTIVE TIME 5 min TOTAL TIME 10 min SERVINGS 3-6 Toasted Bagels with Smoked Salmon ... cream or ice cream, if you like. 41 NOTES 42 NOTES 43 CHEFMAN.COM MYCHEFMAN ACTIVE TIME **RJ50-SST2-P**-

SERIES_CB_FINAL_5OTmP_0in11323 C HTEOFTMA LATNI M E2 0 2 3 10 min SERVINGS 3-6 ...

lang:en score:28 filesize: 1.84 M page_count: 44 document date: 2024-05-16

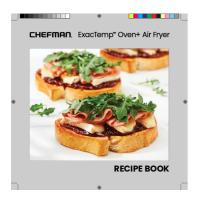

[pdf]

RJ50 SST2 P CA SERIES CB FINAL LIVE 031523 indd FR Document Library Toaster Oven Air Fryers Chefman v 1715835833 cdn shopify s files 1 0576 5755 7158 |||

RECIPE BOOK ACTIVE TIME 5 min TOTAL TIME 10 min SERVINGS 3-6 Toasted Bagels with Smoked Salmon ... I et de la crme fouette ou de la crme glace, si souhait. 41 CHEFMAN.COM MYCHEFMAN CHEFMAN 2023 **RJ50-SST2-P**-SERIES_CB_CA_FINAL_OTP_031623 ...

lang:en score:25 filesize: 3.32 M page_count: 84 document date: 2024-05-16



[pdf] User Manual Instructions Frequently Asked Questions Troubleshooting Guide Guide Warranty

User ManualChefman ExacTemp 20 Qt Oven Air Fryer with Probe Thermometer Costco2813942
UserManualmobilecontent costco live resource img static usbd 2813942 UserManual |||
EXACTEMPTM Oven AIR fryer USER GUIDE Safety Instructions Features Operating
Instructions Cooking Tips Troubleshooting/FAQs Cleaning and Maintenance Notes
Terms and Conditions Warranty Registration RJ50-SST2-P-SERIES COOKING

lang:en score:23 filesize: 475.61 K page_count: 28 document date: 2024-07-12

FORWARDTM Welcome Whether this is your first Chefman appliance ...