

- Manuals.plus /
- › REDTIGER /
- › REDTIGER Golf Rangefinder User Manual

REDTIGER C001

REDTIGER Golf Rangefinder User Manual

Model: C001 | Brand: REDTIGER
Your essential guide to mastering distances on the course.

INTRODUCTION

The REDTIGER Golf Rangefinder is a high-performance laser rangefinder designed to provide accurate distance measurements for golf, hunting, and other outdoor activities. Featuring advanced technology such as slope compensation, flag pole locking with vibration, and a powerful 7X magnification, this device will enhance your precision and improve your game.

With a maximum measuring range of 1200 yards and an accuracy of 0.5 yards, you can confidently select the right club for every shot. Its compact, portable design with a built-in magnetic stripe ensures convenience and accessibility on the course. The rechargeable battery offers extended use, making it a reliable companion for your training and play.



Figure 1: REDTIGER Golf Rangefinder (Model C001)

PACKAGE CONTENTS

Your REDTIGER Golf Rangefinder package includes the following items:

- Laser Rangefinder
- Portable Soft Case
- User Manual
- Charging Cable (USB-C)
- Magnetic Belt Clip
- Mountaineering Buckle
- Hand Rope
- Lens Cloth

Package Contents

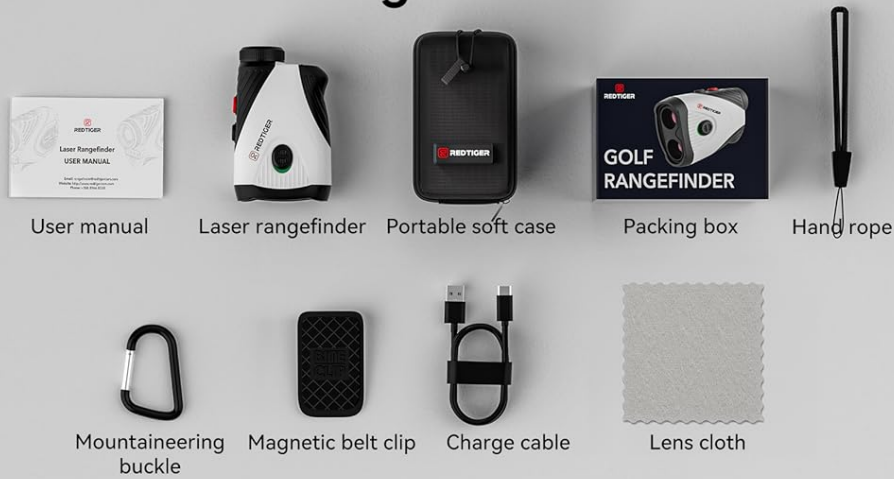


Figure 2: All items included in the REDTIGER Golf Rangefinder package.

SETUP

1. Charging the Device

The REDTIGER Golf Rangefinder is equipped with a rechargeable battery. Before first use, ensure the device is fully charged.

1. Locate the USB-C charging port on the device.
2. Connect the provided USB-C charging cable to the rangefinder and a compatible 5V/2A power source (e.g., computer USB port, wall adapter).
3. The charging indicator light will show the charging status. Refer to the user manual for specific light indications.
4. A full charge provides approximately 30,000 measurements.



Figure 3: Connecting the USB-C charging cable to the rangefinder.

2. Attaching the Hand Rope

For added security and to prevent accidental drops, attach the hand rope to your rangefinder.

1. Locate the small loop on the side of the rangefinder.
2. Thread the thin end of the hand rope through this loop.
3. Pass the larger end of the hand rope through the loop you just created and pull tight to secure.

3. Using the Magnetic Belt Clip

The magnetic belt clip provides convenient access to your rangefinder during play.

1. Attach the magnetic belt clip to your belt or golf bag.

2. The rangefinder features a built-in magnetic stripe on its side, allowing it to securely attach to the belt clip or any metal surface on your golf cart.



Figure 4: Rangefinder attached to a belt using the magnetic clip.



Figure 5: Rangefinder magnetically attached to a golf cart.

OPERATING MODES

The REDTIGER Golf Rangefinder offers 6 measurement modes to suit various needs:

1. **Slope Compensation Mode:** Provides elevation-adjusted distance for more precise club selection.
2. **Golf Flag Locking Mode:** Locks onto the flag pole and vibrates to confirm target acquisition.
3. **Horizontal & Height Ranging Mode:** Measures horizontal distance and height.
4. **Speed Measurement Mode:** Measures the speed of moving objects.
5. **Continuous Scan Measurement:** Allows for continuous scanning of distances.

Switching Modes

Short press the 'M' (Mode) button to cycle through the different measurement modes. The current mode will be displayed on the transreflective LCD.

Using the Slope Switch

The slope switch allows you to toggle the slope compensation feature on or off. When the slope switch is turned on (indicated by red), the ballistic distance and degree of angle will be displayed, providing adjusted distances for uphill or downhill shots. For tournament play, ensure the slope switch is turned off (indicated by green) to comply with regulations.

Slope Compensation

Raise your game with more accuracy

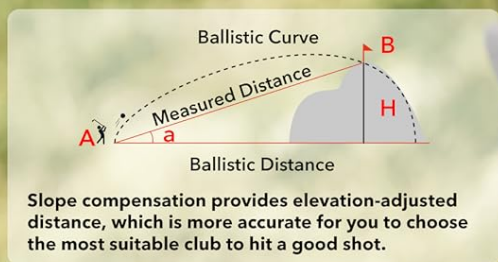


Figure 6: Diagram illustrating slope compensation.



Figure 7: View through the rangefinder showing slope compensation.

Flag Pole Locking Vibration

This feature provides tactile feedback when the rangefinder successfully locks onto the flag pole, ensuring you have the correct distance to the target and not background objects.

Easy to Target



Easy targeting with a short vibration confirm.

Figure 8: Visual representation of flagpole locking.



Figure 9: View through the rangefinder showing flagpole lock.

Speed Measurement

The rangefinder can also measure the speed of moving objects, useful for various applications beyond golf.

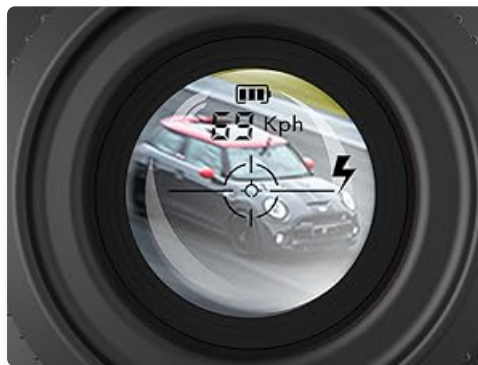


Figure 10: View through the rangefinder showing speed measurement.

Official Product Videos

Watch these official videos from REDTIGER-Direct for more insights into the rangefinder's features and operation:

REDTIGER Golf Rangefinder Overview

Your browser does not support the video tag.

Description: A comprehensive overview of the REDTIGER Golf Rangefinder's design and core functionalities.

REDTIGER Golf Rangefinder with Slope Feature

Your browser does not support the video tag.

Description: This video demonstrates the slope compensation feature, showing how it adjusts distances for elevation changes.

MAINTENANCE

- **Cleaning:** Use the provided lens cloth to gently wipe the lenses. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the rangefinder in its portable soft case when not in use to protect it from dust, moisture, and impacts.
- **Water Resistance:** The device has an IP54 waterproof rating, meaning it is protected against dust and splashing water. Avoid submerging the device in water.



Figure 11: The rangefinder is designed with IP54 water resistance.

TROUBLESHOOTING

If you encounter any issues with your REDTIGER Golf Rangefinder, please try the following:

- **No Power:** Ensure the battery is fully charged.
- **Inaccurate Readings:** Check that the lenses are clean and free from smudges. Ensure you are targeting the correct object (e.g., flag pole, not background trees).
- **Display Issues:** If the display is dim or unclear, ensure the battery is charged. Adjust the eyepiece for optimal clarity.

For further assistance, please refer to the detailed user manual or contact REDTIGER customer support.

SPECIFICATIONS

Feature	Specification
Brand	REDTIGER
Model Name	C001
Measuring Range	5-1200 yards
Accuracy	±0.5 yards
Magnification	7X
Display	Transflective LCD
Battery Type	Rechargeable Lithium
Charging Port	USB-C (5V/2A output)
Water Resistance Level	IP54 (Waterproof)
Item Weight	6.4 Ounces
Product Dimensions	4.17"L x 1.61"W x 2.36"H

WARRANTY & SUPPORT

REDTIGER provides a **Two-Year Unconditional Warranty** and **Lifetime Technical Support** for its golf rangefinders. If you have any problems with this rangefinder or require technical assistance, please reach out to the REDTIGER after-

sale team.

For more information, visit the [REDTIGER Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BVFP6KXC>

More documents and user manuals: <https://manuals.plus/>