Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > PUTORSEN /
- > PUTORSEN Full Motion TV Wall Mount Instruction Manual for 32-70 Inch TVs

PUTORSEN BOBVFXQ7VC

PUTORSEN Full Motion TV Wall Mount Instruction Manual

Model: B0BVFXQ7VC

INTRODUCTION

Thank you for choosing the PUTORSEN Full Motion TV Wall Mount. This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your new TV wall mount. Please read this manual thoroughly before installation and retain it for future reference.

This wall mount is designed for flat and curved LED, LCD, and Plasma televisions ranging from 32 to 70 inches, with a maximum weight capacity of 40 kg (88 lbs). It supports VESA mounting patterns from 100x100mm to 400x400mm.

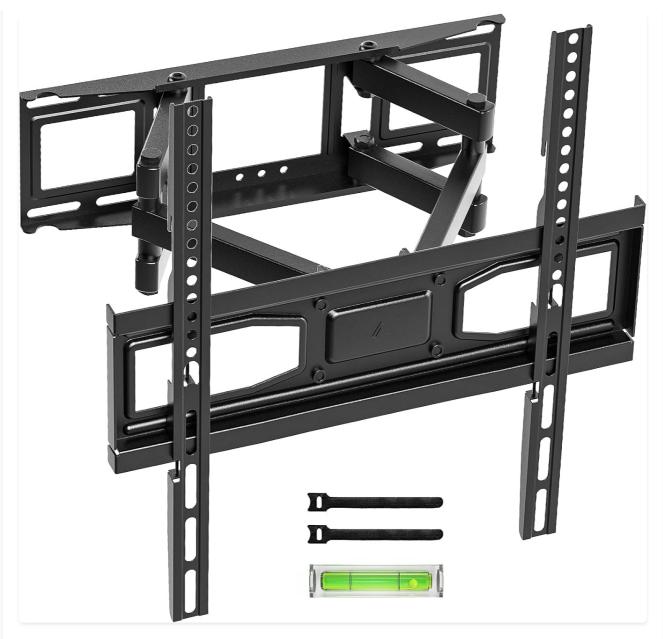


Image: Overview of the PUTORSEN Full Motion TV Wall Mount components, including the wall plate, articulating arms, and TV brackets.

IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or property damage:

- Weight Capacity: Do not exceed the maximum weight capacity of 40 kg (88 lbs).
- TV Size: Ensure your TV size is within the recommended range of 32 to 70 inches.
- VESA Compatibility: Verify your TV's VESA pattern matches the mount's supported range (100x100mm to 400x400mm).
- Wall Type: This mount is designed for installation on solid concrete walls, brick walls, or wood stud walls. DO NOT mount onto drywall alone.
- **Professional Installation:** If you are unsure about the installation process or wall type, consult a qualified professional.
- **Tools:** Use appropriate tools and wear safety gear during installation.
- Assembly: Ensure all components are securely fastened before mounting the TV.

SETUP AND INSTALLATION

Follow these steps for a secure and easy installation:

- 1. **Verify Wall Type:** Identify if your wall is solid concrete, brick, or wood stud. Mark the drilling locations accurately.
- 2. **Attach Wall Plate:** Secure the wall plate to your chosen wall type using the appropriate hardware provided. Ensure it is level.
- 3. **Attach TV Brackets:** Fasten the vertical TV brackets to the back of your television using the screws that match your TV's VESA pattern.
- 4. **Mount TV:** Carefully lift the TV with the attached brackets and hook them onto the wall plate. Secure the TV to the wall plate using the locking mechanisms.



Image: Illustration showing the easy installation process and compatible wall types: concrete, brick, and wood stud. A warning against mounting on drywall alone is visible.

VESA Compatibility

This mount supports a wide range of VESA patterns. Ensure your TV's VESA dimensions are within the

following:

- 100x100mm
- 100x150mm
- 150x100mm
- 100x200mm
- 200x100mm
- 150x150mm
- 200x200mm
- 300x200mm
- 300x300mm
- 400x300mm
- 400x400mm

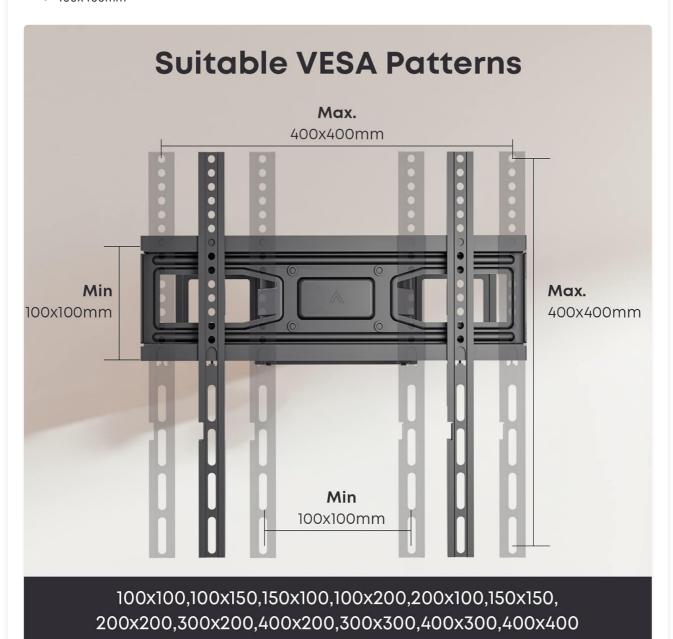


Image: A diagram illustrating the minimum (100x100mm) and maximum (400x400mm) VESA patterns supported by the TV wall mount.

OPERATING THE MOUNT

The PUTORSEN Full Motion TV Wall Mount offers flexible viewing options:

- **Swivel:** The mount can swivel up to ±60° left or right, allowing you to adjust the viewing angle from different positions in the room.
- **Tilt:** Adjust the screen vertically with a tilt range of +3° upwards and -15° downwards to reduce glare and optimize your viewing experience.
- Level Adjustment: Fine-tune the TV's level by ±3° after installation for a perfectly straight display.
- Extension: The mount can retract to 67mm from the wall and extend up to 355mm, providing flexibility for viewing and access to cables.
- Cable Management: Integrated cable management features help keep your cables organized and out of sight.



Image: A woman adjusting a wall-mounted TV, demonstrating the tilt (+3° to -15°) and extension (up to 355mm) features for comfortable viewing.



Image: A diagram illustrating the optimal viewing angle adjustments, including the ±60° swivel and the ±90° rotation at the arm joints.



Image: A family comfortably watching television, demonstrating the versatility of the full motion wall mount in achieving an ideal viewing angle.

MAINTENANCE

To ensure the longevity and safe operation of your TV wall mount:

- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.
- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Lubrication:** If movement becomes stiff over time, a small amount of silicone-based lubricant can be applied to the articulating joints.

TROUBLESHOOTING

• Mount is difficult to move/adjust: Ensure that all adjustment screws are not overtightened. Loosen them slightly if necessary to allow for smoother movement, then re-tighten to a secure but not

excessively stiff level. Apply gentle, even pressure when moving the TV.

- **TV** is not level: Use the ±3° level adjustment feature to fine-tune the TV's horizontal position. If the wall plate itself is not level, you may need to re-install it.
- Mount feels unstable: Immediately remove the TV from the mount. Re-check all wall and TV
 connections. Ensure the wall type is appropriate and that all anchors and screws are fully engaged and
 tightened according to the installation instructions. Verify the TV's weight and VESA pattern are within
 the mount's specifications.

SPECIFICATIONS

Brand	PUTORSEN
Model	B0BVFXQ7VC
Compatible TV Sizes	32 - 70 inches
Weight Capacity	40 kg (88 lbs)
VESA Compatibility	100x100, 100x150, 150x100, 100x200, 200x100, 150x150, 200x200, 300x200, 300x300, 400x300, 400x400 mm
Mounting Type	Wall Mount
Movement Type	Articulating (Full Motion)
Tilt Angle	+3° / -15°
Swivel Angle	±60°
Level Adjustment	±3°
Extension from Wall	67mm (min) to 355mm (max)
Material	Alloy Steel
Color	Black

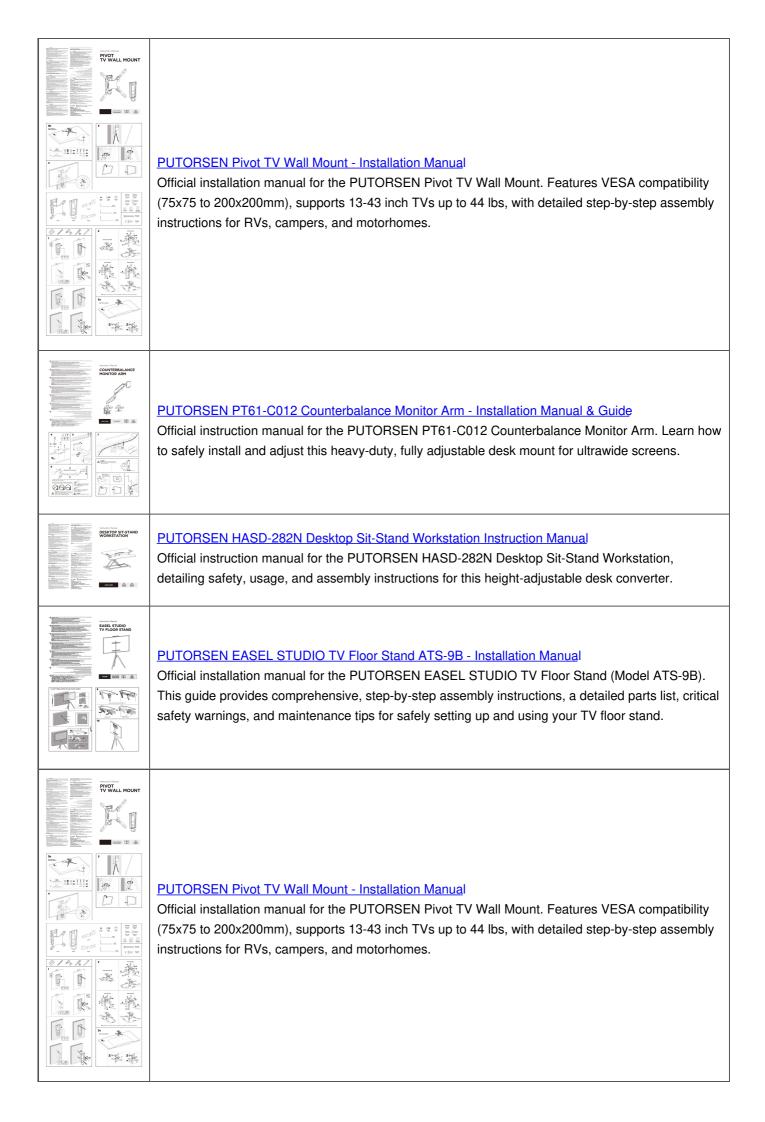


Image: The robust six-arm design of the PUTORSEN TV wall mount, emphasizing its sturdy construction and maximum weight capacity of 40 kg (88 lbs).

WARRANTY AND SUPPORT

Manufacturer's Warranty: Please refer to the warranty information provided with your purchase documentation or contact PUTORSEN directly for details regarding the product warranty.

Customer Support: For technical assistance, missing parts, or any questions regarding your PUTORSEN TV wall mount, please contact the manufacturer's customer support. Contact information can typically be found on the product packaging or the official PUTORSEN website.





PUTORSEN PT61-C012 Counterbalance Monitor Arm - Installation Manual & Guide

Official instruction manual for the PUTORSEN PT61-C012 Counterbalance Monitor Arm. Learn how to safely install and adjust this heavy-duty, fully adjustable desk mount for ultrawide screens.