



[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Streetwear NS38065PP01 Analog Digital Watch User Manual

## Fastrack NS38065PP01

# Fastrack Streetwear NS38065PP01 Analog Digital Watch User Manual

Model: NS38065PP01

## INTRODUCTION

This manual provides comprehensive instructions for the Fastrack Streetwear NS38065PP01 Analog Digital Watch. It covers initial setup, operational procedures, maintenance guidelines, troubleshooting common issues, and detailed product specifications. Please read this manual thoroughly to ensure proper use and longevity of your watch.



Image: Front view of the Fastrack Streetwear NS38065PP01 watch, showcasing its blue dial, digital displays, and black plastic strap.

## PRODUCT FEATURES

- **Analog-Digital Display:** Combines traditional analog timekeeping with multi-function digital features.
- **Blue Dial:** Features a distinct blue dial with clear digital readouts.
- **100M Water Resistance:** Suitable for swimming and showering, but not for deep-sea diving.
- **Durable Plastic Strap:** Constructed with a sturdy and lightweight plastic strap for comfort.
- **Integrated Functions:** Includes alarm, stopwatch, calendar, and LED backlight.



Image: Angled front view of the Fastrack Streetwear NS38065PP01 watch, emphasizing the blue dial and integrated digital display.

## SETUP

### 1. Button Identification



Image: Side view of the watch, highlighting the control buttons and the crown.

- **MODE Button (Bottom Left):** Cycles through different functions (Time, Alarm, Stopwatch, Date).
- **RESET Button (Top Left):** Used for resetting values or selecting options during setting.
- **ST/STP Button (Top Right):** Starts and stops the stopwatch, or adjusts values during setting.
- **LIGHT Button (Bottom Right):** Activates the LED backlight.
- **Crown (Middle Right):** Used to set the analog time.

## 2. Setting Analog Time

1. Pull the crown out to the first position.
2. Rotate the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back in to its normal position to start the analog movement.

## 3. Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display starts flashing, indicating setting mode.

2. Use the **RESET** button to cycle through the settings (seconds, hours, minutes, month, date, day).
3. Use the **ST/STP** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

## OPERATING INSTRUCTIONS

---

### 1. Using the Stopwatch

1. Press the **MODE** button until "CHRONO" or "STW" appears on the digital display.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.

### 2. Setting and Using the Alarm

1. Press the **MODE** button until "ALARM" or "AL" appears on the digital display.
2. Press the **RESET** button to select the hour or minute setting. The selected value will flash.
3. Use the **ST/STP** button to adjust the flashing value.
4. Press the **MODE** button to confirm the alarm time and exit setting mode.
5. To activate/deactivate the alarm, press the **ST/STP** button while in alarm mode (without flashing). An alarm icon will appear/disappear.

### 3. Using the Backlight

Press the **LIGHT** button (bottom right) to illuminate the digital display for a few seconds in low-light conditions.

## MAINTENANCE

---



Image: Rear view of the watch, displaying the stainless steel case back and strap attachment.

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is rated for 100M water resistance. This means it is suitable for swimming and showering. Do not operate buttons or the crown while the watch is wet or submerged to prevent water ingress. Avoid exposure to hot water or steam, as this can compromise the seals.
- **Battery Replacement:** When the display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and maintain water resistance.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Analog hands not moving.	Battery low or depleted.	Replace battery at an authorized service center.
Digital display is blank or dim.	Battery low or depleted.	Replace battery at an authorized service center.
Incorrect time/date displayed.	Time/date not set correctly.	Refer to "Setting Analog Time" and "Setting Digital Time and Date" sections.
Water inside the watch.	Seals compromised or buttons operated underwater.	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.
Buttons are unresponsive.	Dirt or debris lodged in buttons, or internal malfunction.	Clean buttons gently. If issue persists, contact customer support.

## SPECIFICATIONS

- **Model Number:** NS38065PP01
- **Display Type:** Analog-Digital
- **Movement Type:** Quartz
- **Water Resistance Depth:** 100 Metres
- **Case Diameter:** 51 Millimetres
- **Band Material:** Plastic
- **Band Colour:** Black
- **Dial Colour:** Blue
- **Item Weight:** 75.58 Grams
- **Battery:** 1 Lithium Polymer (included)
- **Crystal Material:** Acrylic
- **Manufacturer:** Titan Company Limited
- **Country of Origin:** India

## WARRANTY INFORMATION

**Warranty Policy:** 12 months manufacturer warranty on manufacturing defects.

**How to Avail Warranty:** For availing warranty, show only your original invoice at the Titan Authorized Service Center. No Warranty card is required; warranty can be availed by showing the invoice at the service center.

## CUSTOMER SUPPORT

For more details or other service-related queries, please contact Fastrack/Titan customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** [customercare@titan.co.in](mailto:customercare@titan.co.in)

