

Rock&Rocker Electric High Pressure Washer -02

Rock&Rocker Electric Pressure Washer User Manual

Model: Electric High Pressure Washer -02

INTRODUCTION

Thank you for choosing the Rock&Rocker Electric Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before using the product and keep it for future reference.

Key Features:

- High Power Pressure Washing: Up to 2150 PSI and 2.6 GPM for effective cleaning.
- Versatile Nozzles: Includes 0°, 15°, 25°, and 40° quick-connect nozzles for various tasks.
- Integrated Foam Cannon: 16.9oz soap tank for rich foam application.
- Portable Design: Wheeled and handlebar design for easy mobility.
- Hose Reel: Onboard hose reel for convenient storage and kink prevention.
- Extended Reach: 25 ft pressure hose for wider cleaning area.

SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE), including eye protection, when operating the pressure washer.
- Never direct the spray at people, pets, or electrical devices.
- Ensure all connections are secure before starting the unit.
- Do not operate the pressure washer if the power cord or hose is damaged.
- Keep children and bystanders away from the operating area.

- Use only clean water for operation.
- Always disconnect the power supply before performing any maintenance or cleaning.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Rock&Rocker Electric Pressure Washer Unit
- High-Pressure Hose (25 ft)
- Spray Gun with Wand
- Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon / Soap Bottle (16.9 oz)
- Power Cord with GFCI Protection
- User Manual (this document)



Image: The Rock&Rocker Electric Pressure Washer, showcasing its main unit, integrated hose reel, and spray gun.



Image: A coiled black high-pressure hose, an essential component for the pressure washer.



Image: A close-up of the spray gun's trigger handle, showing the ergonomic design.



Image: The foam cannon attachment with its translucent soap bottle, used for applying detergent.



SETUP

1. **Assemble the Handle:** Attach the handle to the main unit using the provided screws.
2. **Connect High-Pressure Hose:** Securely connect one end of the high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Ensure connections are tight to prevent leaks.
3. **Connect Water Supply:** Attach a standard garden hose (not included) to the water inlet on the pressure washer. Ensure the water supply is clean and free of debris. Turn on the water supply fully.
4. **Connect Power:** Plug the GFCI-protected power cord into a grounded electrical outlet. Press the "RESET" button on the GFCI plug if necessary.
5. **Purge Air from System:** Before turning on the power, squeeze the spray gun trigger to allow water to flow through the system and purge any trapped air. Continue until a steady stream of water emerges from the nozzle.

OPERATING INSTRUCTIONS

Starting the Pressure Washer:

1. Ensure the water supply is fully open and air has been purged from the system.
2. Turn the pressure washer's power switch to the "ON" position. The motor will start briefly and then shut off. This is normal, as the motor only runs when the trigger is squeezed.
3. Select the desired quick-connect nozzle and insert it into the spray gun wand until it clicks into place.
4. Point the spray gun at the cleaning surface and squeeze the trigger to begin spraying.

Nozzle Selection:

- **0° (Red):** Pin-point jet for intense cleaning of small, tough spots. Use with extreme caution.
- **15° (Yellow):** Narrow, high-pressure spray for stubborn dirt on hard surfaces.
- **25° (Green):** Medium-pressure spray for general cleaning of most surfaces.
- **40° (White):** Wide, low-pressure spray for delicate surfaces or rinsing.

Using the Foam Cannon:

1. Fill the foam cannon bottle with appropriate pressure washer detergent.
2. Attach the foam cannon to the spray gun wand.
3. Squeeze the trigger to apply foam to the desired surface.
4. After applying foam, remove the foam cannon and attach a rinsing nozzle (e.g., 25° or 40°) to rinse the surface.



Image: The pressure washer spray gun in action, demonstrating the powerful water jet.



Image: A Rock&Rocker pressure washer being used to clean house siding, showing its effectiveness.

MAINTENANCE

- **After Each Use:**

- Turn off the power switch and disconnect the power cord.
- Turn off the water supply.
- Squeeze the spray gun trigger to release any remaining pressure.
- Disconnect the garden hose and high-pressure hose.
- Drain all water from the pump, hoses, and accessories to prevent freezing damage.
- Clean the nozzles and filter screen at the water inlet.

- **Storage:** Store the pressure washer in a dry, frost-free environment.
- **Pump Protection:** For prolonged storage, especially in cold climates, consider using a pump protector/antifreeze solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply; GFCI tripped; Power switch off	Check power connection; Reset GFCI; Turn power switch ON
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump	Ensure full water flow; Clean nozzle; Purge air from system
Water leaks	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings
Motor cycles on/off	Air in pump; Water supply restricted	Purge air from system; Check water inlet filter and hose for kinks

SPECIFICATIONS

- **Brand:** Rock&Rocker
- **Model Number:** Electric High Pressure Washer -02
- **Power Source:** AC Electric
- **Maximum Pressure:** 2150 PSI
- **Maximum Flow Rate:** 2.6 GPM
- **Item Weight:** 21.7 pounds (9.84 Kilograms)
- **Hose Length:** 25 feet (7.6 Meters)
- **Product Dimensions:** 21"L x 13"W x 13"H
- **Tank Volume (Foam Cannon):** 16.9 oz (approx. 0.13 Gallons)
- **Color:** Green
- **Certifications:** CSA (as per product information)

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official Rock&Rocker website or contact their customer support. A digital version of this user manual is available for download:

[Download User Manual
\(PDF\)](#)

If you encounter any issues or have questions not covered in this manual, please contact Rock&Rocker customer support for assistance.