

[Manuals.plus](#) /

› [O2COOL](#) /

› O2COOL Rechargeable USB Clip Fan (Model FC35B03) Instruction Manual

O2COOL FC35B03

O2COOL Rechargeable USB Clip Fan (Model FC35B03) Instruction Manual

Your comprehensive guide to setting up, operating, and maintaining your O2COOL fan.

INTRODUCTION

Thank you for choosing the O2COOL Rechargeable USB Clip Fan. This portable fan is designed to provide personal cooling with its adjustable gooseneck, powerful clip, and three-speed operation. This manual will guide you through the proper use and care of your fan to ensure optimal performance and longevity.

PRODUCT COMPONENTS

Before use, please ensure all components are present:

- Fan Head with Grille and Blades
- Flexible Gooseneck
- Integrated Clip Base
- Control Button (On/Off/Speed)
- Micro-USB Charging Port
- USB Charging Cable (included)

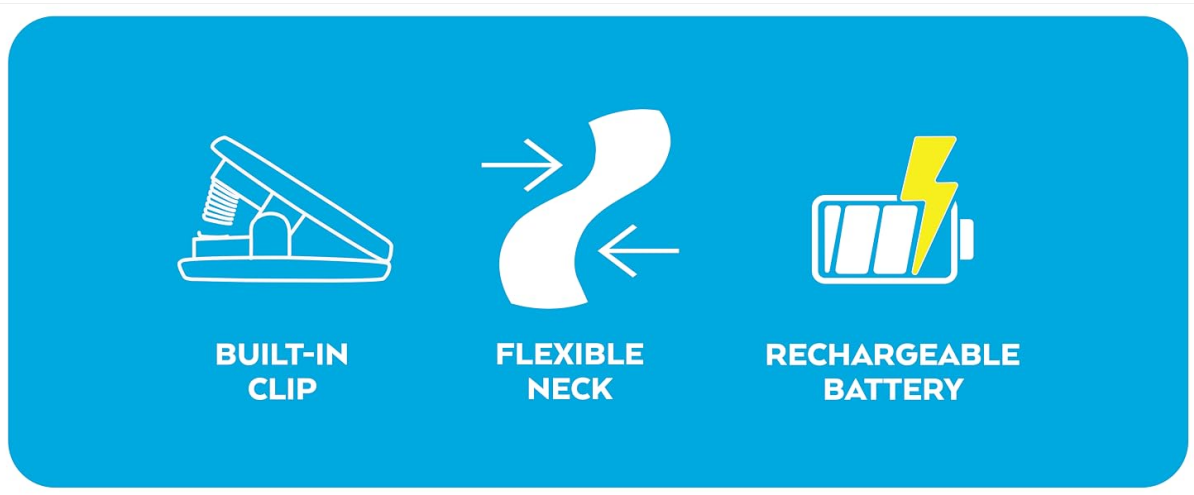


Image: O2COOL Gooseneck Clip Fan highlighting its key features: built-in clip, flexible neck, and rechargeable battery.

SETUP

1. Charging the Battery

For optimal performance, fully charge the fan before first use. The fan is equipped with a rechargeable battery that provides portable cooling.

1. Locate the Micro-USB charging port on the clip base of the fan.
2. Connect the included USB charging cable to the fan's Micro-USB port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, USB wall adapter, power bank).
4. The charging indicator light will illuminate (color may vary by model, typically red or blue) to show that the fan is charging.
5. Once fully charged, the indicator light may change color or turn off. A full charge typically takes several hours.

2. Installation and Placement

The versatile design allows for various placement options:

- **Using the Clip:** The heavy-duty clip allows you to securely attach the fan to desks, shelves, strollers, or other surfaces up to a certain thickness. Ensure the clip has a firm grip to prevent the fan from falling.
- **Desk Stand:** The clip base also functions as a stable desk stand when placed on a flat surface.



Image: A close-up view of the fan's robust clip, designed for secure attachment to various surfaces.

3. Adjusting the Gooseneck

The flexible gooseneck allows for multi-directional airflow. Gently bend and position the gooseneck to direct the fan head to your desired angle. Ensure the gooseneck is securely positioned to maintain the fan's direction.

FLEXIBLE NECK

Adjustable neck makes it easy to move the fan head for directional airflow. Adjust your fan to the optimal position for comfortable cooling breeze.



O2COOL®

Image: The O2COOL fan demonstrating its flexible gooseneck, allowing for precise airflow direction.

Your browser does not support the video tag.

Video: Official O2COOL Gooseneck Clip Fan product video demonstrating its features and versatility.

OPERATING INSTRUCTIONS

The fan features a single control button for power and speed adjustments.



Image: Front view of the O2COOL fan, highlighting the control button on the fan head.

1. **Power On / Speed 1:** Press the control button once to turn the fan on at the lowest speed setting.
2. **Speed 2:** Press the control button a second time for medium speed.
3. **Speed 3:** Press the control button a third time for high speed.
4. **Intermittent Mode:** Some models may feature an intermittent speed setting. If available, press the button a fourth time to activate this mode.
5. **Power Off:** Press the control button again (after the highest speed or intermittent mode) to turn the fan off.

MAINTENANCE

Proper maintenance ensures the longevity and efficiency of your fan.

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not immerse the fan in water or use harsh chemicals. For dust accumulation on the fan blades, use a dry cloth or compressed air.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. Ensure the battery is partially charged (around 50%) before storage to help preserve battery health.
- **Battery Care:** Avoid completely draining the battery frequently. Recharge the fan when the airflow noticeably weakens.

TROUBLESHOOTING

If you encounter issues with your O2COOL fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB cable.
Weak or no airflow.	Low battery charge.	Recharge the fan.
	Fan grille or blades are obstructed/dirty.	Clean the fan grille and blades as described in the Maintenance section.
Gooseneck does not hold position.	Gooseneck is overextended or worn.	Reposition the gooseneck to a less extreme angle. If the issue persists, contact customer support.
Fan makes unusual noise.	Obstruction in fan blades.	Turn off and unplug the fan. Carefully check for and remove any obstructions.

SPECIFICATIONS

Feature	Detail
Model Number	FC35B03
Brand	O2COOL
Material	Plastic
Color	White
Item Weight	10.56 ounces
Fan Speeds	3 speeds + Intermittent mode
Battery Type	Rechargeable (type not specified, assumed Li-ion)
Charging Port	Micro-USB
UPC	755247215525

SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to the product:

- Do not insert fingers or any objects into the fan grille while the fan is operating.
- Keep hair, clothing, and jewelry away from moving parts.
- Do not use the fan near water or in excessively humid environments.
- Do not attempt to disassemble or modify the fan. Repairs should only be performed by qualified personnel.
- Keep out of reach of small children.
- Use only the provided USB cable or a certified equivalent for charging.

- Do not expose the battery to extreme temperatures or direct sunlight.

WARRANTY AND SUPPORT

For warranty information, please refer to the product packaging or the official O2COOL website. If you require technical support or have questions not covered in this manual, please contact O2COOL customer service through their official channels.