

Summit Appliance ASDG2411

Summit 24-inch Beverage Center Instruction Manual

Model: **ASDG2411** | Brand: **Summit Appliance**

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating this appliance to ensure safe and efficient use. Retain this manual for future reference.

- Ensure the appliance is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is intended for household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

2. PRODUCT OVERVIEW

The Summit ASDG2411 is a 24-inch wide beverage center designed for both built-in and freestanding applications. It features a shallow depth and ADA compliant height, making it versatile for various installations. With a 3.25 cu.ft. capacity, it offers ample space for beverages, complemented by a stainless steel interior and a double-pane tempered glass door.

Key Features:

- **ADA Compliant Design:** 32-inch height for installation under lower counters, with adjustable legs for standard counter spaces.
- **Shallow Depth:** 17.75-inch depth ideal for limited spaces.
- **Built-in or Freestanding:** Front-breathing design for built-in use, fully finished black cabinet for freestanding.
- **Stainless Steel Interior:** Durable and easy to clean.
- **Digital Thermostat:** Precise temperature control from 36°F to 43°F.
- **Dimmable LED Lighting:** Interior lighting with adjustable brightness.

- **Cantilevered Glass Shelves:** Flexible storage options.
- **Safety Features:** Open door alarm, high temperature alarm, factory-installed lock.
- **Frost-Free Operation:** Automatic defrosting for convenience.



Figure 2.1: Front view of the Summit 24-inch Beverage Center (ASDG2411).

3. SETUP AND INSTALLATION

3.1 Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the appliance for any shipping damage. Report any damage immediately to the retailer.
- Ensure all components listed in the "What's in the Box" section are present.

3.2 Placement

- This beverage center can be installed as a built-in unit or used freestanding.
- For built-in installation, ensure adequate ventilation around the unit. The front-breathing design allows for flush installation under counters.
- Position the appliance on a flat, stable surface capable of supporting its weight when fully loaded.
- Avoid direct sunlight or heat sources.



Figure 3.1: Example of a built-in installation in a kitchen setting.

3.3 Leveling

- The unit comes with adjustable leveling legs. Adjust them to ensure the appliance is level.
- The ADA compliant height is 32 inches, but the adjustable legs and sliding kickplate allow for an overall height up to 34 inches to fit standard counter spaces.

3.4 Electrical Connection

- Connect the appliance to a dedicated, properly grounded 115V AC/60Hz electrical outlet.
- Do not use extension cords or adapter plugs.

4. OPERATING INSTRUCTIONS

The control panel is located at the bottom of the interior, accessible through the glass door.



Figure 4.1: Interior view with digital control panel and LED lighting.

4.1 Power On/Off

- Press and hold the **Power button** (*symbol resembling a circle with a vertical line*) on the control panel to turn the unit on or off.

4.2 Temperature Control

- Use the **Plus (+)** and **Minus (-)** buttons to adjust the desired temperature.
- The temperature range is 36°F to 43°F (2°C to 6°C).
- The digital display shows the current internal temperature.
- The unit features a Temperature Memory Function, which restores the last set temperature after a power interruption.

4.3 Lighting Control

- Press and hold the **Light button** (*symbol resembling a light bulb*) to turn the interior LED lighting on or off.
- The LED lighting is dimmable, allowing adjustment of brightness.

4.4 Shelving Adjustment

- The beverage center features cantilevered glass shelves that can be adjusted to different heights.
- To adjust, carefully lift the front of the shelf and slide it out. Reinsert into desired rail slots.
- Ensure shelves are securely seated before placing items on them.

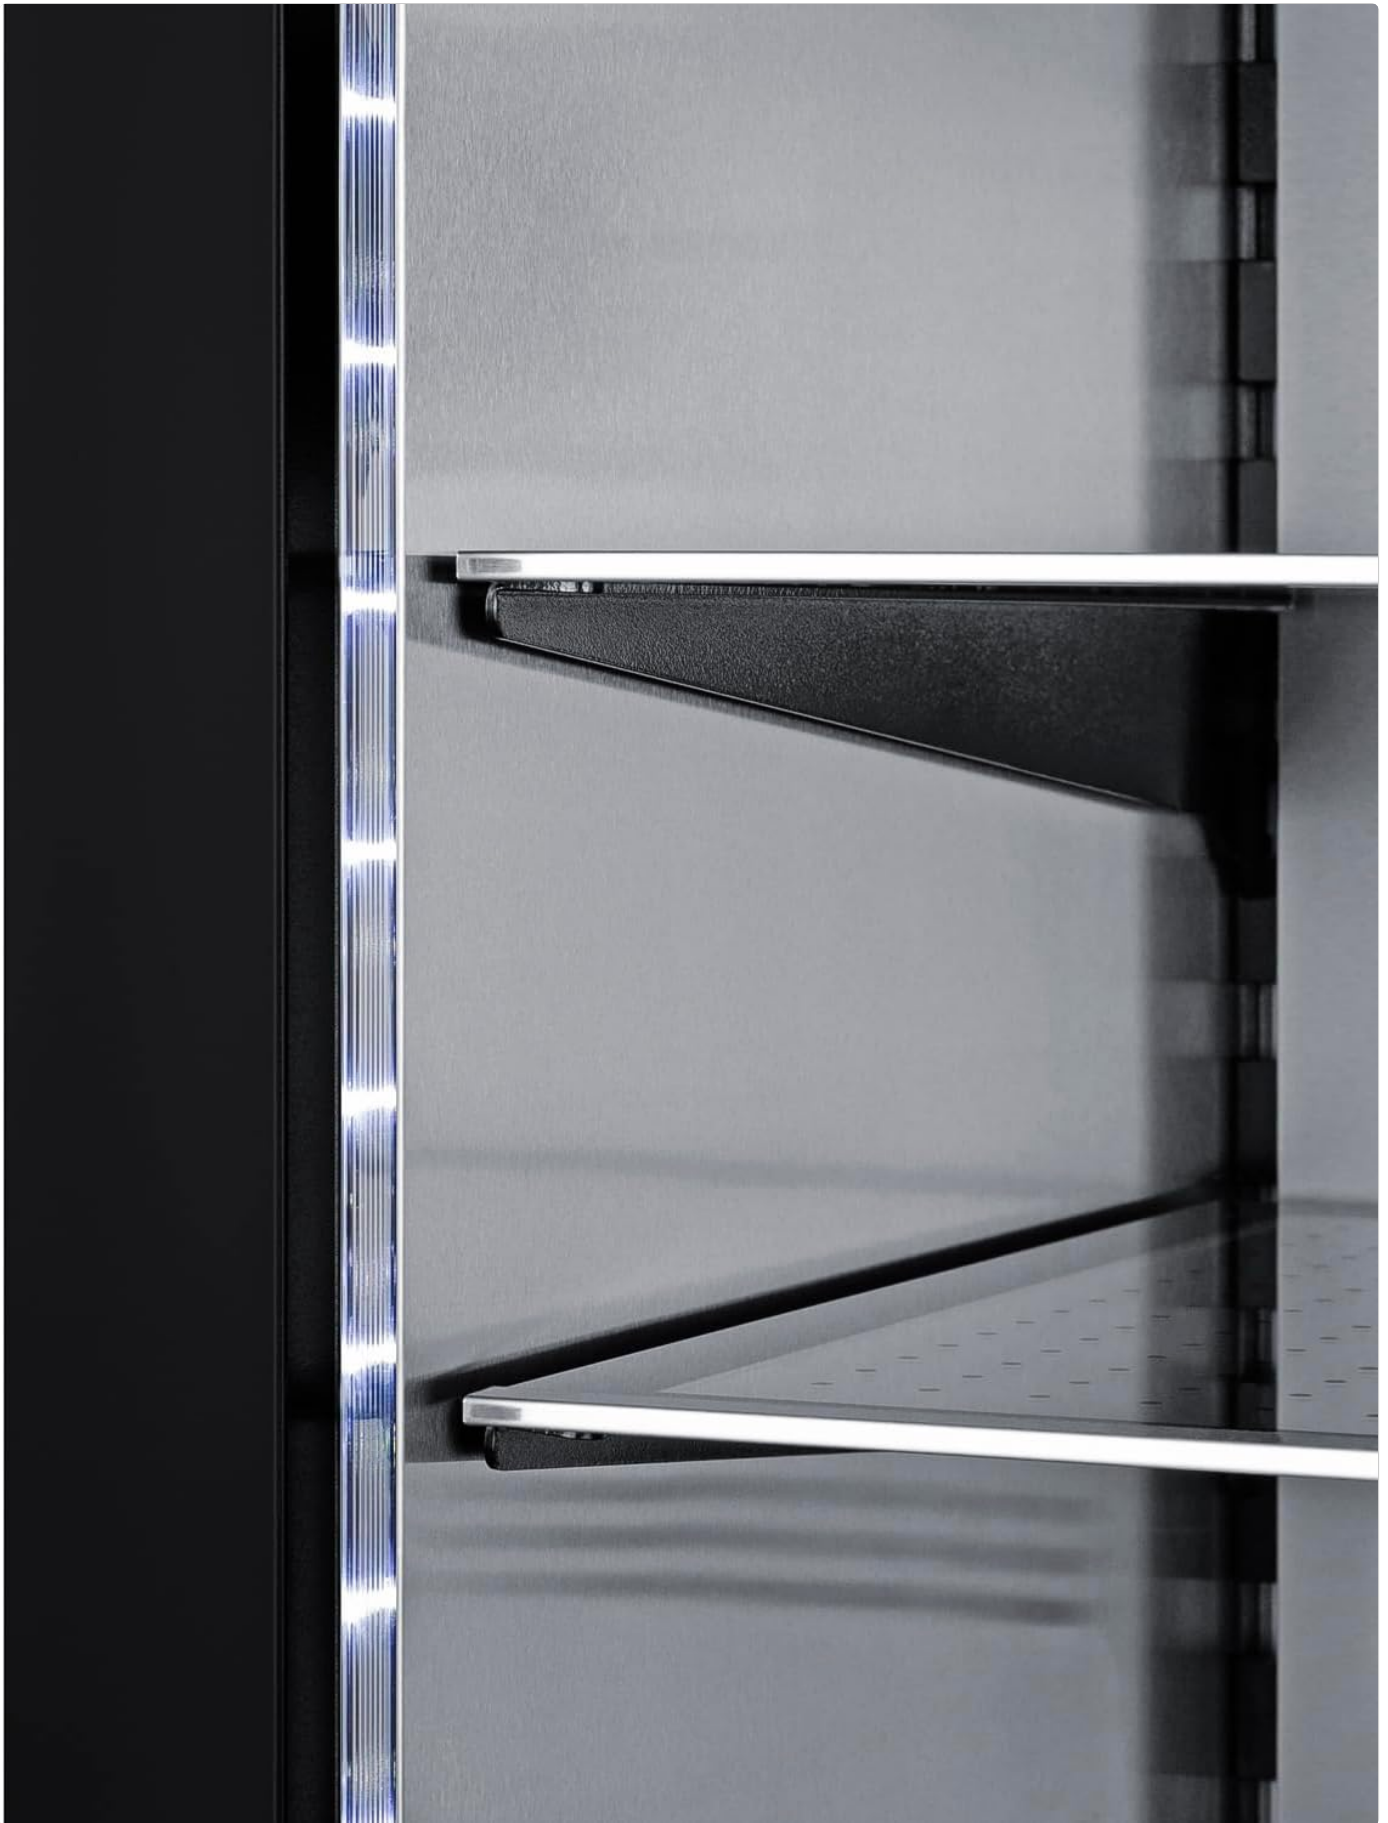


Figure 4.2: Detail of adjustable cantilevered glass shelves.

4.5 Door Alarm

- An audible alarm will sound if the door is left open for an extended period, helping to conserve energy and maintain internal temperature.
- Close the door to silence the alarm.

4.6 Sabbath Mode

- This appliance includes a Sabbath Mode feature. Refer to the full product manual for specific instructions on activating and deactivating this mode.

5. MAINTENANCE

5.1 Cleaning the Interior

- Unplug the appliance before cleaning.
- Clean the interior with a mild detergent and warm water. Avoid abrasive cleaners.
- Wipe down the stainless steel surfaces with a soft cloth.
- The glass shelves can be removed for thorough cleaning.

5.2 Cleaning the Exterior

- Clean the exterior with a soft cloth and a mild, non-abrasive cleaner.
- For stainless steel surfaces, use a stainless steel cleaner and polish in the direction of the grain.
- Clean the door gasket regularly to ensure a tight seal.

5.3 Defrosting

- This unit features frost-free operation, eliminating the need for manual defrosting.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power, tripped circuit breaker, power cord not fully plugged in.	Check power supply, reset breaker, ensure plug is secure.
Temperature is not cold enough.	Door not closed properly, excessive door openings, warm items recently added, thermostat set too high, poor ventilation.	Ensure door is sealed, reduce door openings, allow time for new items to cool, adjust thermostat, ensure proper airflow.
Door alarm sounds frequently.	Door left ajar, door gasket dirty or damaged.	Close door completely, clean or replace door gasket.
Excessive noise.	Appliance not level, items vibrating inside, fan obstruction.	Adjust leveling legs, rearrange items, check for fan obstruction.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Summit Appliance
Model Info	ASDG2411
Item Weight	120 pounds

Feature	Detail
Product Dimensions (HxWxD)	32 x 23.38 x 17.75 inches
Capacity	3.25 Cubic Feet (92 L)
Annual Energy Consumption	285 kWh/year
Noise Level	33.1 dB
Installation Type	Built-in, Freestanding
Special Features	Adjustable, ADA Compliant, Dimmable LED Lighting, Open Door Alarm, High Temperature Alarm, Sabbath Mode, Temperature Memory Function, Factory Installed Lock
Color	Silver/Black
Voltage	115 Volts (AC)
Number of Shelves	3
Shelf Type	Sliding, Cantilevered Glass
Defrost System	Frost Free
Door Hinges	Right (Reversible, refer to full manual)
Included Components	Beverage Center

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Summit Appliance website. Do not attempt to repair the appliance yourself; contact qualified service personnel.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question