

Vileda 168467

Vileda RinseClean Spin Mop & Bucket System Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Vileda RinseClean Spin Mop & Bucket System. Please read all instructions carefully before first use to ensure proper function and longevity of the product.

The Vileda RinseClean Spin Mop System is designed to provide efficient floor cleaning by separating clean and dirty water. Its microfibre mop head effectively removes over 99% of bacteria with just water, and it is suitable for various hard floor types.

PRODUCT COMPONENTS

The Vileda RinseClean Spin Mop & Bucket System includes the following components:

- Mop handle (extendable)
- Microfibre mop head
- Bucket with built-in wringer and dual-chamber technology
- Red plastic base for mop head attachment




RINSECLEAN™

COMPLETE SET / ENSEMBLE COMPLET

Dual-chamber bucket with built-in foot-activated wringer
Seau à double réservoir avec pédale et essoreuse intégrée



Reusable 100% microfibre mophead
Tête de vadrouille réutilisable en microfibre à 100 %

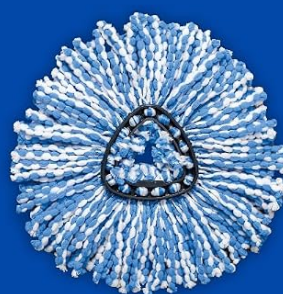

Red plastic base
Base en plastique rouge



Extendable handle 48"
Manche télescopique 48"


Figure 1: Overview of the Vileda RinseClean Spin Mop System components.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Vileda RinseClean Spin Mop System:

1. **Assemble the Mop Handle:** Twist the grey handle section to the right to unlock and pull down to extend. Twist to the left to lock the handle in place.
2. **Attach the Mop Head:** Screw the red plastic base onto the mop handle. Align the microfibre mop head with the red plastic base and push down until it clicks securely into place.

TO ASSEMBLE / POUR ASSEMBLER

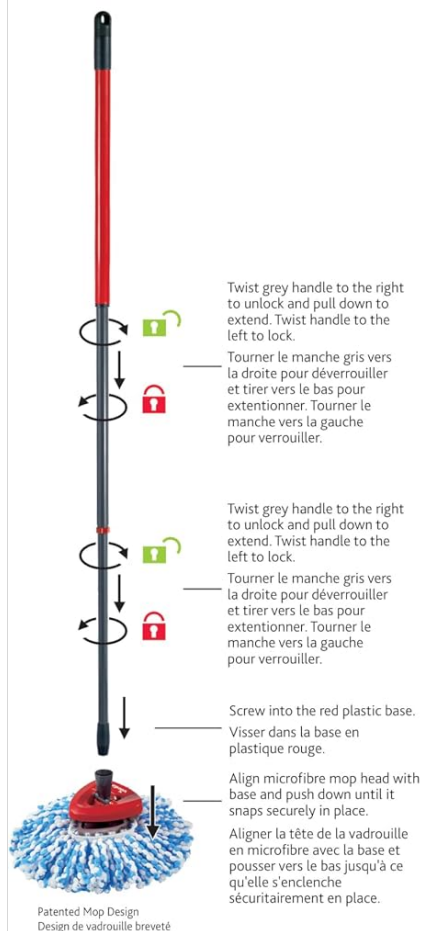

INSTRUCTIONS



Remove clean water tank from the bucket.
Retirez le réservoir d'eau propre du seau.



Ensure water release lever is down in closed position. Remove blue fill cap and fill tank with water. (Optional: Add favorite cleaning solution to water.)
S'assurer que le levier de libération d'eau est abaissé en position fermé. Enlevez le bouchon de remplissage bleu et remplir le réservoir avec de l'eau. (Facultatif: ajoutez votre solution de nettoyage préférée à l'eau.)



After filling, close the blue fill cap and place clean water tank back into bucket.
Après le remplissage, refermez le bouchon de remplissage bleu et remettez le réservoir d'eau propre dans le seau.



Lift the red water release lever to open. The rinsing chamber will fill with clean water. Red lever can remain open.
Soulevez le levier de libération de l'eau (rouge) pour l'ouvrir. Le réservoir de rinçage se remplira d'eau propre. Le levier rouge peut rester ouvert.



Place mop inside rinsing chamber. Twist mop to wet/rinse the mop head.
Placez la vadrouille dans le réservoir de rinçage. Tournez la vadrouille pour mouiller ou rincer la tête de la vadrouille.



Place wet mop inside wringer.
Placez la vadrouille mouillée dans l'essoreuse.



Loosely hold handle vertically to allow mop to spin.
Tenir le manche à la verticale sans serrer pour permettre à la vadrouille de tourner.



Push pedal to customize moisture level.
Appuyez sur la pédale pour ajuster le niveau d'humidité.



Mop floor and repeat steps 5-8 as needed.
Nettoyez vos planchers. Au besoin, répétez les étapes 5 à 8.

USE & CARE UTILISATION ET ENTRETIEN



To remove
Step on mop strands and tilt handle away from your foot to separate base from mop head.

Pour retirer
Posez votre pied sur les franges et inclinez le manche pour séparer la base de la tête de la vadrouille.



To wash*
Machine or hand wash in warm water and lay flat to dry.
*Do not use fabric softeners or bleach.

Pour laver*
Lavable à la machine ou à la main à l'eau chaude. Faire sécher à plat.

*Ne pas javelliser ou utiliser d'assouplissant.



To replace
Align microfibre mop head with base and push down until it snaps securely in place.


Pour remplacer
Alignez la tête de vadrouille en microfibre avec la base et poussez vers le bas jusqu'à ce qu'elle soit en place.

Figure 2: Visual guide for assembling the mop handle and attaching the mop head.

OPERATING INSTRUCTIONS

To use your Vileda RinseClean Spin Mop System for cleaning:

- 1. Prepare the Bucket:** Remove the clean water tank from the bucket. Fill the blue fill cap with clean water (up to 2.7 liters). You may add your preferred cleaning solution to the water. Ensure the water release lever is down in the closed position.
- 2. Wet the Mop Head:** Lift the red water release lever to open it, allowing clean water to fill the mop rinsing chamber. Place the mop head into the rinsing chamber to wet it.
- 3. Wring the Mop Head:** Transfer the wet mop head to the wringer basket. Loosely hold the handle vertically and press the foot pedal to spin and wring out excess water. Adjust pedal pressure for desired mop dampness.
- 4. Mop the Floor:** Proceed to mop your floors. The triangular mop head design allows for reaching into corners and under furniture.
- 5. Rinse and Repeat:** After mopping a section, rinse the dirty mop head in the clean water rinsing chamber (ensure the water release lever is open). Then wring it out again using the foot pedal. Repeat steps 2-4 as needed.

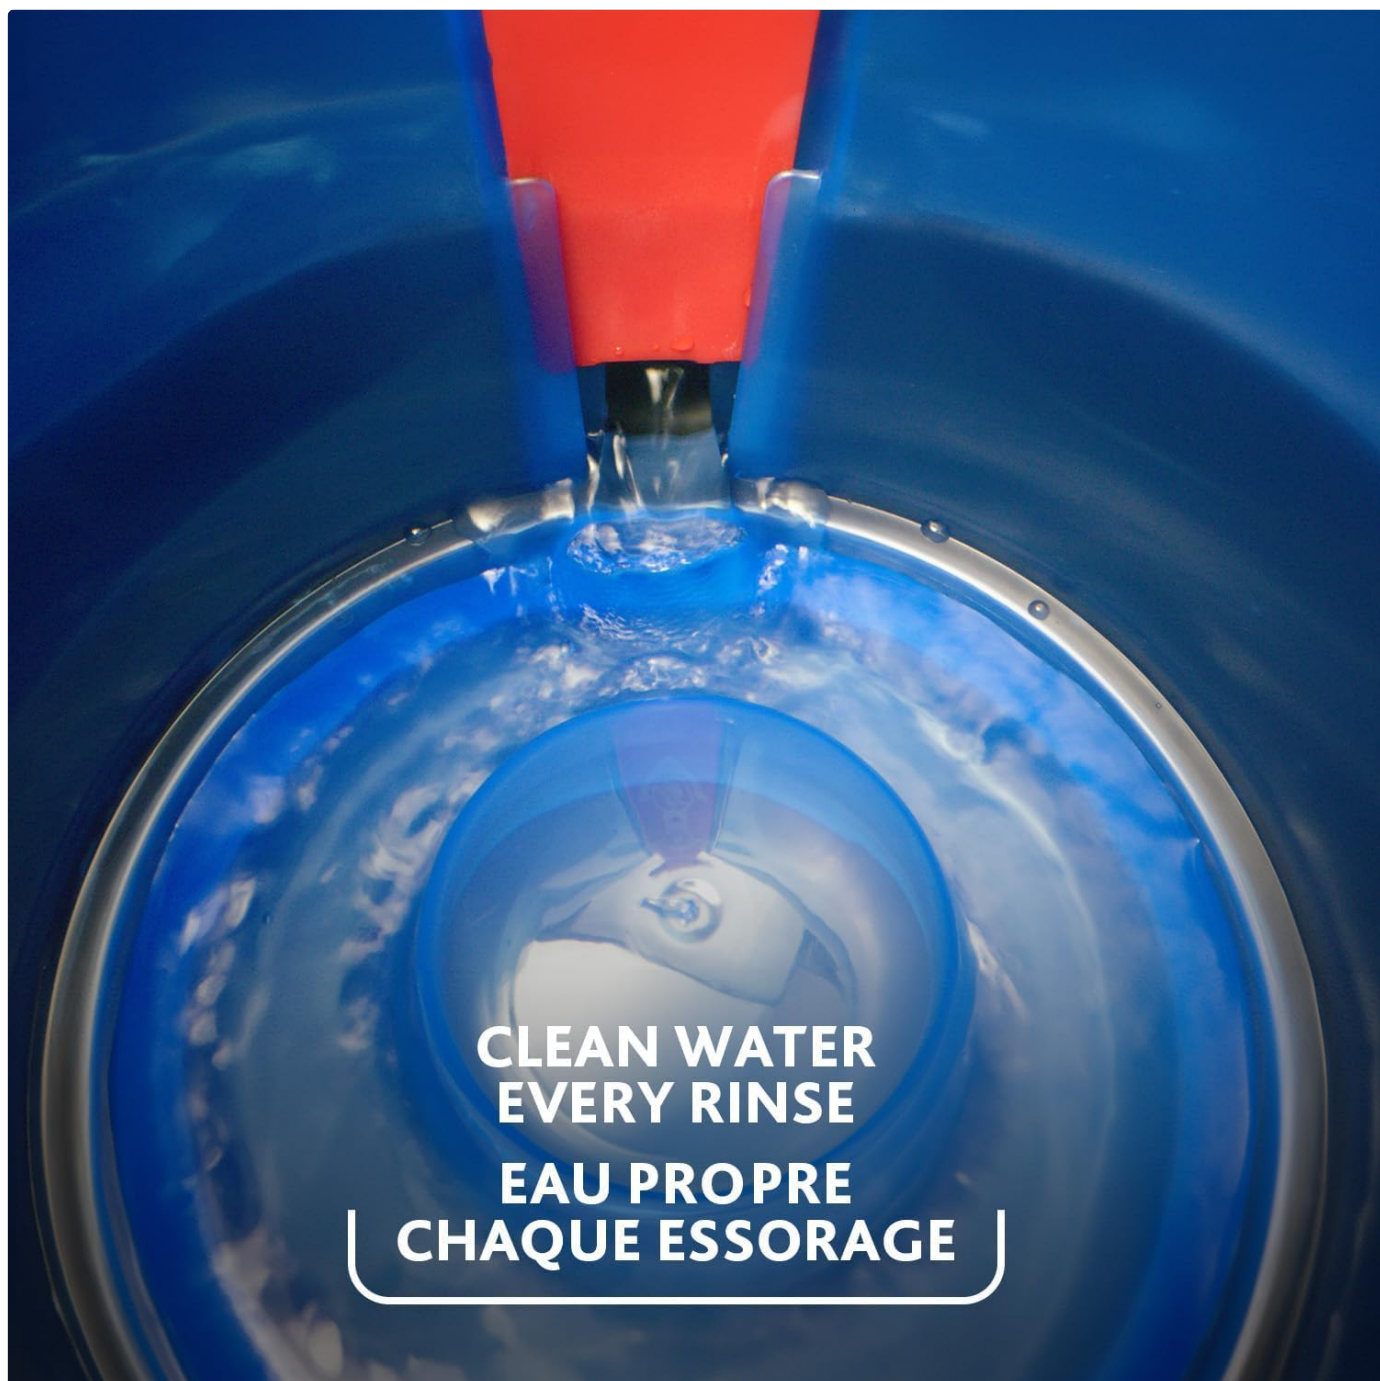

**CLEAN WATER
EVERY RINSE
EAU PROPRE
CHAQUE ESSORAGE**

Figure 3: Clean water is dispensed for each rinse, ensuring continuous clean water for mopping.



Figure 4: Hands-free wringing mechanism for convenience.

MAINTENANCE

Mop Head Care

The microfibre mop head is machine washable and reusable. For best results, replace the mop head every 6 months or as needed.

- Machine wash or hand wash in warm water.
- Do not use fabric softeners or bleach, as these may deteriorate the microfibre.
- Air dry the mop head.

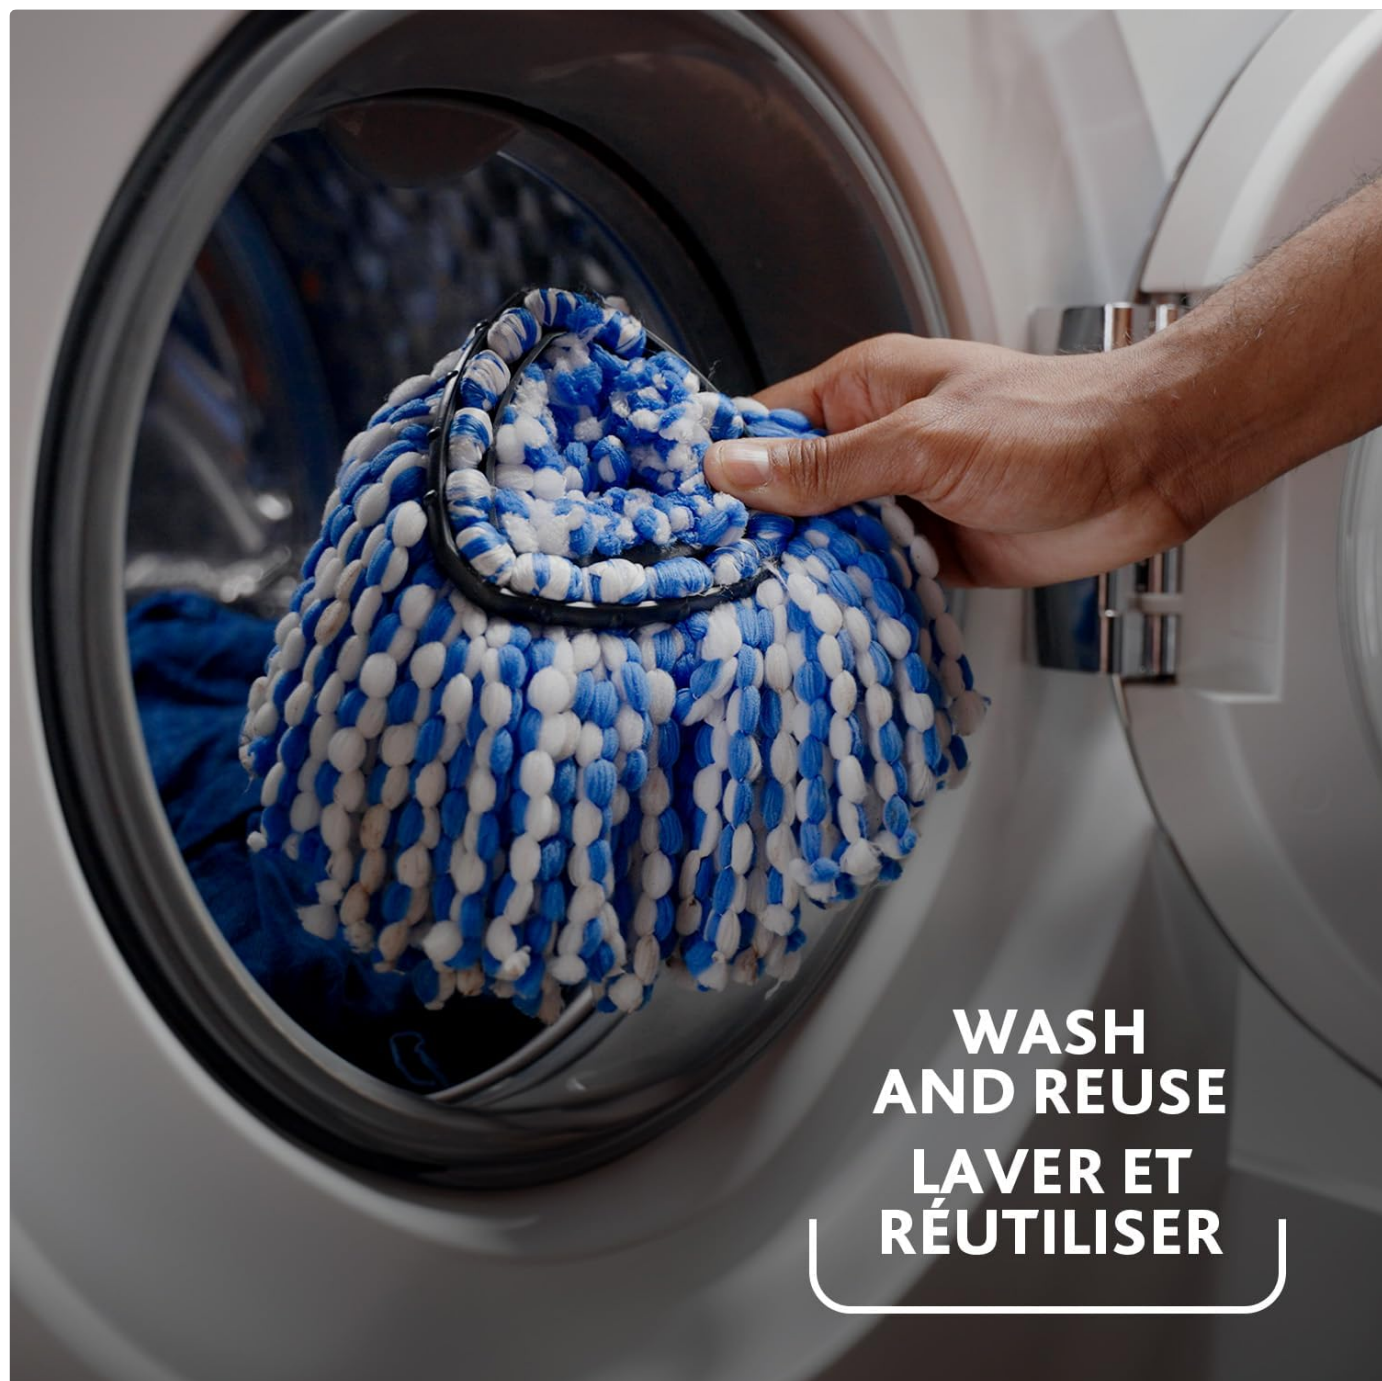


Figure 5: The mop head is washable and reusable.

Bucket Care

After each use, empty the dirty water tank. Rinse both the clean and dirty water compartments with fresh water. Allow the bucket to air dry before storing to prevent mildew and odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop head sprays water during wringing.	Mop head not fully inserted or too wet before spinning.	Ensure the mop head is sufficiently wet, then hold it lightly on top of the spinner for a moment to allow strands to fall straight before lowering into the spinner.

Problem	Possible Cause	Solution
Mop handle spins with the mop head during wringing.	Handle is held too tightly.	Hold the handle very lightly, just enough to steady it, allowing it to spin freely with the mop head.
Mop head feels too wet after wringing.	Insufficient pedal pressure or spinning time.	Increase pedal pressure or spin the mop head for a longer duration to remove more water.
Mop head detaches during use.	Mop head not securely attached to the red plastic base.	Ensure the mop head is aligned and pushed down firmly until it clicks into place on the red plastic base.

SPECIFICATIONS

- **Model Number:** 168467
- **Color:** Black / Blue / Red
- **Material:** Microfibre, Plastic, Metal (handle)
- **Handle Type:** Telescopic
- **Mop Head Material:** Microfibre
- **Clean Water Tank Volume:** 2.7 liters
- **Item Weight:** 2.7 kg
- **Special Features:** Reusable, Wringing Mechanism, Dual-Chamber Bucket

HARD FLOOR SAFE SÉCURITAIRE POUR LES PLANCHERS DURS



Do not use harsh chemicals such as bleach. Always test on an inconspicuous area first.
N'utilisez pas de produits chimiques agressifs tels que l'eau de Javel. Testez toujours dans une zone cachée.

Figure 6: The Vileda RinseClean Spin Mop is safe for use on a variety of hard floor surfaces.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and accessories, please visit the official Vileda website or contact Vileda customer service.

Official Website: www.vileda.ca

Customer Service: Refer to the contact information provided on the product packaging or the official Vileda website for your region.



REFILLS AVAILABLE RECHARGES DISPONIBLES



Figure 7: Replacement mop head refills are available for purchase.

© 2026 Vileda. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question