

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KODAK](#) /

› [Kodak 14.1 Inch Smart WiFi Digital Picture Frame Instruction Manual](#)

KODAK 1228bud-2788

Kodak 14.1 Inch Smart WiFi Digital Picture Frame Instruction Manual

Model: 1228bud-2788

INTRODUCTION

Thank you for choosing the Kodak 14.1 Inch Smart WiFi Digital Picture Frame. This device allows you to display your cherished photos and videos with ease, offering a high-resolution touch screen and convenient wireless sharing capabilities. This manual provides essential information for setting up, operating, and maintaining your digital picture frame.

Excellent Wooden Frame

Quality material design provide better product

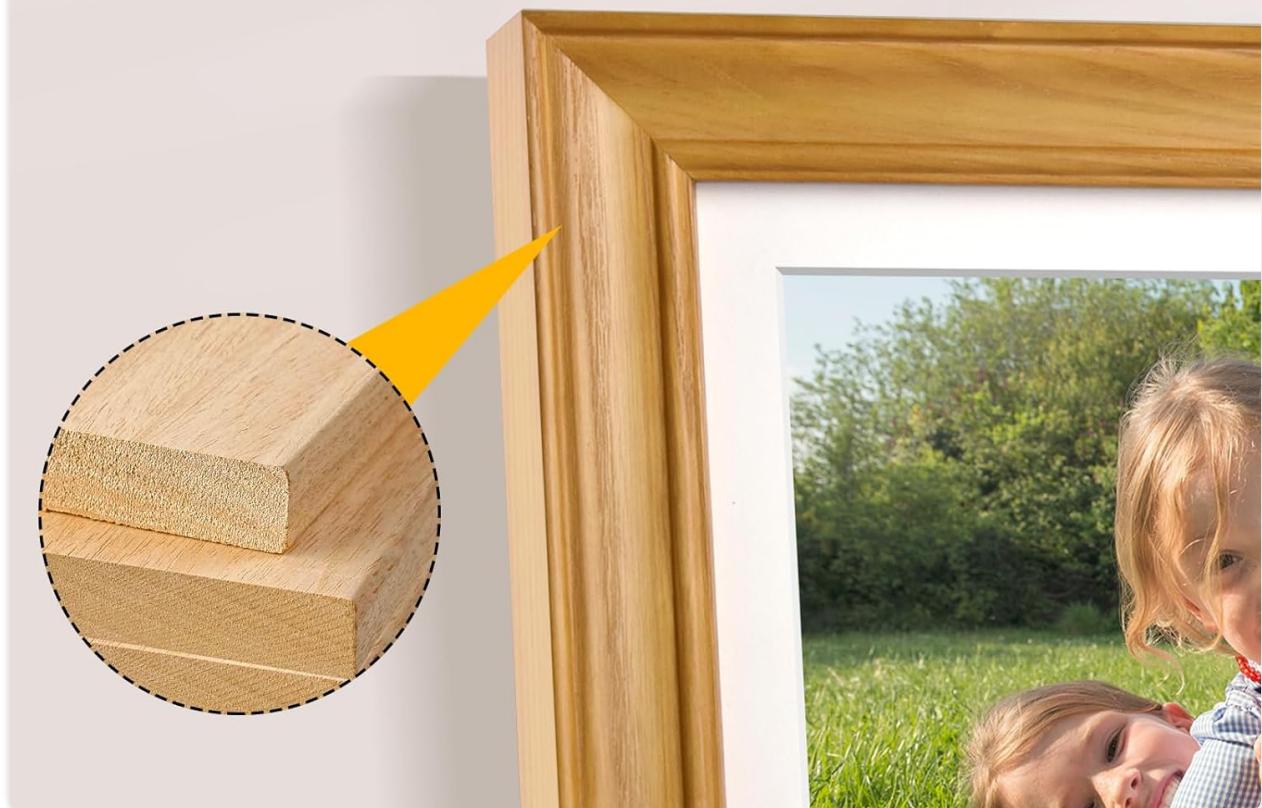


Image: The Kodak 14.1 Inch Smart WiFi Digital Picture Frame in a wooden frame, displaying a vibrant image of two women blowing bubbles, highlighting its high-resolution display.

WHAT'S IN THE BOX

Upon unboxing your Kodak Digital Picture Frame, ensure all components are present:

- Kodak 14.1 Inch Smart WiFi Digital Picture Frame
- Power Adapter
- USB Cable
- User Manual (this document)
- Detachable Stand



Image: A visual representation of the product package contents, showing the digital frame, power adapter, USB cable, and user manual.

SETUP GUIDE

- 1. Power On:** Connect the power adapter to the frame's power interface and plug it into a wall outlet. The frame will automatically power on.
- 2. Initial Configuration:** Follow the on-screen prompts to select your preferred language, time zone, and connect to a Wi-Fi network.
- 3. App Download:** Download the "KODAK Classic Frame" app from the Google Play Store (for Android) or the App Store (for iOS) on your smartphone.
- 4. Account Registration:** Open the app and register for a new account.
- 5. Device Binding:** On your frame, navigate to the settings to find the unique 9-digit device code or QR code. Enter this code into the app to bind your smartphone to the digital picture frame.

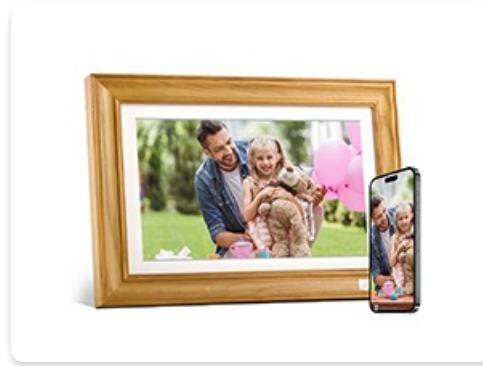


Image: A smartphone screen showing the KODAK Classic Frame app, ready for photo and video sharing.



Image: The digital frame shows a QR code and a 9-digit device code, which are used to connect the frame to the mobile application for photo sharing.

OPERATING INSTRUCTIONS

Displaying Photos and Videos

The 14.1-inch 1920x1080 IPS high-resolution touchscreen ensures clear image display from all angles. The frame supports automatic slideshows with various animation modes.

- **Touchscreen Navigation:** Swipe left or right to manually browse through photos and videos. Tap the screen to reveal options like play, crop, rotate, and delete.
- **Automatic Slideshow:** The frame is pre-configured for automatic slideshows. You can customize the interval and transition effects in the settings.
- **Auto-Rotate:** The frame automatically adjusts the orientation of photos and videos whether placed in landscape or portrait mode.



Image: A hand touching the screen of the digital frame, demonstrating its interactive touchscreen functionality.

Sharing Content via App

Use the "KODAK Classic Frame" app to send photos and short videos (max 15 seconds) to your frame from anywhere.

- **Select Content:** In the app, choose the photos or videos you wish to send.
- **Send to Frame:** Select your bound frame as the destination and initiate the upload.
- **Multiple Users:** One frame can be connected to multiple user accounts, allowing friends and family to share memories.



Image: A smartphone screen showing a family photo being wirelessly sent to the digital picture frame, illustrating the ease of sharing.

Media Management

The frame includes 32GB of built-in memory, capable of storing up to 40,000 photos. You can also expand storage.

- **External Storage:** The frame supports SD cards and USB drives for additional storage or direct media playback. Insert the card/drive into the designated slot on the back of the frame.

- **Organizing Content:** Use the frame's interface or the app to create albums, delete unwanted media, or sort content.



Image: The digital frame with icons representing photos, videos, and 32GB of built-in memory, indicating its storage capabilities.

ADDITIONAL FEATURES

- **Clock & Calendar:** Display the current time and date, or a full calendar view, alongside your photos.
- **Weather Forecast:** Get real-time weather updates directly on your frame.
- **Background Music:** Play music during slideshows for an enhanced viewing experience.
- **Customized Settings:** Adjust various settings such as sleep mode, captions, zoom & crop, and more to personalize your frame.

Video: A demonstration of how to add photos or videos to the Kodak Digital Picture Frame from anywhere using the mobile app.

Video: A user review highlighting the excellent picture quality and ease of use of the Kodak Digital Picture Frame, including touchscreen interactions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Software Updates:** Periodically check for and install software updates via the frame's settings or the mobile app to ensure optimal performance and access to new features.
- **Placement:** Place the frame on a stable surface or mount it securely on a wall. Avoid direct sunlight or extreme temperatures.

TROUBLESHOOTING

- **Frame Not Powering On:** Ensure the power adapter is securely connected to both the frame and a working power outlet.
- **Wi-Fi Connection Issues:** Verify your Wi-Fi password and ensure the frame is within range of your router. Restarting both the frame and your router may resolve the issue.
- **Photos Not Displaying:** Check if the photos are in a supported format (e.g., JPEG, PNG). Ensure sufficient storage space is available on the frame or external storage.
- **App Connectivity Problems:** Confirm that the device code is correctly entered and that both your smartphone and the frame are connected to the internet.

SPECIFICATIONS

- **Screen Size:** 14.1 Inches
- **Resolution:** 1920x1080 (1080p)
- **Display Type:** IPS Touch Screen
- **Internal Memory:** 32GB
- **Connectivity:** WiFi
- **Compatible Devices:** Smartphone
- **Product Dimensions:** 11 x 17 x 0.99 inches
- **Item Weight:** 5.19 pounds
- **Model Number:** 1228bud-2788



Image: The back of the digital frame, detailing the power interface, USB port, SD card slot, earphone jack, and hanging holes for versatile placement.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in the packaging or visit the official KODAK website. Protection plans are available for purchase separately to extend coverage for 2 or 3

years.

© 2023 KODAK. All rights reserved.