

## BAKEN A133

# BAKEN 10-inch Android 12 Tablet (Model A133) User Manual

Model: A133 | Brand: BAKEN

## 1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your BAKEN 10-inch Android 12 Tablet. Please read it thoroughly to ensure optimal performance and longevity of your device.

### Key Features

- **Android 12 Operating System:** Experience a personalized, secure, and user-friendly interface.
- **High-Performance Processor:** Equipped with a Quad-Core processor for smooth operation.
- **Ample Storage:** 4GB RAM and 32GB ROM, expandable up to 1TB with a TF card (not included).
- **Vibrant Display:** 10.1-inch HD 1280x800 IPS screen for clear visuals.
- **Dual Cameras:** Features front and rear cameras for photos and video calls.
- **Long-Lasting Battery:** Built-in 6000mAh battery provides extended usage time.
- **Fast Connectivity:** Supports Bluetooth 4.2 and Wi-Fi 802.11 ac/b/g/n.



Figure 1: BAKEN 10-inch Android 12 Tablet, showcasing its sleek design and dual cameras.

## 2. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- BAKEN 10-inch Android 12 Tablet
- USB Type-C Charging Cable
- Power Adapter
- User Manual



Figure 2: Included accessories with your BAKEN Tablet.

## 3. SETUP

### 3.1 Initial Charge

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the power adapter, then plug the adapter into a wall outlet. The battery indicator will show charging status.

## 3.2 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the BAKEN logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.

## 3.3 Initial Configuration

Upon first startup, follow the on-screen prompts to configure your tablet:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with your Google account or create a new one. This is necessary for downloading apps from the Google Play Store.
4. **Date & Time:** Set the correct date and time, or allow the network to set it automatically.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for device security.

## 3.4 Inserting a Micro SD Card

To expand storage, locate the Micro SD card slot on the side of the tablet. Gently insert a TF card (up to 1TB, not included) until it clicks into place. Ensure the tablet is powered off before inserting or removing the card.



Figure 3: Side view of the tablet with ports and card slot labeled.

## 4. OPERATING INSTRUCTIONS

### 4.1 Touchscreen Navigation

The tablet features a responsive touchscreen. Use standard Android gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens, menus, or web pages.
- **Pinch-to-Zoom:** Zoom in or out on images and web content.
- **Long Press:** Access contextual menus or move app icons.

### 4.2 App Management

- **Downloading Apps:** Open the Google Play Store app, search for desired applications, and tap "Install."
- **Uninstalling Apps:** Long-press an app icon on the home screen or app drawer, then drag it to the "Uninstall" option, or go to Settings > Apps > Select App > Uninstall.

### 4.3 Camera Usage

The tablet is equipped with dual cameras. Open the Camera app to capture photos or record videos. Switch between front and rear cameras using the icon on the screen.



Figure 4: Utilize dual cameras for video calls and photography.

### 4.4 Connectivity

- **Wi-Fi:** Access Settings > Network & Internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Access Settings > Connected devices > Bluetooth to pair with Bluetooth-enabled accessories like headphones or speakers.

### 4.5 Battery Management

To maximize battery life:

- Adjust screen brightness to a comfortable level.
- Close unused applications running in the background.
- Turn off Wi-Fi or Bluetooth when not in use.
- Enable Battery Saver mode in Settings > Battery.



**LONG LASTING BATTERY LIFE**

Suitable for reading movie, and music appreciation during long time commuting and traveling.

<b>6hrs</b> Website Browse	<b>5hrs</b> HD video	<b>4hrs</b> Game	<b>8hrs</b> Music	<b>72hrs</b> Standby
-------------------------------	-------------------------	---------------------	----------------------	-------------------------

Figure 5: The 6000mAh battery provides extended usage for various activities.

#### 4.6 Product Overview Video

Your browser does not support the video tag.

Video 1: An official overview of the BAKEN 10.1 Inch Android 12 Tablet, highlighting its key features and design.

## 5. MAINTENANCE

### 5.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, as they may damage the device.

### 5.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to Settings > System > System update.

### 5.3 Storage Management

To maintain optimal performance, periodically manage your tablet's storage. Delete unnecessary files, uninstall unused apps, and move large media files to an external TF card if applicable. You can check storage usage in Settings > Storage.

## 6. TROUBLESHOOTING

If you encounter issues with your tablet, try the following solutions:

- **Tablet Not Turning On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen Frozen/Unresponsive:** Press and hold the Power button for approximately 10-15 seconds to force a restart.
- **Wi-Fi Connectivity Issues:** Restart your Wi-Fi router and the tablet. Forget the network in tablet settings and reconnect.
- **Slow Performance:** Close background apps, clear cache, free up storage space, and restart the tablet.
- **Factory Reset:** As a last resort, if software issues persist, you can perform a factory reset. Go to Settings > System > Reset options > Erase all data (factory reset). **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

## 7. SPECIFICATIONS

Detailed technical specifications for your BAKEN Tablet A133:

Feature	Specification
Brand	BAKEN
Model Name	D10A
Item Model Number	A133
Operating System	Android 12
Screen Size	10.1 inches
Screen Resolution	1280 x 800 pixels (IPS)
Processor Brand	Allwinner

Feature	Specification
Number of Processors	4 (Quad-Core)
RAM	4 GB (2+2) DDR SDRAM
Internal Storage (ROM)	32 GB Flash Memory
Expandable Storage	Up to 1 TB via TF Card (not included)
Rear Camera Resolution	2 MP
Battery Capacity	6000mAh Lithium Ion
Average Battery Life	8 Hours
Wireless Type	802.11ac Wi-Fi
Bluetooth	Bluetooth 4.2
Item Weight	1.57 pounds
Product Dimensions	9.65 x 0.4 x 6 inches
Color	Blue

## 8. WARRANTY AND SUPPORT

Your BAKEN Tablet A133 comes with a 12-month warranty from the date of purchase, covering manufacturing defects. For technical support, warranty claims, or further assistance, please refer to the contact information provided in your product packaging or visit the official BAKEN store on Amazon: [BAKEN Store](#).