

[manuals.plus](#) /

› [VINABTY](#) /

› **VINABTY Replacement Remote Control User Manual for JVC and BAUHN TVs (Models RM-C3349, RM-C3354, RM-C3348, RM-C3227, ATV65UHDS-0319)**

VINABTY RM-C3349

VINABTY Replacement Remote Control User Manual

For JVC TV Models: RM-C3349, RM-C3354, RM-C3348, RM-C3227

For BAUHN 4K Ultra HD Smart TV Model: ATV65UHDS-0319



1. INTRODUCTION

This manual provides comprehensive instructions for the VINABTY replacement remote control. This remote is designed to be compatible with various JVC TV models, including RM-C3349, RM-C3354, RM-C3348, and RM-C3227, as well as the BAUHN 4K Ultra HD Smart TV ATV65UHDS-0319. It requires no programming and is ready for use after battery installation.




Figure 1.1: Angled view of the VINABTY replacement remote control.

2. SETUP

2.1 Battery Installation

The VINABTY replacement remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.

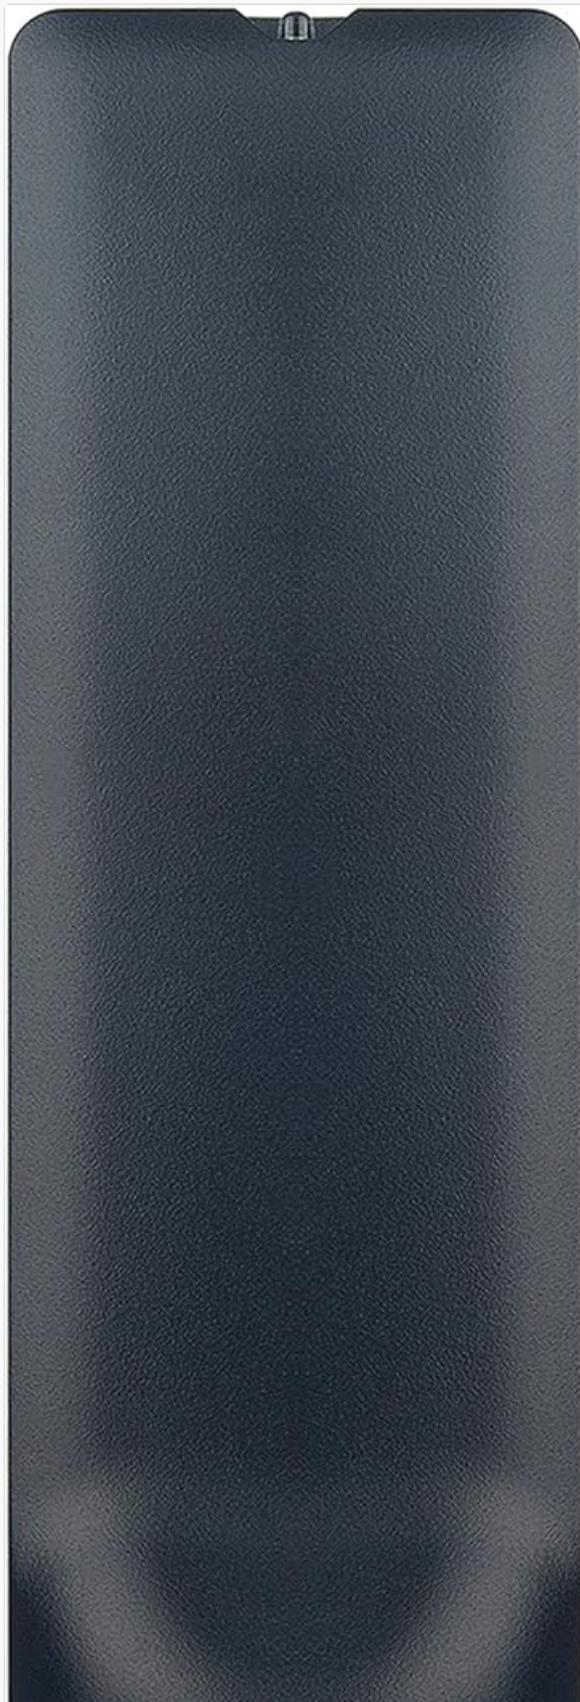

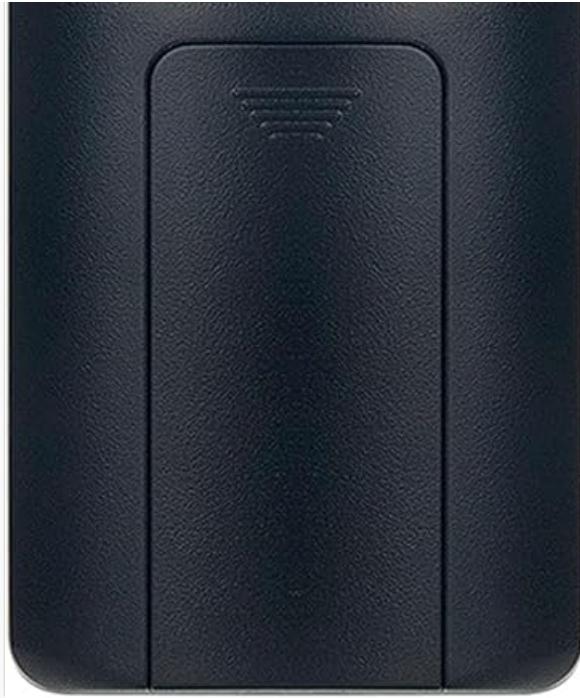


Figure 2.1: Back view of the remote control, showing the battery compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

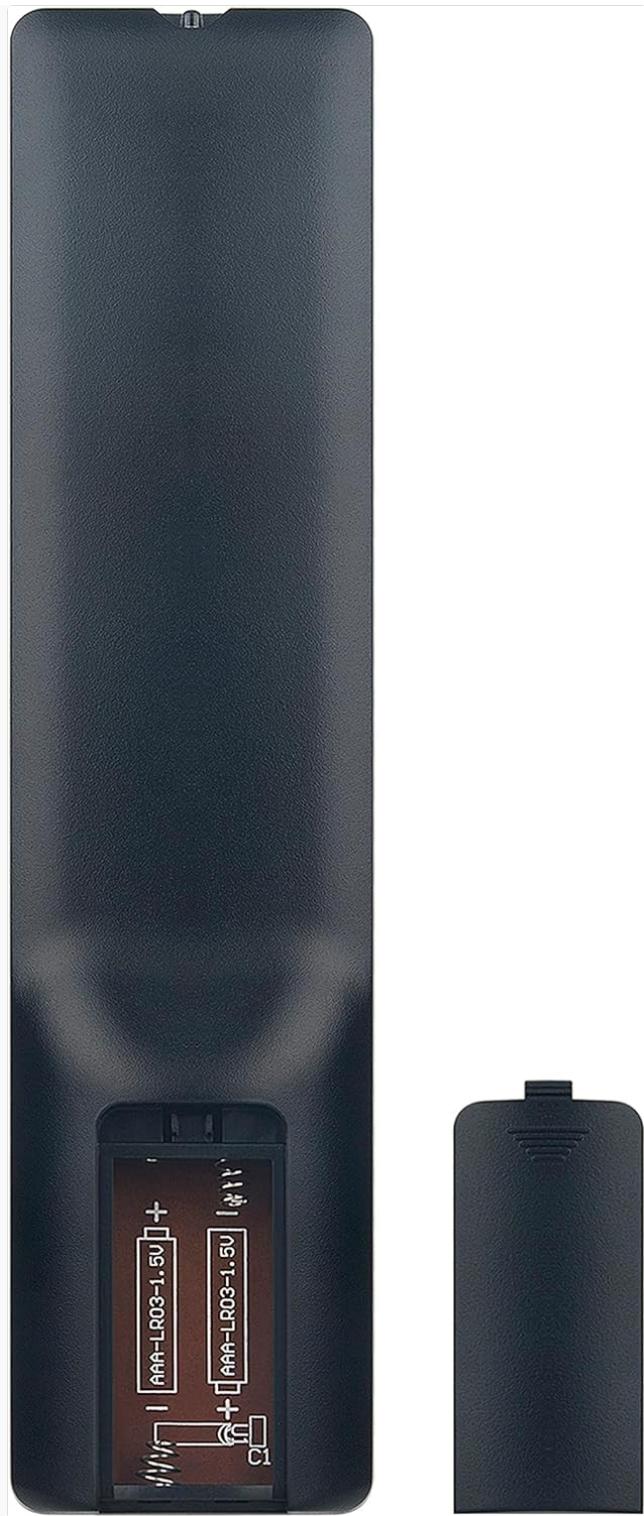


Figure 2.2: Battery compartment open with AAA batteries inserted, showing correct polarity.

4. Slide the battery cover back into place until it clicks securely.

2.2 Initial Use

This remote control requires no programming. Once batteries are installed, it is ready for immediate use with compatible JVC and BAUHN TV models.

3. OPERATING INSTRUCTIONS

The VINABTY replacement remote control provides full functionality for your compatible JVC or BAUHN television. Below is an overview of the main buttons and their functions.





Figure 3.1: Front view of the remote control with button layout.

- **Power Button ()**: Turns the TV on or off.
- **Mute Button ()**: Mutes or unmutes the TV audio.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (+/-)**: Adjusts the volume level.
- **Channel Up/Down (P ▲/P ▼)**: Changes channels sequentially.
- **Navigation Pad (▲ ▼ ◀▶, OK)**: Used to navigate menus and confirm selections.
- **Source Button ()**: Selects input sources (HDMI, AV, etc.).
- **Netflix / YouTube Buttons**: Direct access to these streaming applications.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)**: Control media playback.
- **Q.MENU / INFO / EPG / LIST**: Access quick menus, information, electronic program guide, and channel lists.

Point the remote control directly at the TV's infrared sensor for optimal performance. Ensure there are no obstructions between the remote and the TV.

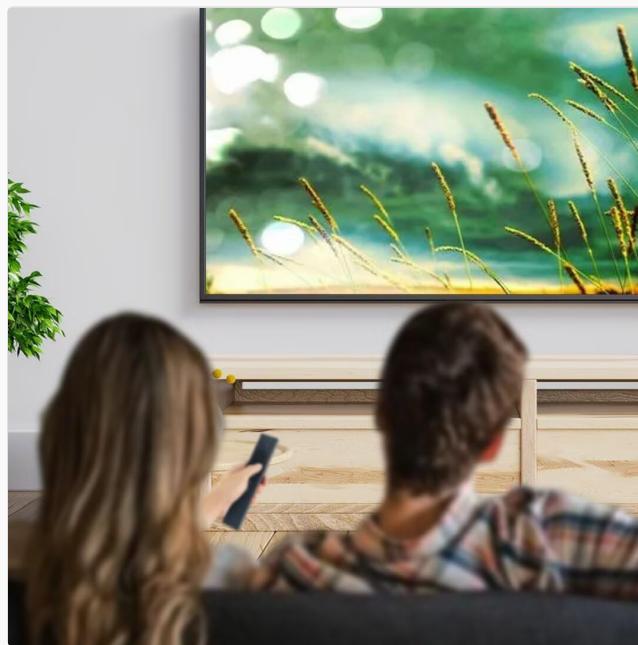


Figure 3.2: Example of remote control usage in a home environment.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in Section 2.1.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly installed with the correct polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the effective range of the TV's sensor.

- **Specific buttons not working:**

- Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris that might be interfering with button presses.
- If only certain buttons are affected, and battery replacement does not resolve the issue, the remote may require replacement.

- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure a clear line of sight to the TV.

6. SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	RM-C3349
Compatible Devices	JVC TVs (RM-C3349, RM-C3354, RM-C3348, RM-C3227), BAUHN 4K Ultra HD Smart TV (ATV65UHDS-0319)
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic design, No programming needed
Color	Black
Product Dimensions	8.1 x 2 x 0.7 inches (20.6 x 5.1 x 1.8 cm)
Item Weight	3.17 ounces (90 grams)
Max Number of Supported Devices	1

7. WARRANTY INFORMATION

For specific warranty details, please refer to the product listing or contact the seller directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

8. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the seller through the platform where the product was purchased. Provide your order number and a detailed description of the problem for efficient support.

© 2023 VINABTY. All rights reserved.