

## UTALENT TL6001

# UTALENT Cordless Hand Blender TL6001 Instruction Manual

Model: TL6001

## INTRODUCTION

---

Thank you for choosing the UTALENT Cordless Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference.

## IMPORTANT SAFETY INFORMATION

---

**WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.**

- Read all instructions before using the appliance.
- Do not operate the blender while it is charging.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades during operation to prevent injury and/or damage to the blender.
- Blades are sharp. Handle with care.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure the appliance is switched off before assembling, disassembling, or cleaning.
- Use only attachments and accessories recommended by the manufacturer.



UTALENT

**4 in 1 Cordless Hand Blender**  
Kitchen assistant ,  
you deserve it.



Image: Safety warning indicating not to operate the blender while it is charging.


## PACKAGE CONTENTS

The UTALENT Cordless Hand Blender package includes the following components:

- 1 x Blender Arm
- 1 x 600ml Measuring Vessel
- 1 x 500ml Chopper Attachment
- 1 x Egg Whisk Attachment
- 1 x USB Type-C Charging Cable



Chopper

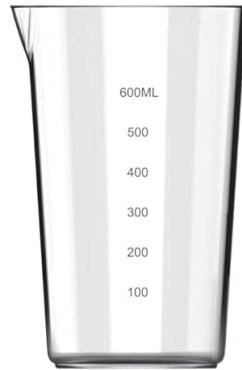

Container



Blender



Whisk

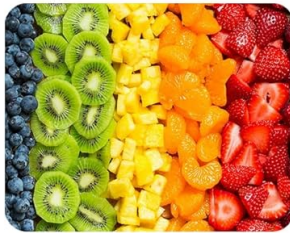


Image: All included components of the UTALENT Cordless Hand Blender system, including the chopper, measuring container, main blender unit, and whisk attachment.

## PRODUCT OVERVIEW

The UTALENT Cordless Hand Blender is a versatile kitchen tool designed for various blending, chopping, and whisking tasks. Its cordless design offers convenience and portability.

### Main Unit and Attachments

- **Blender Arm:** Detachable 8-inch arm with 4-point thickened stainless steel blades for efficient blending.
- **Chopper Attachment:** 500ml capacity for chopping ingredients like meat, nuts, fruits, vegetables, and seasonings.
- **Egg Whisk:** For whisking eggs, cream, and other light mixtures.
- **600ml Measuring Vessel:** For blending and measuring ingredients.



Image: Visual representation of the blender's versatility, showing its use for making smoothies, baby food, sauces, soups, whipped cream, and whisking egg whites.



Image: A detailed view of the immersion blender's blade, designed for efficient blending and ice crushing.

## SETUP

Before first use, ensure all parts are clean and dry. Refer to the 'Cleaning and Maintenance' section for

initial cleaning instructions.

### Assembling the Blender

1. Align the blender arm with the motor unit.
2. Twist the blender arm clockwise until it locks securely into place.
3. To attach the whisk or chopper, align the corresponding attachment with the motor unit and twist until secure.



Image: Illustration showing how to detach the blender arm from the main motor unit by twisting.



Image: Demonstrates the ease of disassembling and assembling the blender parts for use and cleaning.

## CHARGING

The UTALENT Cordless Hand Blender features a Type-C charging interface for convenience. Ensure the blender is fully charged before its first use.

- Connect the provided Type-C charging cable to the charging port on the top of the motor unit.
- Plug the other end of the cable into a compatible USB power adapter (not included).
- A full charge takes approximately 3.5 hours.
- The LED lights on the top of the motor unit indicate the battery power status.



Image: A visual reminder to charge the cordless hand blender using the provided cable.



Image: Close-up of the LED battery indicator lights on the top of the blender, showing charge status.

## OPERATING INSTRUCTIONS

---

Ensure the blender is fully charged and correctly assembled before operation.

### General Operation

1. Place the ingredients into the appropriate container (e.g., 600ml vessel, chopper bowl, or a suitable pot).
2. Immerse the blender arm or attachment into the ingredients.
3. Press and hold the power button to start blending. The blender features a variable speed switch; press the button deeper for higher speed.
4. Release the power button to stop operation.
5. For safety, the blender is equipped with double switch safety protection. Ensure proper engagement before operation.



Image: Depiction of the blender's powerful blending capability.



Image: A person demonstrating the use of the immersion blender directly in a cooking pot.

Your browser does not support the video tag.

Video: An official product video demonstrating the UTALENT 4-in-1 Cordless Immersion Blender in action, showcasing its various functions.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your UTALENT Cordless Hand Blender.

### Cleaning Instructions

- Always unplug the charging cable and ensure the motor unit is off before cleaning.
- The Blender Arm, 600ml Measuring Vessel, and Egg Whisk are dishwasher-safe.
- The 500ml Chopper Attachment bowl and blades can be washed by hand with warm, soapy water. Exercise extreme caution when handling the chopper blades as they are very sharp.
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- All food contact materials are BPA free.

### Storage

Store the blender and its attachments in a dry place, away from direct sunlight and out of reach of children.

## TROUBLESHOOTING

If you encounter issues with your UTALENT Cordless Hand Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is low or depleted. Safety switch not engaged.	Charge the blender fully. Ensure the safety button is pressed correctly before operating.
Blender stops during operation.	Overload protection activated. Battery is low.	Reduce the amount of ingredients. Allow the motor to cool down. Charge the blender.
Ingredients are not blending smoothly.	Too little liquid. Ingredients are too large.	Add more liquid. Cut ingredients into smaller pieces. Use the variable speed function to increase power.
Attachments are difficult to remove.	Food residue buildup.	Ensure the blender is clean after each use. Twist firmly to detach.

## SPECIFICATIONS

Feature	Detail
Brand	UTALENT
Model Number	TL6001
Special Feature	Cordless, Rechargeable, Portable
Capacity (Vessel)	600 Milliliters
Product Dimensions	2.2"D x 2"W x 16"H
Material	Acrylonitrile Butadiene Styrene (ABS)
Blade Material	Stainless Steel
Material Type Free	BPA Free
Dishwasher Safe Parts	Blender Arm, 600ml Vessel, Egg Whisk
Power Source	Battery Powered
Wattage	200 watts
Number of Speeds	Variable (User Controlled)
Voltage	12 Volts
Item Weight	2.82 Pounds

## WARRANTY AND SUPPORT

## Warranty Information

This UTALENT Cordless Hand Blender (Model TL6001) comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, alterations, or unauthorized repairs.

## Customer Support

For warranty claims, technical assistance, or any questions regarding your product, please contact UTALENT customer support. Refer to the product packaging or the official UTALENT website for the most current contact information.