

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY VR3 Replacement Remote Control User Manual for VIZIO LED TVs

VINABTY VR3


VINABTY VR3 Replacement Remote Control User Manual

Model: VR3 | Brand: VINABTY

1. INTRODUCTION


This manual provides instructions for the VINABTY VR3 Replacement Remote Control. This remote is designed to function as a direct replacement for original VIZIO LED TV remotes, requiring no programming.

Only Sold Replace Remote Control

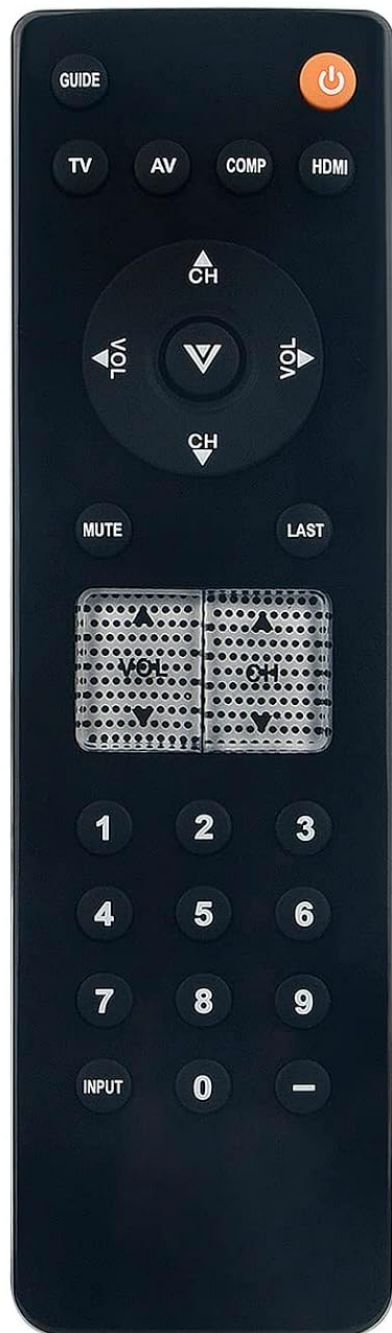

Replace

Compatible with

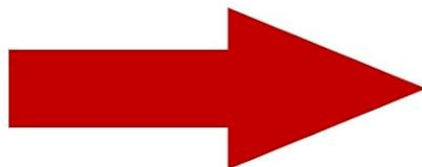

- ☒ NOT Easy Broken
- ☒ Easy Hold
- ☒ NOT Easy Lost



Image 1: Front view of the VINABTY VR3 Replacement Remote Control. It features a standard layout with power, input, channel, volume, and number buttons.

2. COMPATIBILITY

The VINABTY VR3 Replacement Remote Control is compatible with various VIZIO LED TV models. No programming is required; simply insert batteries and use.

Compatible VIZIO LED TV Models include:

- V022L FHDTV10A
- V032A
- VO22LFHDTV10A

- VO22LHDTV10A
- VO32A
- VO22L FHDTV10A
- VO22L10A
- VO22LF
- VO42LFHDTV10A
- VOJ320F1A
- VOJ320F1AC
- VOJ320M
- VOJ370F1A
- VOJ370F
- VO32LFF
- VO32LFHDTV10A
- VO37L
- VO37LHDTV10A
- VO37L HDTV10A
- VO22L HDTV10A

3. SETUP: BATTERY INSTALLATION

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Please install the batteries in the right position



Image 2: Diagram showing the correct orientation for installing AAA batteries into the remote control's battery compartment.

The remote control is now ready for use with your compatible VIZIO LED TV. No additional programming is required.

4. OPERATING INSTRUCTIONS

The VINABTY VR3 remote control features a standard button layout for intuitive operation of your VIZIO LED TV.

- **Power Button** (●): Turns the TV on or off.
- **Input/Source Buttons** (TV, AV, COMP, HDMI): Selects the desired input source for your TV.

- **Channel Buttons (CH ▲ / ▼):** Changes the TV channel up or down.
- **Volume Buttons (VOL ▲ / ▼):** Adjusts the TV volume up or down.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **Guide Button:** Accesses the TV program guide.
- **Last Button:** Returns to the previously viewed channel.

Ensure there are no obstructions between the remote control and the TV's infrared receiver for optimal performance. The maximum effective range is approximately 33 feet (10 meters).

5. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not working.	◦ Check if batteries are installed correctly with correct polarity (+/-). ◦ Replace old batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Confirm the remote is pointed directly at the TV's sensor.
Remote range is poor.	◦ Batteries may be low; replace them. ◦ Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the TV's IR sensor. ◦ Reduce distance between remote and TV.
Specific buttons are not responding.	◦ Check for dirt or debris under the button. ◦ If only one button is affected, the remote might be faulty.

7. SPECIFICATIONS

Brand	VINABTY
Model Name	VR3
Connectivity Technology	Infrared

Controller Type	Button Control
Button Quantity	30
Maximum Range	33 feet (10 meters)
Battery Type	2 x AAA batteries
Item Weight	1.9 ounces (approx. 54 grams)
Item Dimensions (L x W x H)	5" x 1.9" x 0.5" (approx. 12.7cm x 4.8cm x 1.3cm)
Compatible Devices	Television (VIZIO LED TVs)
Special Feature	Ergonomic design
Color	Black

8. SUPPORT

For further assistance or inquiries regarding your VINABTY VR3 Replacement Remote Control, please refer to the seller's contact information on your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question