

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [UTALENT](#) /

› [UTALENT Cordless Hand Blender TL6001 Instruction Manual](#)

UTALENT TL6001

UTALENT Cordless Hand Blender TL6001 Instruction Manual

Model: TL6001

INTRODUCTION

Thank you for choosing the UTALENT Cordless Hand Blender. This manual provides important information regarding the safe operation, assembly, use, and maintenance of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Information

- Always ensure the appliance is fully charged before use.
- Do not operate the blender while it is charging.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Ensure all attachments are securely locked in place before operating.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Exercise caution when handling sharp blades.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- 1 x Blender Arm (dishwasher-safe)
- 1 x 600ml Vessel (dishwasher-safe)
- 1 x 500ml Chopper Attachment
- 1 x Egg Whisk (dishwasher-safe)
- 1 x Charging Cable (Type-C)


All food contact materials are BPA-free.



Image: UTALENT Cordless Hand Blender with all accessories including the main unit, blender arm, chopper, egg whisk, 600ml vessel, and charging cable.



Chopper

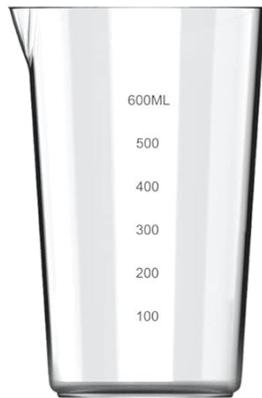

Container



Blender



Whisk

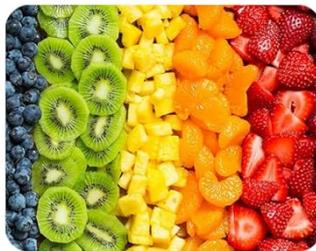


Image: Individual components of the UTALENT Cordless Hand Blender, clearly labeled as Chopper, Container, Blender, and Whisk.

SETUP AND CHARGING

Charging the Hand Blender

1. Connect the provided Type-C charging cable to the charging port on the top of the main motor unit.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. The LED indicator lights on the top of the unit will illuminate to show the charging status. A full charge typically takes approximately 3.5 hours.
4. Once fully charged, the LED lights will indicate completion. Disconnect the charger before use.



Image: The UTALENT Hand Blender connected to a power adapter via its USB-C charging cable, illustrating the charging process.

Assembling Attachments

1. To attach the blender arm, chopper, or egg whisk, align the attachment with the main motor unit.
2. Twist the attachment clockwise until it clicks securely into place.
3. To detach, twist counter-clockwise and pull apart.



Image: A close-up view demonstrating how to detach the blender arm from the main motor unit by twisting and pulling.

OPERATING INSTRUCTIONS

General Operation

- Ensure the appliance is fully charged and the desired attachment is securely assembled.
- To activate, press and hold the power button on the main unit. The LED lights will indicate power.
- The blender features variable speed control. Press the power button with varying depth to adjust the blending speed.
- Release the power button to stop operation.



Image: A close-up of the UTALENT Hand Blender's top, showing the power button and illuminated LED indicators for battery status.



Image: Illustration of the variable speed control feature on the UTALENT Hand Blender, indicating that pressing the button with different depths adjusts the speed.

Using the Blender Arm

1. Attach the blender arm to the main motor unit.
2. Immerse the blender arm into the ingredients. Ensure the blade guard is fully submerged to prevent splashing.
3. Press and hold the power button to begin blending. Move the blender up and down gently for even processing.
4. Ideal for smoothies, milkshakes, soups, and hummus.



Image: A person using the UTALENT Hand Blender to blend soup directly in a cooking pot, demonstrating its immersion capability.

Using the Chopper Attachment

1. Place ingredients into the 500ml chopper bowl. Do not overfill.
2. Attach the main motor unit to the chopper lid, ensuring it is securely locked.
3. Press and hold the power button in short pulses for chopping.
4. Suitable for chopping meat, nuts, vegetables, and herbs.

**None cord, Full Power
Full charge in 3.5h
Running 25-30 min**



Image: The UTALENT Hand Blender's chopper attachment in use, processing meat into a fine mince.

Using the Egg Whisk

1. Attach the egg whisk to the main motor unit.
2. Place the whisk into the ingredients (e.g., egg whites, cream).
3. Press and hold the power button to begin whisking.
4. Ideal for whipping egg whites, cream, and light batters.

Product Demonstration Video

Watch this video for a comprehensive demonstration of the UTALENT 4-in-1 Cordless Hand Blender's features and various uses:

Video: An official product video from UTALENT demonstrating the 4-in-1 cordless hand blender, showcasing its use for blending, chopping, and whisking various ingredients.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your UTALENT Hand Blender.

Cleaning

- Always unplug the charging cable and ensure the appliance is turned off before cleaning.
- The blender arm, 600ml vessel, 500ml chopper attachment, and egg whisk are dishwasher-safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry.
- The main motor unit should be wiped clean with a damp cloth. **Never immerse the motor unit in water or any other liquid.**
- Exercise extreme caution when cleaning the blades of the blender arm and chopper attachment as they are very sharp.

Storage

Store the appliance and its accessories in a dry, safe place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is depleted.	Charge the blender for 3.5 hours until LED indicators show full charge.
	Attachment not securely connected.	Ensure the attachment is twisted clockwise until it clicks into place.
Poor blending performance.	Too many ingredients or ingredients are too large.	Reduce the quantity of ingredients or cut them into smaller pieces.
	Battery power is low.	Recharge the blender.
Blender stops during operation.	Overheating protection activated.	Turn off the blender and let it cool down for at least 15-20 minutes before resuming use.

SPECIFICATIONS

Feature	Detail
Brand	UTALENT
Model Number	TL6001
Color	White
Special Features	Cordless, Rechargeable, Portable
Blender Vessel Capacity	600 Milliliters
Chopper Capacity	500 Milliliters
Product Dimensions	2.2"D x 2"W x 16"H
Included Components	Chopper, Container, Egg Whisk, Charging Cable
Power Source	DC (Battery Powered)
Voltage	12 Volts
Material Type Free	BPA Free
Blade Material	Stainless Steel
Control Type	Variable Speed Control
Container Material	Plastic
Item Weight	2.82 pounds
Battery Type	1 Lithium Ion battery required
Charging Time	Approx. 3.5 hours
Run Time (Full Charge)	Approx. 25-30 minutes (depending on usage)



Image: A diagram illustrating the dimensions of the chopper, container, blender, and whisk components of the UTALENT Hand Blender.

WARRANTY AND SUPPORT

Warranty Information

This UTALENT Cordless Hand Blender comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or commercial use.

Customer Support

For any questions, concerns, or warranty claims, please contact UTALENT customer support. Refer to the product packaging or the official UTALENT website for the most current contact information.