

[manuals.plus](#) /

› [Tribesigns](#) /

› [Tribesigns Portable Desk with Power Outlets and Height Adjustment User Manual](#)

Tribesigns C0764

Tribesigns Portable Desk User Manual

Model: C0764

1. PRODUCT OVERVIEW

The Tribesigns Portable Desk is a versatile and height-adjustable workstation designed for various environments, including home offices, living rooms, and bedrooms. It features an integrated charging station with wireless and USB charging capabilities, a convenient pull-out keyboard tray, and mobile casters for easy relocation. Its sturdy construction ensures durability and stability.



The Tribesigns Portable Desk, showcasing its design and functionality in a typical home office setup.

2. SAFETY GUIDELINES

- Do not exceed the maximum weight limit of the desk. Refer to the 'Specifications' section for details.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for looseness.
- Always lock the casters when the desk is in a stationary position to prevent accidental movement.
- When adjusting the height, ensure no objects are obstructing the mechanism and that the desk is balanced.
- Avoid placing hot items directly on the desk surface without protective coasters.

3. SETUP AND ASSEMBLY

Assembly of the Tribesigns Portable Desk is required. It is recommended that two people perform the assembly for ease and safety. A drill may be useful for certain steps, though basic tools are typically included.

3.1 Unpacking and Preparation

1. Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Verify that all parts listed in the packing list are present. If any parts are missing or damaged, contact customer support immediately.
3. Identify all hardware and tools provided.

3.2 Assembly Steps

Follow the detailed graphical instructions provided in your product packaging for step-by-step assembly. Key steps typically include:

- Attaching the main support frames to the base.
- Securing the lower and middle shelves.
- Installing the casters onto the base. Ensure the two lockable casters are placed on the front side for easy access.
- Assembling the keyboard tray rails and attaching the tray.
- Mounting the main desktop, ensuring the height adjustment mechanisms are correctly aligned.
- Connecting the power outlets and USB charging ports to a power source.



Detailed dimensions of the desk, crucial for planning your space and assembly.

4. OPERATING INSTRUCTIONS

4.1 Height Adjustment

The desk's height can be adjusted from approximately 28 inches to 43 inches to accommodate both sitting and standing positions. To adjust the height:

1. Loosen the adjustment knobs located on the side support poles.

2. Carefully raise or lower the desktop to your desired height. It is recommended to remove heavy items from the desktop before adjustment.
3. Once the desired height is reached, firmly tighten both adjustment knobs to secure the desktop in place. Ensure both sides are tightened equally to maintain stability.



The desk can be easily adjusted between sitting and standing heights for ergonomic comfort.

4.2 Integrated Charging Station

The desk is equipped with a built-in charging station, offering both wireless charging and USB ports for your devices.

- **Wireless Charging:** Place your compatible smartphone or other Qi-enabled device directly on the designated wireless charging pad on the desktop. Ensure the device is centered for optimal charging.
- **USB Charging Ports:** Connect your devices using their respective USB cables to the available USB ports on the charging station.



Spacious Desktop



Pull-out Keyboard Tray



Lockable Casters

The convenient charging station allows for wireless and USB charging of multiple devices simultaneously.

4.3 Pull-out Keyboard Tray

The desk includes a smooth-gliding pull-out keyboard tray for ergonomic typing and to maximize desktop space.

- To use, gently pull the tray outwards until it extends fully.
- To retract, push the tray inwards until it aligns flush with the desk.



Pull-out Keyboard Tray

The pull-out keyboard tray provides an ergonomic typing position and saves desktop space.

4.4 Mobility and Casters

The desk is equipped with rolling casters for easy movement. Two of the casters are lockable to secure the desk in place.

- To move the desk, unlock the casters by flipping the lever on each lockable wheel.
- To secure the desk, push the lever down on each lockable wheel until it clicks into place.



Excellent Flexibility

The lockable casters allow for easy movement and secure positioning of the desk.

4.5 Product Video

Your browser does not support the video tag.

Official product video demonstrating the features and versatility of the Tribesigns Portable Desk, including its charging station and adjustable height.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Retighten as necessary to maintain stability.
- **Casters:** Keep the casters free of debris to ensure smooth rolling.

- **Electrical Components:** Ensure the power cord and charging station are kept dry and away from liquids. Do not attempt to repair electrical components yourself.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose assembly screws; uneven floor; height adjustment knobs not fully tightened.	Check and tighten all assembly screws. Ensure the desk is on a level surface. Fully tighten both height adjustment knobs.
Height adjustment is difficult or clunky.	Mechanism might be stiff; uneven weight distribution.	Ensure all items are removed from the desktop before adjusting. Apply a small amount of silicone lubricant to the sliding parts if necessary (avoid oil-based lubricants). Adjust slowly and evenly.
Casters do not roll smoothly or lock.	Debris caught in wheels; lock mechanism obstructed.	Clean any hair or debris from the caster wheels. Ensure the lock lever is fully engaged or disengaged.
Charging station not working.	Not plugged in; device incompatibility; faulty connection.	Ensure the desk's power cord is securely plugged into a working wall outlet. Verify your device is Qi-enabled for wireless charging. Try a different USB cable or device to isolate the issue.

7. SPECIFICATIONS

Feature	Detail
Brand	Tribesigns
Model Number	C0764
Product Dimensions (D x W x H)	14.2"D x 35.4"W x 27.6"H
Minimum Height	28 Inches
Maximum Height	43 Inches
Item Weight	26.5 Pounds
Color	Brown
Base Material	Metal
Top Material Type	Engineered Wood
Finish Type	Laminated

Feature	Detail
Special Feature	Keyboard Tray Included, Integrated Charging Station (Wireless & USB)
Recommended Number of People for Assembly	2
Tools Recommended For Assembly	Drill

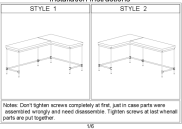 
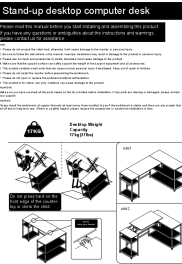 
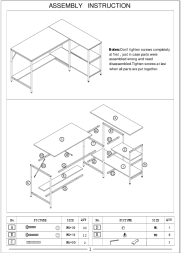 
8. WARRANTY AND SUPPORT


Tribesigns provides an **18-month quality assurance** for this product. For any inquiries, assistance with assembly, or to report missing/damaged parts, please contact Tribesigns customer service. Please have your model number (C0764) and purchase information ready when contacting support.

For more information and support, visit the official Tribesigns Store:[Tribesigns Store on Amazon](#)




Related Documents - C0764

	<p>Tribesigns L-Shape Computer Desk Installation Guide</p> <p>Step-by-step installation instructions for the Tribesigns L-Shape Computer Desk, including parts list and assembly diagrams for Style 1 and Style 2.</p>
	<p>Stand-up Desktop Computer Desk Assembly Instructions</p> <p>Assembly instructions and safety warnings for the Tribesigns Stand-up Desktop Computer Desk, model HOGA-C0277-1.</p>
	<p>Tribesigns L-Shaped Desk Assembly Instructions</p> <p>Detailed assembly instructions for the Tribesigns L-Shaped Desk with Storage Shelves, including parts list and step-by-step guidance.</p>

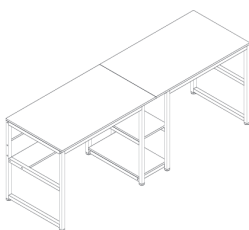 

Computer Desk

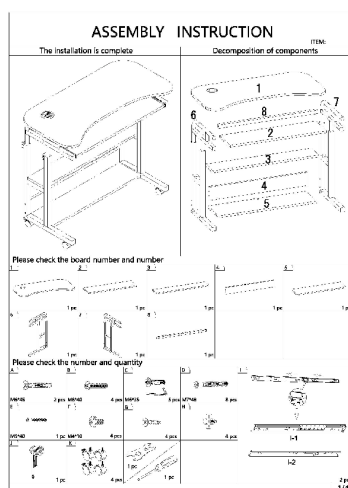 Model No.
HOGA-C0162/C0349
C0685/C0782/38 098



[\[pdf\]](#) Instructions Parts List

admin Assembly InstructionsCarefully read these instructions and keep them for future reference 2 Check the parts list confirm everything s there before starting assembly72376479lowes productdocuments 88783438 457d 4d70 9f69 7faaa6537915 72376479 |||

DESIGNED FOR LIFE Assembly Instructions Computer Desk Model No. HOGA-C0162/C0349 C0685/C0782/HL098 ... the QR code. Step2 Search with the Model No. on the bottom left corner of the title page HOGA-**C0764**/C0837 Installation Video
Note: If you can't find the assembly video, please contact us. P-01...

lang:en score:29 filesize: 7.28 M page count: 12 document date: 2024-09-05

[\[pdf\]](#)

C0764 Tribesigns Mobile Height Adjustable Computer Desk with Charging Ports v 1721901483 cdn.shopify s files 1 0506 8963 8555 ||

lang:en score:14 filesize: 1.05 M page_count: 4 document date: 2022-12-09