

[Manuals.plus](#) /

> [ZdalaMit](#) /

> ZdalaMit VR3 Replacement Remote Control User Manual for Vizio TVs

ZdalaMit VR3

ZdalaMit VR3 Replacement Remote Control User Manual

For Vizio TV Models: VOJ370, VOJ320, VOJ320F, VOJ320F1A, VO37LFHDTV20A, VOJ320F1AC, VOJ320M, VOJ370F1A, VOJ370F, VOJ3201A, VO37LFHDTV10A, VO37L FHDTV20A

1. INTRODUCTION

This manual provides instructions for the ZdalaMit VR3 Replacement Remote Control, designed for use with various Vizio TV models. This remote control is pre-programmed and requires no additional setup beyond battery installation.





Image 1: Front view of the ZdalaMit VR3 Replacement Remote Control. This image displays the layout of the buttons, including power, input selection, channel, volume, mute, and number keys.

2. SETUP: BATTERY INSTALLATION

To begin using your ZdalaMit VR3 Replacement Remote Control, you must install batteries. Please follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AA Alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. **Note:** While some product descriptions may mention AAA batteries, this remote typically uses AA batteries. Please verify the battery type indicated on the remote itself or within the battery compartment.

4. Close the battery compartment cover securely.



Image 2: Side view of the ZdalaMit VR3 Replacement Remote Control, showing its ergonomic design.

3. OPERATING INSTRUCTIONS

The ZdalaMit VR3 Replacement Remote Control is designed for immediate use with compatible Vizio TV models once batteries are installed. No programming or pairing is required.

Basic Functions:

- **Power Button (Orange Button):** Turns the Vizio TV on or off.
- **TV/AV/COMP/HDMI Buttons:** Selects various input sources on your television.
- **CH (Channel) Up/Down:** Changes the television channel.
- **VOL (Volume) Up/Down:** Adjusts the television volume.
- **MUTE:** Silences the television audio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **GUIDE:** Accesses the TV program guide.
- **LAST:** Returns to the previously viewed channel.
- **INPUT:** Cycles through available input sources.



Image 3: Angled view of the ZdalaMit VR3 Replacement Remote Control, highlighting the button layout.

4. COMPATIBLE VIZIO TV MODELS

This replacement remote control is compatible with the following Vizio TV models:

- VOJ370
- VOJ320
- VOJ320F
- VOJ320F1A
- VO37LFHDTV20A
- VOJ320F1AC
- VOJ320M
- VOJ370F1A
- VOJ370F
- VOJ3201A
- VO37LFHDTV10A
- VO37L FHDTV20A

If your Vizio TV model is not listed, please refer to your TV's original manual or contact customer support for compatibility verification.

5. SPECIFICATIONS

Product Dimensions	5 x 1.5 x 0.5 inches
Item Weight	2 ounces
Power Supply	2 x 1.5V AA Alkaline Batteries (not included)
Color	Black
Special Feature	Pre-Programmed
Max Number of Supported Devices	1 (Television)

6. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are installed correctly with the proper polarity. Replace old batteries with new 1.5V AA Alkaline batteries.
- **Buttons require hard pressing:** This can sometimes occur with new remotes or if the internal contacts are not fully settled. Ensure firm, direct presses. If the issue persists, verify battery installation or consider replacing batteries.
- **Remote not controlling TV:** Confirm that your Vizio TV model is listed in the "Compatible Vizio TV Models" section. Ensure there are no obstructions between the remote and the TV's infrared receiver.



Image 4: Back view of the ZdalaMit VR3 Replacement Remote Control, showing the battery compartment area.

7. SUPPORT AND CONTACT INFORMATION

If you encounter any issues or have questions regarding your ZdalaMit VR3 Replacement Remote Control that are not addressed in this manual, please do not hesitate to contact our customer support team. For assistance, please refer to the contact information provided by your retailer or the manufacturer, ZdalaMit Factory.