

[manuals.plus](#) /

› [X Rocker](#) /

› [X Rocker Orbit 2.0 RGB Neo Motion Floor Rocker User Manual](#)

X Rocker Orbit 2

X Rocker Orbit 2.0 RGB Neo Motion Floor Rocker User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your X Rocker Orbit 2.0 RGB Neo Motion Floor Rocker. Please read this manual thoroughly before assembly and operation, and retain it for future reference.



Image: The X Rocker Orbit 2.0 RGB Neo Motion Floor Rocker, featuring a black padded seat with integrated RGB LED lighting strips along the sides, designed for floor-level gaming and relaxation.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- This product may have a maximum weight capacity of 120 kg (265 lbs). Do not exceed this limit to ensure safe and proper use.
- Keep all packaging materials away from children.
- Ensure all connections are secure before use.
- Do not expose the product to extreme temperatures or moisture.
- Avoid placing sharp objects on the chair.
- Use only the provided or recommended power adapters for charging.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged:

- X Rocker Orbit 2.0 RGB Neo Motion Floor Rocker
- USB Charging Cable
- Audio Connection Cable (if applicable)
- User Manual (this document)

If any items are missing or damaged, please contact customer support.

SETUP

1. Initial Placement

Place the X Rocker Orbit 2.0 on a flat, stable surface. Ensure there is enough space around the chair for comfortable use and to prevent obstruction of the LED lighting.

2. Charging the Internal Battery

The chair features a built-in rechargeable battery for the Neo Motion LED lighting. Before first use, fully charge the battery.

1. Locate the USB charging port on the chair, typically found near the control panel.
2. Connect the provided USB charging cable to the chair's USB port.
3. Connect the other end of the USB cable to a compatible USB wall adapter (not included) or a power bank (not included).
4. Allow the chair to charge until the charging indicator light (if present) signals a full charge. A full charge can provide up to 2 hours of LED operation.

Note: The chair can be used while charging, but for optimal battery life, it is recommended to fully charge before initial use.

3. Audio Connection (if applicable)

If your model includes audio features, connect it to your audio source:

- **Wired Connection:** Use the provided audio cable to connect the chair's audio input port to the audio output of your gaming console, TV, or other device.
- **Wireless Connection (Bluetooth):** Refer to the operating section for Bluetooth pairing instructions if your model supports it.

OPERATING INSTRUCTIONS

1. Powering On/Off

Locate the power button on the control panel. Press and hold for a few seconds to turn the chair's LED lighting and audio (if applicable) on or off.

2. Neo Motion LED Lighting Control

The X Rocker Orbit 2.0 features Neo Motion LED technology with multiple lighting effects.

- **Mode Button:** Press the 'Mode' button (or similar) on the control panel to cycle through the available lighting effects and color options. There are up to 30 different light effects and color options across the full RGB spectrum.

- **Brightness Control:** If available, use dedicated buttons to adjust the brightness of the LED lights.

3. Audio Control (if applicable)

If your chair has integrated audio, use the control panel to manage sound:

- **Volume Control:** Adjust the master volume using the dedicated volume dial or buttons.
- **Bluetooth Pairing:** If your model supports Bluetooth, activate Bluetooth on your device and on the chair (usually by pressing a 'Bluetooth' button or holding the power button). Select "X Rocker Orbit" (or similar) from your device's Bluetooth list to pair.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your X Rocker Orbit 2.0.

- **Cleaning:** Wipe the surface of the chair with a soft, damp cloth. For stubborn stains, use a mild soap solution and then wipe with a clean, damp cloth. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the chair in a cool, dry place away from direct sunlight.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge when the LED lights dim or turn off.
- **Cable Management:** Ensure all cables are neatly arranged and not pinched or tangled to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	Battery is depleted.	Connect the chair to a power source using the USB charging cable and allow it to charge.
LED lights are dim.	Low battery level.	Recharge the chair's battery.
No audio (if applicable).	Incorrect audio connection or low volume.	Check all audio cables are securely connected. Ensure the volume on both the chair and the audio source is turned up. If using Bluetooth, re-pair the device.
Chair does not rock smoothly.	Uneven surface or obstruction.	Ensure the chair is on a flat, level surface. Check for any objects underneath the chair that might impede rocking motion.

SPECIFICATIONS

- **Model:** Orbit 2
- **Product Type:** RGB Neo Motion Floor Rocker
- **LED Technology:** Neo Motion RGB (up to 30 effects)
- **Power Source:** Rechargeable USB (internal battery)
- **Battery Life (LED):** Up to 2 hours (approx.)

- **Maximum Weight Capacity:** 120 kg (265 lbs)
- **Package Dimensions:** 74 x 68 x 42 cm
- **Item Weight:** 9.6 kg
- **ASIN:** B0BVMNW77P

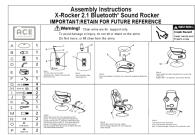
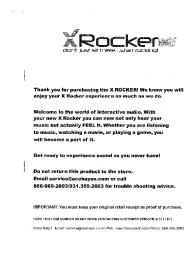
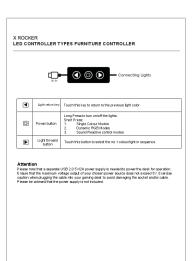
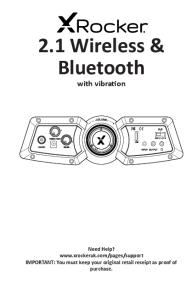
WARRANTY AND SUPPORT

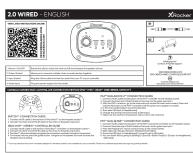
For warranty information, technical support, or to purchase replacement parts, please visit the official X Rocker website or contact their customer service department. Keep your proof of purchase for warranty claims.

Website: www.xrockeruk.com (Example, actual URL may vary by region)

© 2023 X Rocker. All rights reserved.

Related Documents - Orbit 2

	<p>X-Rocker 2.1 Bluetooth Sound Rocker Assembly Instructions</p> <p>Step-by-step guide for assembling the X-Rocker 2.1 Bluetooth Sound Rocker gaming chair, including a detailed parts list, safety warnings, and assembly procedures.</p>
	<p>X Rocker Gaming Chair User Manual & Setup Guide - Ace Bayou</p> <p>Comprehensive user manual and setup guide for the X Rocker gaming chair by Ace Bayou. Learn about features, connections, troubleshooting, and warranty information.</p>
	<p>X Rocker LED Controller Furniture Guide: Features, App, and Setup</p> <p>Comprehensive guide for the X Rocker LED Controller Types Furniture Controller. Learn about setup, app usage (Neo Motion Sync, LED SMART), custom colours, music modes, and FCC compliance.</p>
	<p>X Rocker 2.1 Wireless & Bluetooth Gaming Chair: Setup and User Guide</p> <p>This user manual provides comprehensive setup and connection guides for the X Rocker 2.1 Wireless & Bluetooth gaming chair. Learn how to connect to PS4, Xbox One, and TVs, troubleshoot common issues, and ensure safe usage for an immersive audio experience.</p>



[X Rocker 2.0 Wired Gaming Chair Connection and Safety Guide](#)

Comprehensive guide to connecting and safely using the X Rocker 2.0 Wired gaming chair, including console and TV setup, troubleshooting, and important safety information.



[X Rocker Gaming Chair User Manual and Setup Guide](#)

Comprehensive guide for the X Rocker gaming chair by Ace Bayou, covering features, setup, wired and Bluetooth connections, troubleshooting, and warranty information.