

[Manuals.plus](#) /

› [XPOtool](#) /

› XPOtool V60 Wall-Mounted Mailbox User Manual

XPOtool V60

XPOtool V60 Wall-Mounted Mailbox User Manual

Model: V60 (63862)

INTRODUCTION

Welcome to the user manual for your new XPOtool V60 Wall-Mounted Mailbox. This mailbox is designed to be a modern and elegant addition to your outdoor area, providing a secure and convenient solution for receiving mail and newspapers. Constructed from galvanized, powder-coated steel and stainless steel, it offers durability and weather resistance.

This manual provides essential information for the safe and proper installation, operation, and maintenance of your mailbox. Please read it thoroughly before use and keep it for future reference.



Image: Front view of the XPOtool V60 Wall-Mounted Mailbox in anthracite with a stainless steel accent.

SAFETY INSTRUCTIONS

- **Installation:** Ensure the mailbox is securely mounted to a stable surface to prevent it from falling. Use appropriate tools and follow all local building codes.
- **Children:** Keep keys out of reach of children. The mailbox is not a toy.
- **Maintenance:** Do not use abrasive cleaners or harsh chemicals that could damage the finish.
- **Security:** Always lock the mailbox to protect your mail.

PACKAGE CONTENTS

Please check the package for the following items:

- XPOtool V60 Wall-Mounted Mailbox
- 2 x Keys for the lock
- Mounting hardware (screws, wall anchors, rubber spacers)



Image: Included mounting hardware, consisting of screws, wall anchors, rubber spacers, and two keys for the mailbox lock.

SETUP AND INSTALLATION

The XPOtool V60 mailbox is designed for wall mounting. Follow these steps for secure installation:

1. **Choose a Location:** Select a suitable wall location that is easily accessible for mail delivery and retrieval, and protected from direct heavy rain if possible.

2. **Mark Drilling Points:** Hold the mailbox against the wall at the desired height. Use a pencil to mark the four drilling points on the back of the mailbox. Refer to the dimensions diagram for precise measurements.



Image: Detailed diagram showing the dimensions of the mailbox (370x105x370 mm) and the spacing of the four mounting holes on the back panel (297mm width, 210mm height between centers).

3. **Drill Holes:** Using an appropriate drill bit for your wall type (e.g., masonry bit for brick/concrete), drill holes at the marked points. The depth should accommodate the wall anchors.
4. **Insert Wall Anchors:** Insert the provided wall anchors into the drilled holes.
5. **Mount the Mailbox:** Align the mailbox with the wall anchors. Insert the screws through the mounting holes on the back of the mailbox and into the wall anchors. Tighten the screws securely. You may use the rubber spacers between the mailbox and the wall if desired for slight clearance or to protect the wall surface.
6. **Test Stability:** Gently pull on the mailbox to ensure it is firmly attached to the wall.



Image: The XPOtool V60 Mailbox mounted on an exterior wall, demonstrating its aesthetic integration with a modern home entrance.

OPERATING INSTRUCTIONS

Receiving Mail

The mailbox features a large top flap that covers the mail slot.

1. To insert mail, lift the top flap.
2. Place letters, large envelopes, or small packages into the 335 x 27.8 mm slot.
3. Gently close the top flap. The integrated damping mechanism will ensure it closes quietly and slowly, preventing loud slamming.



Image: The mailbox with its top flap open, ready to receive mail. The spacious slot is visible.

Retrieving Mail

Your mailbox is equipped with a secure lock to protect your mail.

1. Insert one of the provided keys into the lock located on the front access door.

2. Turn the key to unlock the door.
3. Open the front door to access your mail.
4. After retrieving your mail, close the door and turn the key to lock it. Remove the key.



Image: Interior view of the mailbox showing the mail compartment and a close-up inset of the soft-close lid mechanism.



Image: Close-up view of the internal locking mechanism of the mailbox door.

Using the Newspaper Compartment

The mailbox includes a separate compartment at the bottom, specifically designed for newspapers and magazines. This keeps them dry and prevents them from being crammed into the main mail slot.

Simply slide newspapers or larger periodicals into this open compartment.

MAINTENANCE

- **Cleaning:** Wipe the mailbox regularly with a soft, damp cloth to remove dust and dirt. For stubborn marks, a mild soap solution can be used. Rinse thoroughly and dry with a clean cloth.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the

powder-coated finish and stainless steel.

- **Lock Care:** Periodically apply a small amount of graphite lubricant or a silicone-based spray to the lock mechanism to ensure smooth operation.
- **Inspection:** Periodically check the mounting screws to ensure they remain tight and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mailbox feels loose on the wall.	Mounting screws are loose or wall anchors are not secure.	Tighten mounting screws. If still loose, consider using larger wall anchors or relocating the mailbox to a more secure wall section.
Lock is stiff or difficult to turn.	Lack of lubrication or debris in the lock mechanism.	Apply graphite lubricant or silicone spray to the keyhole and turn the key several times to distribute.
Top flap does not close smoothly or quietly.	Damping mechanism may be obstructed or damaged.	Check for any debris obstructing the hinge or damping mechanism. If damaged, contact customer support.

SPECIFICATIONS

Feature	Detail
Model	V60 (Model No. 63862)
Dimensions (L x W x H)	370 x 105 x 370 mm (14.57 x 4.13 x 14.57 inches)
Weight	Approx. 2.9 kg (6.4 lbs)
Material	Galvanized, powder-coated steel and Stainless Steel 304
Color	Anthracite and Stainless Steel
Mail Slot Dimensions	335 x 27.8 mm
Features	Lockable, Soft-close lid, Newspaper compartment
Mounting Type	Wall-mounted

WARRANTY AND SUPPORT

For warranty information or technical support, please contact XPOtool customer service. Details can typically be found on the product packaging or the official XPOtool website.

Manufacturer: Wiltec Wildanger Technik GmbH

Website: www.wiltec.de (General manufacturer website, specific XPOtool support might be linked from there)

© 2024 XPOtool. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question