Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon /
- Amazon Echo Show 8 (3rd Gen) Adjustable Stand with USB-C Charging Port User Manual

Amazon Echo Show 8 (3rd Gen) Adjustable Stand

Amazon Echo Show 8 (3rd Gen) Adjustable Stand with USB-C Charging Port User Manual

1. Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your Amazon Echo Show 8 (3rd Gen) Adjustable Stand with USB-C Charging Port. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The Adjustable Stand for Echo Show 8 (3rd Gen) enhances your device's functionality by providing a stable base with adjustable viewing angles and an integrated USB-C charging port.

Key Features:

- Integrated USB-C Charging Port: Charge compatible devices such as smartphones and earbuds with the accessible 12.5 W USB-C port.
- Adjustable Viewing Angle: Easily tilt your Echo Show 8 forward or backward to optimize your viewing experience.
- Magnetic Attachment: Ensures a quick and secure connection between the Echo Show 8 and the stand.
- Color Matched Design: Designed to complement the aesthetics of the Echo Show 8 (3rd Gen).
- Sustainable Materials: Made with 44% recycled materials.



Image 2.1: Echo Show 8 (3rd Gen) mounted on the adjustable stand.

This image shows the Echo Show 8 (3rd Gen) device attached to the adjustable stand, displaying a home screen with various streaming applications. The stand provides a stable base for the device.

3. SETUP INSTRUCTIONS

Follow these steps to correctly set up your adjustable stand with your Echo Show 8 (3rd Gen).

- 1. **Unpack Components:** Carefully remove the adjustable stand from its packaging. Ensure all components are present.
- 2. **Position the Stand:** Place the stand on a flat, stable surface where you intend to use your Echo Show 8.
- 3. **Attach Echo Show 8:** Align the back of your Echo Show 8 (3rd Gen) with the magnetic plate on the stand. The device will securely snap into place due to the magnetic attachment.
- 4. **Connect Power (Echo Show 8):** Plug the power adapter for your Echo Show 8 (sold separately) into the device's power port, then into a wall outlet.
- 5. **Utilize USB-C Charging Port:** If you wish to use the integrated USB-C charging port on the stand, connect a compatible USB-C cable (not included) to the port located at the rear of the stand. You can then connect your smartphone, earbuds, or other USB-C compatible devices for charging.



Image 3.1: Rear view of the stand with USB-C port.

This image displays the back of the adjustable stand, highlighting the power input for the stand and the integrated USB-C charging port. The USB-C port is clearly visible for connecting external devices.



Image 3.2: Echo Show 8 (3rd Gen) and stand assembly.

This image shows the Echo Show 8 (3rd Gen) device positioned on the adjustable stand. It serves as a visual guide for how the device sits on the stand, emphasizing that the Echo Show 8 itself is a separate purchase.

4. OPERATING INSTRUCTIONS

The adjustable stand is designed for simple and intuitive use.

4.1 Adjusting the Viewing Angle

To adjust the tilt of your Echo Show 8, gently hold the device and tilt it forward or backward to your desired

angle. The stand's mechanism allows for smooth adjustment and holds the device securely in place once positioned.



Image 4.1: Tilt adjustment in action.

This image illustrates the adjustable tilt feature of the stand. It shows the Echo Show 8 (3rd Gen) tilted at different angles, demonstrating the flexibility to achieve an optimal viewing position.

4.2 Using the USB-C Charging Port

The integrated 12.5 W USB-C charging port can be used to charge various compatible devices. Simply connect your device's USB-C cable to the port on the back of the stand. Ensure the stand is powered on for the charging function to operate.

5. MAINTENANCE

Proper maintenance ensures the longevity and appearance of your adjustable stand.

- Cleaning: Use a soft, dry, lint-free cloth to wipe the stand. Avoid abrasive cleaners, solvents, or aerosol sprays, as these may damage the finish.
- Magnetic Connection: Periodically check the magnetic connection area on both the stand and your Echo Show 8 for any debris that might interfere with a secure attachment.
- Environmental Conditions: Keep the stand away from extreme temperatures, direct sunlight, and excessive moisture.

6. TROUBLESHOOTING

If you encounter issues with your adjustable stand, refer to the following common solutions.

Problem	Possible Cause	Solution
Echo Show 8 does not attach securely.	Debris on magnetic surface; improper alignment.	Clean magnetic surfaces on both the stand and Echo Show 8. Ensure correct alignment before attaching.
USB-C charging port is not working.	Stand not powered; faulty cable; incompatible device.	Ensure the Echo Show 8 is properly powered and attached to the stand. Try a different USB-C cable. Verify the device you are charging is compatible with USB-C charging.
Stand feels unstable.	Uneven surface; improper placement.	Place the stand on a flat, stable surface. Ensure the Echo Show 8 is correctly seated on the magnetic plate.

7. SPECIFICATIONS

• Product Name: Adjustable Stand with USB-C Charging Port for Echo Show 8 (3rd Gen)

• Brand: Amazon

• Compatibility: Echo Show 8 (3rd Gen)

Charging Port: 12.5 W USB-CAttachment Method: Magnetic

Material Composition: Made with 44% recycled materials

• Color: Charcoal (for this specific model)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your Echo Show 8 (3rd Gen) device or visit the official Amazon support website. Amazon provides comprehensive support resources, including FAQs, troubleshooting guides, and contact options for technical assistance.

Online Support: www.amazon.com/devicesupport

Related Documents - Echo Show 8 (3rd Gen) Adjustable Stand

