

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PERFASCIN](#) /

› [PERFASCIN AXD7680 Replacement Remote Control User Manual for Pioneer CD Receivers](#)

PERFASCIN AXD7680

PERFASCIN AXD7680 Replacement Remote Control User Manual

For Pioneer CD Receivers: AXD7676, X-HM81-S, XC-HM81-S, X-HM71-S, XC-HM81-K

INTRODUCTION

This manual provides instructions for the PERFASCIN AXD7680 replacement remote control. This remote is designed to function as a direct replacement for the original Pioneer AXD7676 remote, compatible with various Pioneer CD Receiver models. No programming or pairing is required for operation.

Compatible Pioneer CD Receiver Models:

- AXD7676
- X-HM81-S
- XC-HM81-S
- X-HM71-S
- XC-HM81-K
- X-HM81-K
- X-HM71-K

SETUP

The PERFASCIN AXD7680 remote control requires two AAA alkaline batteries for operation. No additional programming or setup is needed; simply insert the batteries, and the remote will be ready to use.

Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



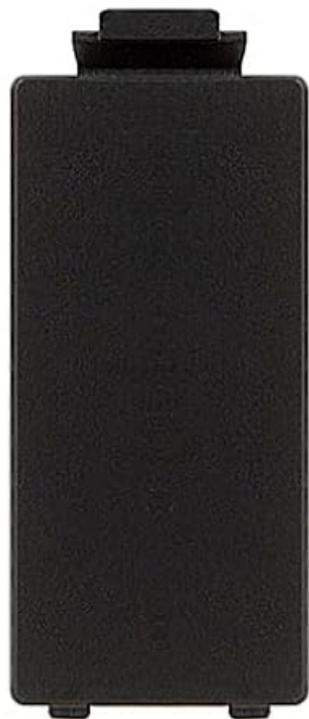
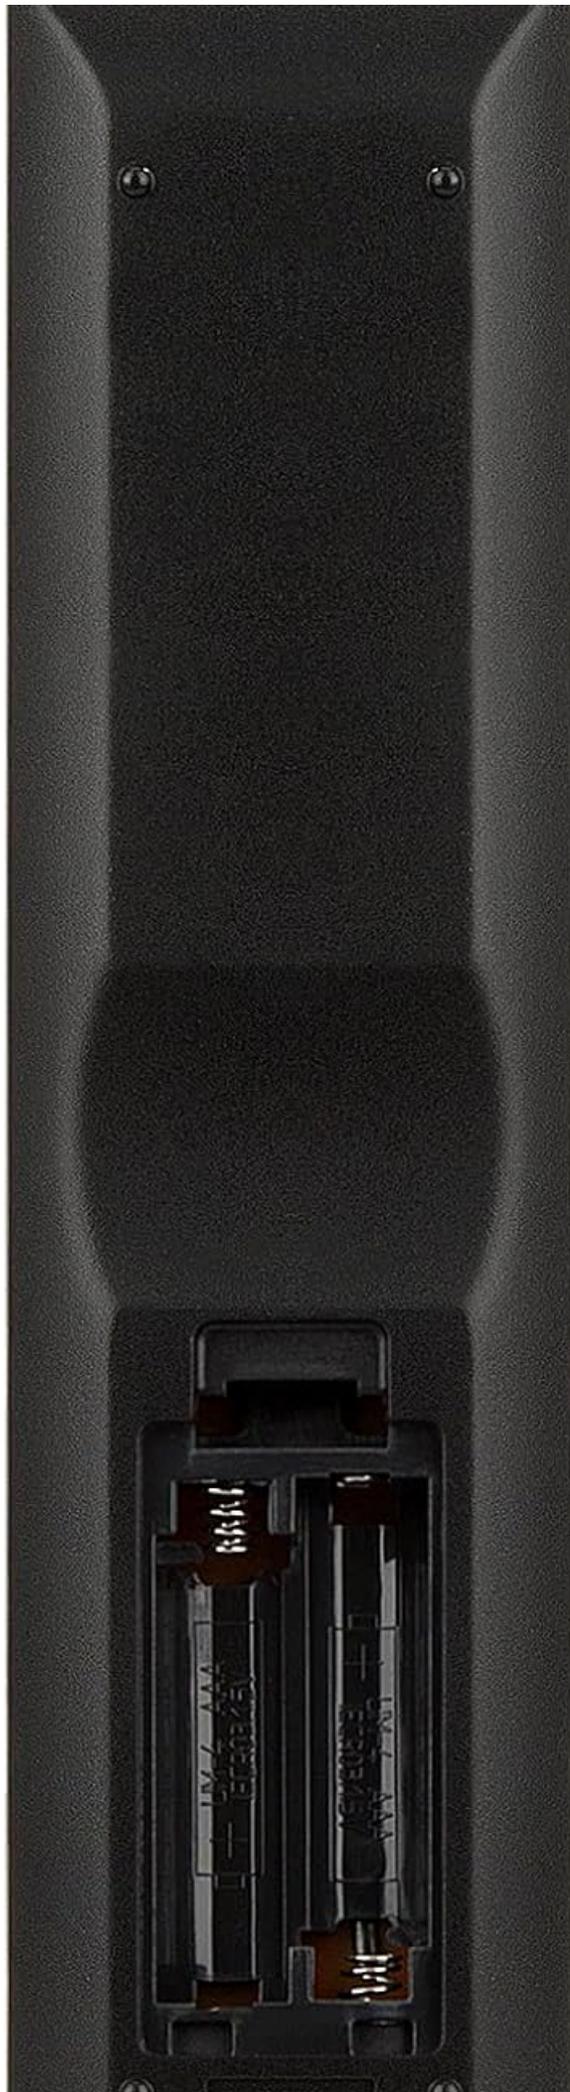




Figure 1: Battery compartment with cover removed, showing battery insertion.



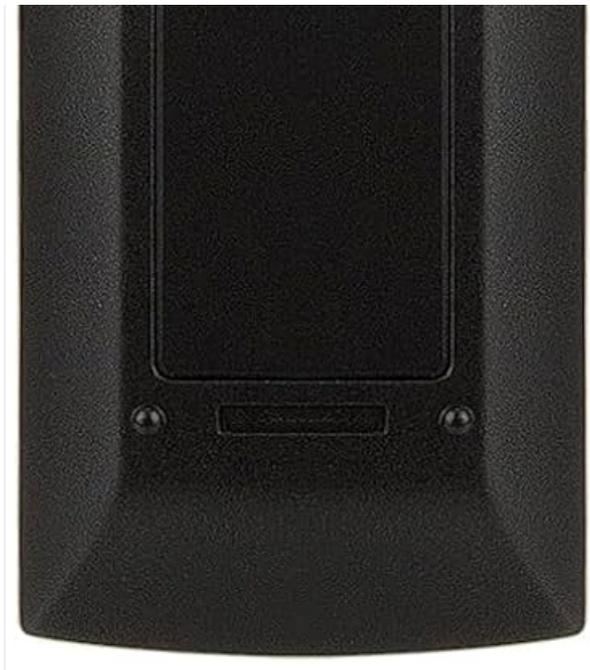


Figure 2: Battery compartment with cover securely closed.

OPERATING THE REMOTE CONTROL

Once batteries are installed, the remote control is ready for immediate use with your compatible Pioneer CD Receiver. Point the remote control directly at the receiver's infrared sensor.

Remote Control Layout



Figure 3: Front view of the PERFASCIN AXD7680 Remote Control.

The remote features standard controls for Pioneer CD Receivers, including power, source selection, volume, playback controls, and numerical input. Refer to your Pioneer CD Receiver's original manual for specific functions of each button.

Basic Functions

- **STANDBY/ON:** Powers the receiver on or off.
- **OPEN/CLOSE:** Opens or closes the CD tray.

- **iPod, USB, CD, NETWORK, TUNER, AUDIO IN, LINE:** Selects the input source.
- **VOLUME (+/-):** Adjusts the audio volume.
- **MUTE:** Mutes or unmutes the audio.
- **PLAY, PAUSE, STOP, SKIP (<<, >>):** Controls media playback.
- **ENTER, ARROW BUTTONS:** Navigates menus and confirms selections.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Make sure there are no obstructions between the remote control and the receiver's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the receiver.
- **Intermittent operation:**
 - Check battery levels and replace if necessary.
 - Clean the remote's infrared emitter and the receiver's sensor with a soft cloth.

If problems persist after trying these steps, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	AXD7680 (Item Model: ANG-AXD7680-GAI-US)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Pioneer CD Receivers (AXD7676, X-HM81-S, XC-HM81-S, X-HM71-S, XC-HM81-K, X-HM81-K, X-HM71-K)
Dimensions	7 x 2 x 0.65 inches (approx.)
Weight	2.3 ounces (approx.)

Special Feature	Ergonomic design
-----------------	------------------

CUSTOMER SUPPORT

If you have any questions or require further assistance with your PERFASCIN AXD7680 remote control, please contact our customer service. They can provide professional suggestions and support.

Contact information is typically provided by your retailer or on the product packaging.

