

ODK B01011636

ODK 48 Inch Computer Desk Instruction Manual

Model: B01011636

1. INTRODUCTION

Thank you for choosing the ODK 48 Inch Computer Desk. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: The ODK 48 Inch Computer Desk, showcasing its spacious desktop and integrated storage solutions.

1.1 Safety Information

- Always assemble the desk on a stable, level surface to prevent instability.
- Ensure the desk is properly anchored to the wall or floor if required, especially if used for activities that may cause sudden movements.
- Do not exceed the maximum weight capacity of the desk. Refer to the specifications section for details.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Regularly check all fasteners to ensure they remain tight and secure.

2. SETUP AND ASSEMBLY

The ODK Computer Desk is designed for straightforward assembly. All necessary tools and hardware are included in the package. It is recommended to have a clear, spacious area for assembly.

2.1 Package Contents

Before starting, verify that all components are present. Refer to the included assembly diagram for a detailed list of parts and hardware.

2.2 Assembly Steps

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Follow the step-by-step instructions provided in the assembly manual included in your package.
3. Attach the desk legs to the desktop using the provided screws and tools.
4. Secure any cross-bars or support structures as indicated in the manual to ensure stability.
5. Install the side storage bag and headphone hook according to the instructions.
6. Once assembled, gently lift and place the desk in its desired location. Avoid dragging the desk to prevent damage.



Image 2.1: Visual guide illustrating the four main steps for assembling the ODK desk, emphasizing quick and easy setup.

3. OPERATING INSTRUCTIONS

The ODK Computer Desk is designed to enhance your workspace with practical features.

3.1 Using the Side Storage Bag

The detachable side-mounted storage bag provides convenient access to books, office supplies, and personal items. It helps optimize desktop organization by keeping frequently used items within reach but off the main work surface.



High Quality Cloth Bag

| Convenient for storage



Image 3.1: A close-up view of the desk's high-quality cloth storage bag, demonstrating its capacity for various items.

3.2 Utilizing the Headphone Hook

A solid metal hook is located on the opposite side of the desk, offering a dedicated space to hang headphones, bags, or other accessories. This feature helps keep your desk tidy and your items easily accessible.



Solid Metal Hook

| Extra space for hanging



Image 3.2: The solid metal hook providing extra space for hanging headphones or other items.

3.3 Monitor Clamp Compatibility

The desktop is designed to be compatible with most monitor clamps, allowing for flexible monitor setup and maximizing your workspace.



Image 3.3: The desk's edge showing its suitability for monitor clamp installations.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your ODK Computer Desk.

4.1 Cleaning the Desktop

The desktop is made of high-quality particleboard with a laminated finish, making it scratch-resistant, anti-collision, and waterproof. For daily cleaning, wipe the surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

High Quality Desktop



Image 4.1: The desk's high-quality desktop, highlighting its easy-to-clean, waterproof, and anti-scratch features.

4.2 Frame Care

The solid metal frame provides maximum durability and stability. Wipe the metal parts with a dry or slightly damp cloth. Ensure all connections remain tight to maintain structural integrity.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your ODK Computer Desk.

5.1 Desk Wobbles

- **Check all screws:** Ensure all assembly screws are securely tightened. Loose fasteners are a common cause of wobbling.
- **Level the desk:** Verify that the desk is on a flat, even surface. Many ODK desks include adjustable footpads to compensate for uneven floors. Adjust these as needed.

- **Inspect frame connections:** Ensure the X-shaped cross-bars (if applicable to your model) are correctly installed and tightened, as they reinforce the frame's stability.

5.2 Missing or Damaged Parts

If you find any parts missing or damaged upon unboxing, please contact ODK customer service immediately. Do not attempt to assemble the desk with incomplete or damaged components.

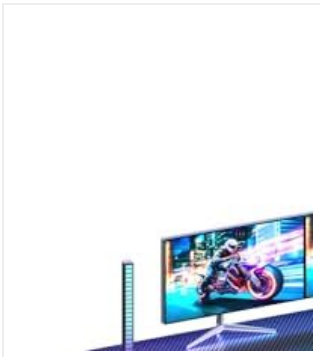


Image 5.1: A visual representation of common questions and answers, indicating support availability.

6. SPECIFICATIONS

Feature	Detail
Brand	ODK
Model Number	B01011636
Product Dimensions (D x W x H)	18.9"D x 47.2"W x 28.9"H
Color	Deep Brown
Style	Modern
Top Material Type	Engineered Wood (Particleboard)
Base Material	Metal
Finish Type	Laminated
Special Feature	Scratch Resistant, Waterproof
Included Components	Headphone Hook, Storage Bag
Item Weight	23.8 Pounds
Required Assembly	Yes
UPC	850050098423

Product Size

| Can be switched left and right for installation.

Tabletop Colors



Image 6.1: Detailed product dimensions for the ODK 48 Inch Computer Desk.

7. WARRANTY AND SUPPORT

7.1 Limited Warranty

ODK provides a limited warranty for this product. Details regarding the duration and coverage of the warranty are typically included with your purchase documentation. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, concerns, or assistance with assembly or product issues, please contact ODK customer service. Our team is dedicated to providing considerate service and resolving any problems you may encounter.

Contact information can usually be found on the ODK official website or through your retailer's support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question