

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CIRCLE JOY](#) /
- › [CIRCLE JOY Electric Wine Bottle Opener Set KP-1126 Instruction Manual](#)

### CIRCLE JOY KP-1126

# CIRCLE JOY Electric Wine Bottle Opener Set KP-1126 Instruction Manual

Model: KP-1126

## 1. PRODUCT OVERVIEW

---

The CIRCLE JOY Electric Wine Bottle Opener Set (Model KP-1126) provides a complete solution for opening, aerating, and preserving wine. This 5-in-1 set includes an electric wine opener, a foil cutter, a wine aerator pourer, a vacuum wine stopper, a charging base, and a USB-C cable.



Image: The complete CIRCLE JOY Electric Wine Bottle Opener Set with charging base.

## 2. COMPONENTS INCLUDED

Your CIRCLE JOY Electric Wine Bottle Opener Set includes the following items:

- Electric Wine Opener
- Foil Cutter
- Wine Aerator Pourer
- Vacuum Wine Stopper
- Charging Base
- USB-C Cable

## 5 IN 1 WINE BOTTLE OPENER SET



Image: All components of the 5-in-1 wine opener set.

### 3. SETUP AND CHARGING

Before first use, ensure the electric wine opener is fully charged.

1. Place the electric wine opener into the designated slot on the charging base.
2. Connect the USB-C cable to the charging base and plug the other end into a suitable USB power adapter (not included).
3. The blue LED lights on the opener will illuminate during charging. A full charge typically takes several hours.
4. Once fully charged, the opener is ready for use. The charging base also provides convenient storage for all accessories.

# USB RECHARGEABLE BASE



Image: Electric wine opener on its USB rechargeable base.

## 4. OPERATING INSTRUCTIONS

### 4.1. Using the Foil Cutter

1. Place the foil cutter on top of the wine bottle.
2. Grip the bottle firmly and twist the foil cutter around the bottle neck to remove the foil seal.
3. Remove the foil cutter. It can be stored on the charging base.

CIRCLE JOY

# 5-IN-1

## ELECTRIC WINE OPENER SET WITH CHARGING BASE



Image: Using the foil cutter to prepare a wine bottle.

### 4.2. Using the Electric Wine Opener

1. After removing the foil, place the electric wine opener vertically on top of the wine bottle, ensuring it is centered over the cork.
2. Press and hold the "DOWN" button. The corkscrew will automatically penetrate the cork and extract it from the bottle. The blue LED lights will illuminate during operation.
3. Once the cork is fully extracted, lift the opener from the bottle.
4. To release the cork from the opener, press and hold the "UP" button. The cork will be ejected.

# ELECTRIC BOTTLE OPENER SET



Easy to use



USB  
Rechargeable



Up to  
80 bottles



Open in  
8 seconds



5 In 1  
Gift set

Image: Electric wine opener in action, demonstrating ease of use.

# BLUE LED LIGHTS UP WHEN WORKING



Easy to use



USB  
Rechargeable



Up to  
80 bottles



Open in  
8 seconds



5 In 1  
Gift set



Image: The electric wine opener with its blue LED lights indicating operation.

Your browser does not support the video tag.

Video: Demonstration of the CIRCLE JOY Electric Wine Opener Set (KP-1126) in use, showing charging, foil cutting, cork removal, aerating, and sealing.

## 4.3. Using the Wine Aerator Pourer

1. Insert the wine aerator pourer firmly into the neck of the opened wine bottle.
2. Pour wine through the aerator into your glass. The design allows for aeration as the wine flows, enhancing its flavor.

# WINE AERATOR & POURER



Keep the wine label clean and aerate the wine when pouring



Acrylic materials, clear & durable

Image: Wine aerator pourer in use.

## 4.4. Using the Vacuum Wine Stopper

1. Place the vacuum wine stopper firmly into the neck of the wine bottle.
2. Pump the top of the stopper repeatedly until resistance is felt. This removes air from the bottle, preserving the wine's freshness.

# VACUUM WINE STOPPER



Keep fresh for 7 days



Food-grade materials

Image: Vacuum wine stopper preserving an opened bottle of wine.

## 5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your wine set.

- **Electric Wine Opener:** Wipe the exterior with a damp cloth. Do not immerse the opener in water.
- **Foil Cutter, Aerator Pourer, Vacuum Stopper:** These accessories can be rinsed with warm water and mild soap. Ensure they are completely dry before storage.
- **Charging Base:** Wipe with a dry or slightly damp cloth. Ensure no liquids enter the charging port.

## 6. TROUBLESHOOTING

- **Opener not working:** Ensure the device is fully charged. Check if the buttons are being pressed correctly.
- **Cork not extracting:** Ensure the opener is placed vertically and centered on the bottle. The foil must be completely removed.
- **Wine not pouring smoothly through aerator:** Check for any blockages in the pourer. Ensure it is securely fitted into the bottle.
- **Vacuum stopper not sealing:** Ensure the stopper is firmly inserted into the bottle neck and pumped sufficiently to remove air.

If you encounter issues not listed here, please contact CIRCLE JOY customer support for assistance.

## 7. SPECIFICATIONS

<b>Brand:</b>	CIRCLE JOY
<b>Model Number:</b>	KP-1126-DE
<b>Material:</b>	Stainless Steel, Aluminum, and Plastic
<b>Color:</b>	Black
<b>Product Dimensions:</b>	5.49"L x 3.15"W
<b>Item Weight:</b>	13.8 ounces (390 Grams)
<b>Power Source:</b>	Rechargeable (USB-C)

## 8. WARRANTY AND SUPPORT

CIRCLE JOY offers a 12-month satisfaction service for this product. For any questions or support during use, please contact CIRCLE JOY customer service. Refer to the product packaging or the official CIRCLE JOY website for detailed warranty information and contact methods.