

Karlsso KA5768LY

Karlsso Pendulum Modern Wall Cuckoo Clock

Model: KA5768LY

Brand: Karlsson

1. INTRODUCTION

Thank you for purchasing the Karlsson Pendulum Modern Wall Cuckoo Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Please read it thoroughly before use and retain it for future reference.

This modern cuckoo clock, with its soft yellow finish, is designed to add a unique aesthetic to your home while providing accurate timekeeping and an hourly cuckoo chime feature.



Image: The Karlsson Cuckoo Clock mounted on a wall in a contemporary living space, demonstrating its aesthetic integration.

2. SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type and ensure correct polarity during installation.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified personnel for service.
- Ensure the clock is securely mounted to prevent falling and potential injury or damage.

3. PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Karlsson Pendulum Modern Wall Cuckoo Clock (Main Unit)
- Pendulum
- Instruction Manual (this document)



Image: The Karlsson Pendulum Modern Wall Cuckoo Clock, featuring its distinctive house shape, soft yellow color, and visible clock face with black hands. The pendulum hangs below.

4. SETUP

4.1 Battery Installation

The clock requires batteries for operation. Ensure you have the correct type and quantity.

1. Locate the battery compartment on the back of the clock.
2. Insert the required batteries (e.g., 3x AA, not included) according to the polarity indicators (+ and -) inside the compartment.
3. Close the battery compartment cover securely.

4.2 Attaching the Pendulum

1. Gently attach the pendulum to the hook or slot provided at the bottom of the clock mechanism. Ensure it hangs freely and can swing without obstruction.

4.3 Mounting the Clock

The clock is designed for wall mounting. Choose a suitable location on a sturdy wall that can support the clock's weight.

1. Use a screw or nail (not included) appropriate for your wall type and ensure it is securely fastened.
2. Hang the clock securely using the hanging slot on the back of the clock.
3. Ensure the clock is level after mounting for optimal performance of the pendulum and chime mechanism.



Image: Diagram showing the dimensions of the Karlsson Cuckoo Clock, with a height of 41cm and a width of 21.5cm, providing a visual reference for placement.

5. OPERATING INSTRUCTIONS

5.1 Setting the Time

1. Locate the time setting knob or wheel on the back of the clock's mechanism.
2. Gently turn the knob clockwise to set the hour and minute hands to the correct time.
3. Avoid turning the clock hands directly, as this may cause damage to the internal mechanism.

5.2 Cuckoo Chime Function

This clock features an hourly cuckoo chime, where the cuckoo bird emerges and sounds on the hour.

- The chime mechanism is designed to operate during specific hours, typically silencing automatically during nighttime (e.g., from 10 PM to 5 AM) to ensure quiet.
- For the chime to function correctly, ensure the clock is mounted level and the batteries are sufficiently charged.



Image: A close-up view of the small white cuckoo bird emerging from its opening at the top of the clock, illustrating the chime mechanism.

6. MAINTENANCE

6.1 Cleaning

- To clean the clock surface, use a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the clock's finish and internal components.

6.2 Battery Replacement

- Replace batteries when the clock begins to lose time, the cuckoo chime becomes weak, or stops functioning.
- Always replace all batteries at the same time with new ones of the same type and brand to ensure consistent power.
- Dispose of used batteries responsibly according to local environmental regulations.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Dead or incorrectly installed batteries.	Check battery polarity; replace with fresh batteries.
Cuckoo chime not sounding	Low batteries; clock not level; night silence mode active; obstruction in cuckoo opening.	Replace batteries; ensure clock is level; check time of day; gently clear any obstruction.
Time is inaccurate	Low batteries; mechanism issue; clock exposed to extreme temperatures.	Replace batteries. If problem persists, ensure stable environment or contact support.
Pendulum not swinging	Not properly attached; obstruction; clock not level.	Ensure pendulum is securely attached and swings freely without obstruction. Verify clock is level.

8. SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5768LY
Colour	Yellow
Product Dimensions	21.5 x 3.81 x 41 cm
Item Weight	760 g
Material	Plastic
Display Type	Analogue
Special Feature	Hourly Chime
Power Source	Battery Powered
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

Karlsson products are manufactured to high quality standards. For information regarding warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Karlsson website. If you encounter any issues or require further assistance with your Karlsson Pendulum Modern Wall Cuckoo Clock, please contact Karlsson customer support or your retailer. Provide your model number (KA5768LY) and a detailed description of the issue for faster service. For more information, you may visit the official Karlsson website:www.karlssonclocks.com

no relevant documents