

3738

# Canto 3738 Miles Electronic Keyboard User Manual

Model: 3738

## INTRODUCTION

---

Thank you for purchasing the Canto 3738 Miles Electronic Keyboard. This 37-key electronic keyboard is designed for both beginners and enthusiasts, offering a range of tones, rhythms, and features to explore musical creativity. Please read this manual thoroughly to understand the proper setup, operation, and maintenance of your new instrument.

## PRODUCT OVERVIEW

---



An image showing the Cantor 3738 Miles Electronic Keyboard inside its blue and green retail packaging. The keyboard itself is black with white and black keys, and various control buttons. The box prominently displays 'CANTO-3738 Miles Electronic Keyboard'.

The Cantor 3738 Miles Electronic Keyboard features 37 standard-sized keys, various instrument tones, rhythm patterns, and demo songs. It is a compact and portable instrument suitable for learning and casual play.

## SETUP

---

### 1. Unpacking

- Carefully remove the keyboard from its packaging.
- Check for all included accessories (if any, e.g., power adapter, music stand).
- Retain the packaging for future storage or transport.

### 2. Powering On

- **Battery Operation:** Insert the required batteries (not included) into the battery compartment located on the underside of the keyboard, observing correct polarity.
- **AC Adapter (if applicable):** Connect the AC adapter (if included or purchased separately) to the DC IN jack on the keyboard and then plug it into a standard wall outlet.
- Press the **POWER** button to turn on the keyboard.

### 3. Initial Adjustments

- Adjust the **VOLUME** control to a comfortable listening level.

# OPERATING INSTRUCTIONS

---

## 1. Playing Tones

- Press the **TONE** button to cycle through available instrument sounds (e.g., Piano, Organ, Violin).
- Press the keys to play the selected tone.

## 2. Using Rhythms

- Press the **RHYTHM** button to select a rhythm pattern (e.g., Rock, Disco, Waltz).
- Press the **START/STOP** button to begin or end the rhythm.
- Adjust the **TEMPO** buttons (if available) to change the speed of the rhythm.

## 3. Demo Songs

- Press the **DEMO** button to play pre-recorded demonstration songs.
- Press the **DEMO** button again or **START/STOP** to stop playback.

## 4. Recording and Playback (if available)

- Press the **RECORD** button to enter recording mode. Play your desired melody.
- Press the **PLAY** button to listen to your recorded melody.

## MAINTENANCE

---

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Do not use abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If the keyboard will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No sound	Volume is too low or off. Power is not connected or batteries are dead.	Increase the volume. Check power connection or replace batteries.
Keys not responding	Keyboard may be in a specific mode (e.g., demo mode).	Turn the keyboard off and on again. Ensure no special modes are active.
Distorted sound	Volume is too high. Low battery power.	Decrease the volume. Replace batteries or use AC adapter.

## SPECIFICATIONS

---

Feature	Detail
---------	--------

Feature	Detail
Brand	GENERIC (Canto)
Model Number	3738
Number of Keys	37
Age Range (Description)	Adult
Package Dimensions	73.2 x 24 x 6 cm
Item Weight	1.34 kg
ASIN	B0BVRHR8F4
Date First Available	12 July 2024

## WARRANTY AND SUPPORT

---

This Canto 3738 Miles Electronic Keyboard comes with a **two-year guarantee of satisfaction and quality**. For warranty claims or technical support, please contact your retailer or the manufacturer's customer service. Keep your proof of purchase for warranty validation.

For further assistance, please refer to the contact information provided with your purchase documentation or visit the official product support website (if available).