

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SEVERIN](#) /

› [SEVERIN MW 7886 Solo Microwave User Manual](#)

## SEVERIN MW 7886

# SEVERIN MW 7886 Solo Microwave User Manual

Brand: **SEVERIN**

Model: **MW 7886**

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the microwave oven empty.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not allow children to use the oven without supervision.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Always use oven mitts when removing items from the microwave as they may be hot.

## 2. PRODUCT OVERVIEW

The SEVERIN MW 7886 is a compact solo microwave oven designed for efficient defrosting and heating of various food items. It features a 17-liter capacity and a maximum power output of 700 Watts, making it suitable for daily use in any kitchen.



Front view of the SEVERIN MW 7886 Solo Microwave, showcasing its sleek black and stainless steel design.

## Components:

- **Oven Door:** Equipped with a handle for opening and closing.
- **Control Panel:** Features two rotary knobs for power/function selection and time/weight setting.
- **Glass Turntable:** Ensures even heating of food.
- **Turntable Support:** Holds the glass turntable in place.
- **Oven Cavity:** Lacquered interior for easy cleaning.



The interior of the microwave, showing the removable glass turntable for even heat distribution.

### 3. SETUP AND INSTALLATION

---

#### Unpacking:

- Carefully remove the microwave oven and all materials from the carton.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
- Remove all protective film from the surface of the cabinet and door.

#### Placement:

- Place the microwave oven on a flat, stable surface that is strong enough to hold the oven and the food being heated.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at

the rear, and 5 cm (2 inches) on both sides for proper airflow.

- Do not block air vents.

## **Electrical Connection:**

- Plug the power cord into a standard 230V AC, 50Hz grounded electrical outlet.
- Do not use extension cords or adapters.

## **First Use Cleaning:**

- Before first use, wipe the interior and exterior of the microwave with a damp cloth.
- Wash the glass turntable and turntable support in warm, soapy water.

## **4. OPERATING INSTRUCTIONS**

---

The SEVERIN MW 7886 microwave features two intuitive rotary knobs for easy operation.



The control panel with the upper power/function knob and the lower timer/weight knob.

## Control Panel Overview:

- **Upper Knob (Power/Function):** Used to select the desired power level or defrost function.
- **Lower Knob (Timer/Weight):** Used to set the cooking time or defrost weight.


## Heating Food:

1. Place the food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Turn the **Upper Knob** to select the desired power level. The available power levels are: **150W, 300W, 350W, 500W, 600W, and 700W (MAX)**.
4. Turn the **Lower Knob** clockwise to set the desired cooking time, up to a maximum of 30 minutes.
5. The microwave will start automatically once the timer is set.
6. When the cooking time is complete, a bell will sound, and the microwave will stop.

## Defrosting Food:

The defrost function allows you to thaw frozen food based on time or weight.

1. Place the frozen food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Turn the **Upper Knob** to the defrost symbol (snowflake icon).
4. Turn the **Lower Knob** to select the defrost time or weight. The weight settings range from **0.1 kg to 1.0 kg**.
5. The microwave will start automatically.
6. During defrosting, it is recommended to turn the food over periodically to ensure even thawing.
7. When the defrosting time is complete, a bell will sound, and the microwave will stop.

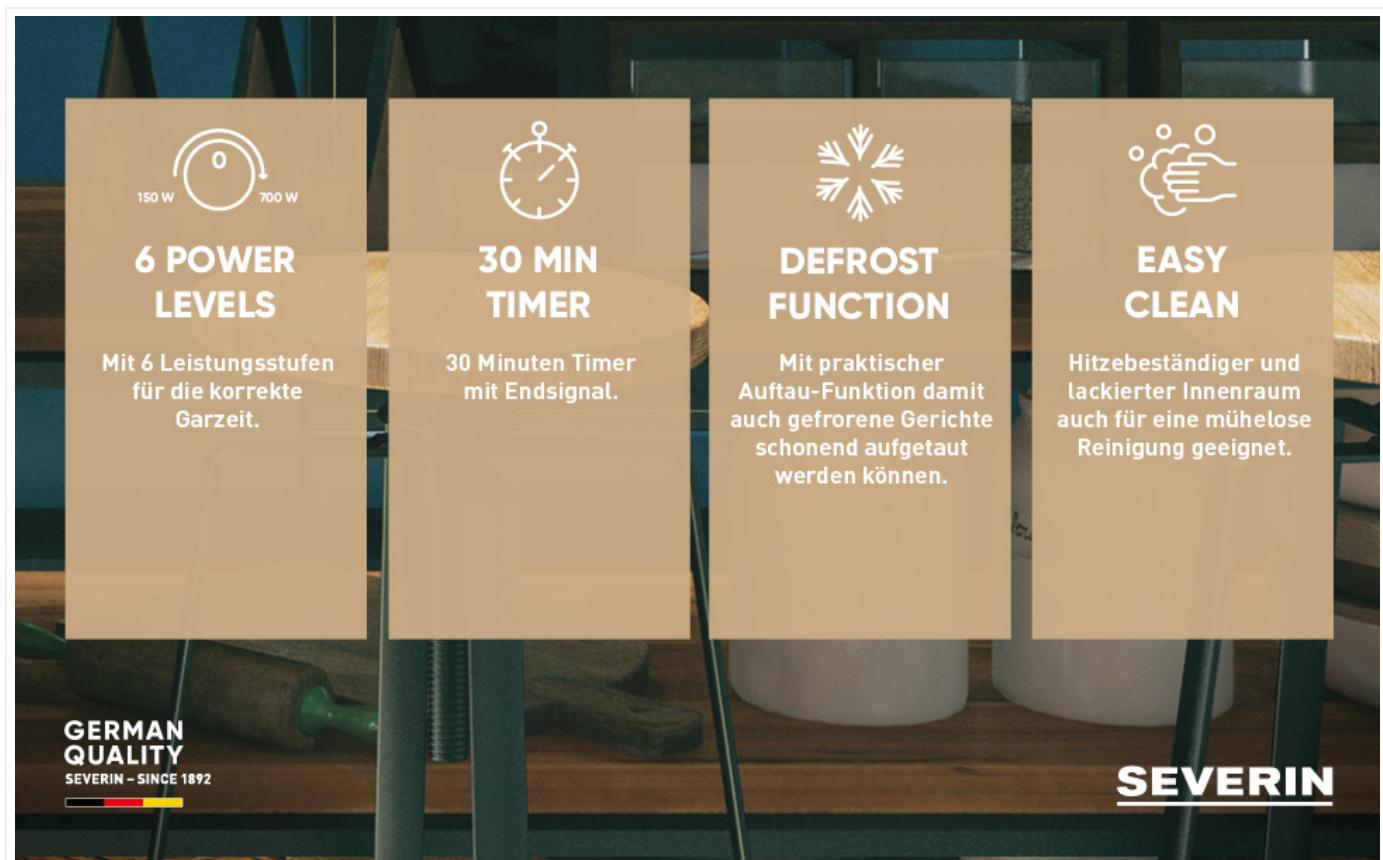

Key features of the microwave, including 6 power levels, a 30-minute timer, defrost function, and easy cleaning.

## 5. MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will help maintain its performance and extend its lifespan.

### Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals, as they may damage the finish.

### Interior Cleaning:

- The lacquered interior can be easily wiped clean with a damp cloth and mild detergent.
- For stubborn food splatters, place a bowl of water with a few lemon slices inside and heat for 2-3 minutes on high power. The steam will loosen the residue, making it easier to wipe away.
- Ensure the interior is dry before closing the door.

### Turtable and Support Cleaning:

- Remove the glass turntable and turntable support ring.
- Wash them in warm, soapy water or place them in the dishwasher for thorough cleaning.
- Ensure they are completely dry before placing them back in the microwave.

## 6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions

before contacting support.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Fuse blown or circuit breaker tripped; Door not closed properly.	Plug into outlet; Replace fuse or reset circuit breaker; Close door securely.
Food not heating	Incorrect power level or time set; Food container not microwave-safe.	Adjust power level and time; Use microwave-safe cookware.
Turntable not rotating	Turntable or support not correctly placed; Debris under turntable.	Ensure turntable and support are correctly positioned; Clean under the turntable.
Unusual noises during operation	Food container touching oven walls; Turntable not centered.	Reposition food container; Adjust turntable.

## 7. SPECIFICATIONS

Detailed technical specifications for the SEVERIN MW 7886 Solo Microwave.



Visual representation of the microwave's capacity and power output.

Feature	Detail
Model Number	MW 7886
Brand	SEVERIN
Capacity	17 Liters

Feature	Detail
Microwave Power Output	700 Watts
Power Levels	6
Product Dimensions (W x D x H)	45 cm x 36 cm x 24 cm
Weight	9.4 Kilograms
Material	Stainless Steel / Lacquered Interior
Defrost System	Manual Defrost
Voltage	230V (AC)

## 8. WARRANTY AND SUPPORT

SEVERIN products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, spare parts, or service inquiries, please visit the official SEVERIN website or contact their customer service department.

You can also find more information and products on the official [SEVERIN Brand Store](#).

© 2025 SEVERIN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.