



Manuals.plus /

› Electrolux /

› Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum User Manual

Electrolux EHVS85H3AD

Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum

Model: EHVS85H3AD

INTRODUCTION

Thank you for choosing the Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

The Electrolux Ultimate800™ Multi-Surface cordless stick vacuum is designed for quick accessibility and thorough cleaning across various surfaces. It features both the PowerPro Hard Floor Nozzle and PowerPro Bristle Nozzle, ensuring powerful suction and effective cleaning on hard floors, carpets, and other common floor types.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store your vacuum cleaner indoors in a cool, dry area.

PACKAGE CONTENTS

Your Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum package should include the following components:

- Main Hand Unit
- Extension Tube
- PowerPro Hard Floor Nozzle
- PowerPro Bristle Nozzle
- Bristle Crevice Tool
- Small Dusting Brush
- Charging Cable / Adapter
- 2 Lithium-Ion Batteries

SETUP

Follow these steps to assemble your Electrolux Ultimate800 vacuum and prepare it for first use.

1. **Assemble the Main Unit:** Insert the extension tube into the main hand unit until it clicks securely into place.
2. **Attach the Nozzle:** Choose either the PowerPro Hard Floor Nozzle or the PowerPro Bristle Nozzle and attach it to the end of the extension tube. Ensure it clicks firmly into position.
3. **Install Batteries:** Insert the included Lithium-Ion batteries into the designated battery slots on the main hand unit. Ensure they are fully seated.
4. **Initial Charging:** Before first use, fully charge both batteries. Connect the charging cable to the vacuum and plug it into a power outlet. The LED display will indicate charging status. A full charge takes approximately 2.5 hours per battery.



Figure 1: Fully assembled Electrolux Ultimate800 Cordless Stick Vacuum.



Figure 2: Angled view of the vacuum, highlighting the ergonomic handle and transparent dustbin.

OPERATING INSTRUCTIONS

Learn how to effectively use your Electrolux Ultimate800 for various cleaning tasks.

Powering On/Off and Mode Selection

- **To Power On:** Press the power button on the main hand unit. The vacuum will start in a default mode.
- **To Adjust Suction/Speed:** Use the +/- buttons on the LED Smart Display to cycle through the 4 available power levels. For optimal run time with motorized nozzles, select Auto Mode, which senses your floor type and adjusts

suction accordingly.

- **To Power Off:** Press the power button again.



Figure 3: The LED Smart Display shows battery level and current power mode (e.g., Auto).

Using Different Nozzles

- **PowerPro Hard Floor Nozzle:** This nozzle is expertly designed to pick up anything from fine dust to large crumbs on hard surfaces like hardwood, tile, and laminate.



Figure 4: The PowerPro Hard Floor Nozzle effectively cleans debris from wooden floors.

- **PowerPro Bristle Nozzle:** This powerful motorized nozzle is ideal for removing fine dust and dirt from carpets, rugs, and other common floor types.



Figure 5: The PowerPro Bristle Nozzle is designed for deep cleaning on carpeted surfaces.

Using as a Handheld Vacuum

The main hand unit can be detached from the extension tube to be used as a portable handheld vacuum. This is ideal for cleaning furniture, car interiors, or stairs.

- **To Convert:** Press the release button on the extension tube to detach the main hand unit.
- **Attach Accessories:** Connect the Bristle Crevice Tool or Small Dusting Brush directly to the main hand unit for specialized cleaning.



Figure 6: The handheld configuration is perfect for cleaning stairs and hard-to-reach areas.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Electrolux Ultimate800 vacuum.

Emptying the Dustbin

Empty the dustbin regularly, preferably after each use or when the debris reaches the MAX fill line. To empty:

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button and press it to detach the dustbin from the main unit.
3. Open the dustbin lid and empty contents into a waste bin.
4. Close the lid and reattach the dustbin to the main unit until it clicks into place.

Cleaning the 5-Step Filtration System

The 5-step filtration system efficiently separates and collects dirt and dust. For best performance, clean the filters

regularly.

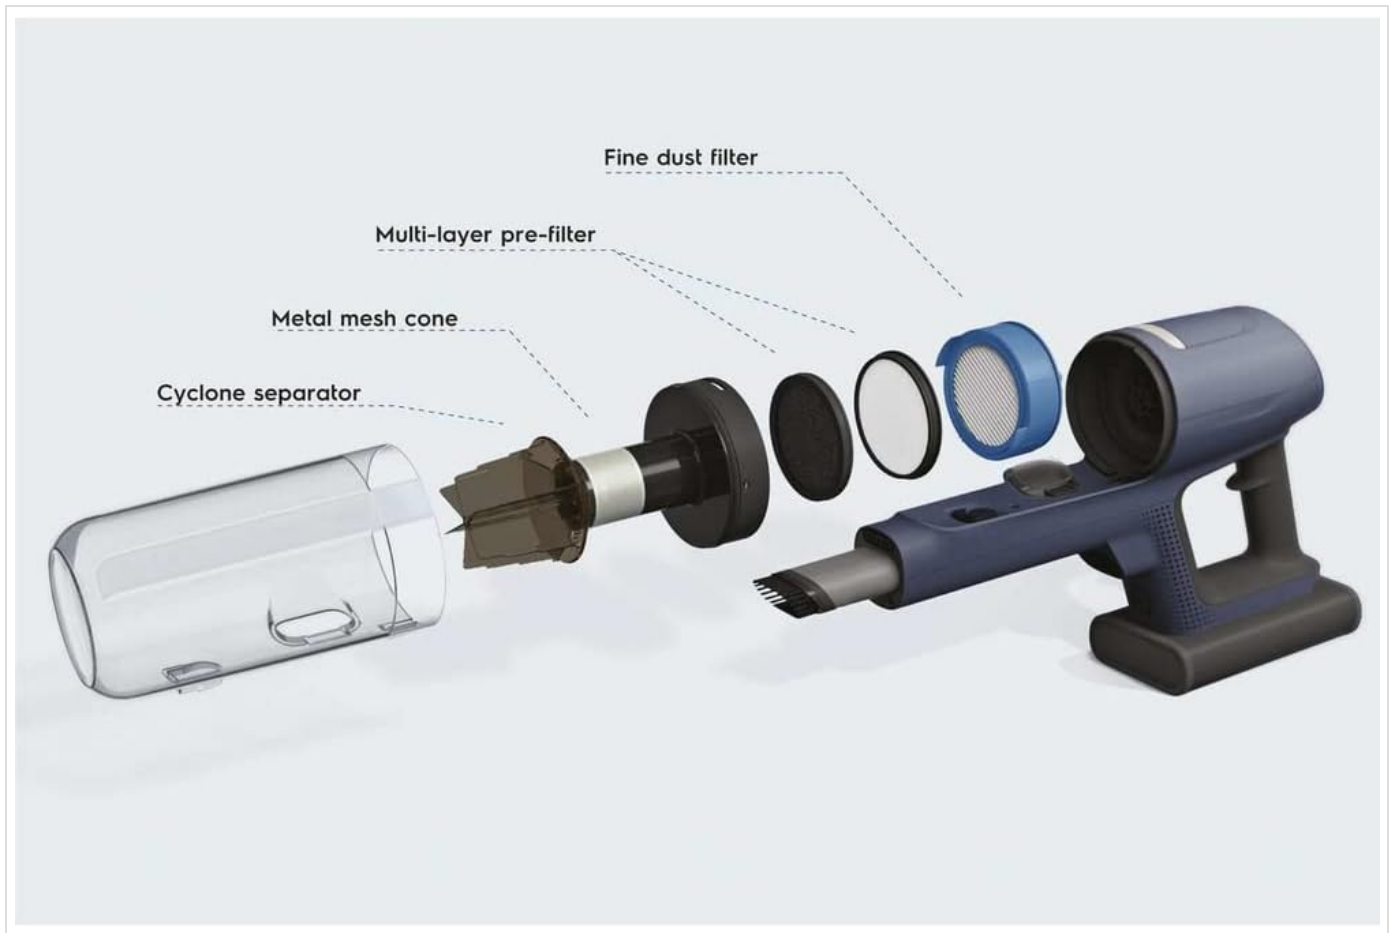


Figure 7: Exploded view of the 5-step filtration system, including cyclone separator, metal mesh cone, multi-layer pre-filter, and fine dust filter.

1. **Disassemble Filters:** With the dustbin detached, carefully remove the cyclone separator, metal mesh cone, multi-layer pre-filter, and fine dust filter.
2. **Clean Components:** Tap loose dirt from all components over a waste bin. The filters and dustbin can be rinsed with lukewarm water. Ensure all parts are completely dry before reassembling. Do not use detergents or hot water.
3. **Reassemble:** Once dry, reassemble the filters in reverse order of disassembly and reattach the dustbin.

BrushRoll Clean Technology

The BrushRoll Clean blade effortlessly cuts stubborn hairs and fibers from the bristle nozzle. To activate:

- Ensure the vacuum is powered on and the bristle nozzle is attached.
- Press and hold the BrushRoll Clean button (if available on your model, refer to the diagram on the nozzle). The blade will activate to clear the brush roll.

Battery Care

- Always use the original Electrolux charger.
- Do not expose batteries to extreme temperatures or direct sunlight.
- If the vacuum will not be used for an extended period, store the batteries partially charged in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Electrolux Ultimate800, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or improperly inserted.	Ensure batteries are fully charged and correctly inserted.
Reduced suction power	Dustbin full; Filters clogged; Obstruction in nozzle or tube.	Empty dustbin. Clean all filters. Check nozzle and extension tube for blockages.
Brush roll not spinning	Hair/debris tangled in brush roll; Nozzle not properly attached.	Use BrushRoll Clean function or manually remove debris. Ensure nozzle is securely attached.
Short run time	Battery not fully charged; Using high power mode continuously.	Fully charge batteries. Use Auto Mode or lower power settings for longer run time.

SPECIFICATIONS

Detailed technical specifications for the Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum.

Feature	Specification
Brand	Electrolux
Model Name	Ultimate800 Multi-Surface & Hard Floors
Model Number	EHVS85H3AD
Color	Denim Blue
Form Factor	Stick
Special Features	Bagless, Headlight, Lightweight, Portable, Washable Filter
Filter Type	5-Step Filtration
Included Components	PowerPro Hard Floor Nozzle, Bristle Crevice Tool, Small Dusting Brush
Is Cordless?	Yes
Capacity	0.4 Liters
Wattage	400 watts
Charging Time	2.5 Hours
Recommended Uses	Indoor
Battery Type	Lithium-Ion (2 included)
Battery Life (Run Time)	Up to 120 minutes (at Hand Unit with both batteries at minimum power)
Noise Level	79 dB
Product Dimensions	11.4"L x 9.8"W x 43.7"H
Item Weight	6.3 pounds
Number of Speeds/Power Levels	4
Control Method	Push Button / Touch

WARRANTY AND SUPPORT

Warranty Information

The Electrolux Ultimate800 Multi-Surface Cordless Stick Vacuum comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or to inquire about replacement parts, please visit the official Electrolux website or contact their customer service department. You can find contact information and FAQs on the Electrolux official website.

