

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Dan&Darci](#) /
- › [Dan&Darci Unicorn Hatching Surprise Eggs for Kids - 6 Pack Instruction Manual](#)

Dan&Darci Gifts for Kids

Unicorn Hatching Surprise Eggs Instruction Manual

Model: Gifts for Kids | Brand: Dan&Darci

PRODUCT OVERVIEW

Experience the magic of watching a unicorn hatch and grow from a colorful egg. These surprise eggs provide an engaging and educational activity, allowing children to observe the process of growth and transformation.



Image: The complete set of Dan&Darci Unicorn Hatching Eggs, showcasing the vibrant packaging, unhatched eggs, and several fully grown unicorn figures.

SAFETY INFORMATION

Warning: Choking Hazard.

This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended during use.

WHAT'S IN THE BOX

- 6 Unicorn Hatching Eggs
- 6 Unicorn-themed cards

SETUP

Preparing your Unicorn Hatching Eggs for the magical transformation is simple. Follow these steps:

1. **Prepare Water:** Fill a container (such as a glass or bowl) with water. The water should be warm, but not hot. Ensure the container is large enough to fully submerge the egg.
2. **Submerge Egg:** Carefully place one Unicorn Hatching Egg into the water. The egg may initially float. Gently hold it under the surface and tilt it to allow any trapped air bubbles to escape, which will help it sink.
3. **Patience is Key:** The hatching process begins once the egg is submerged.

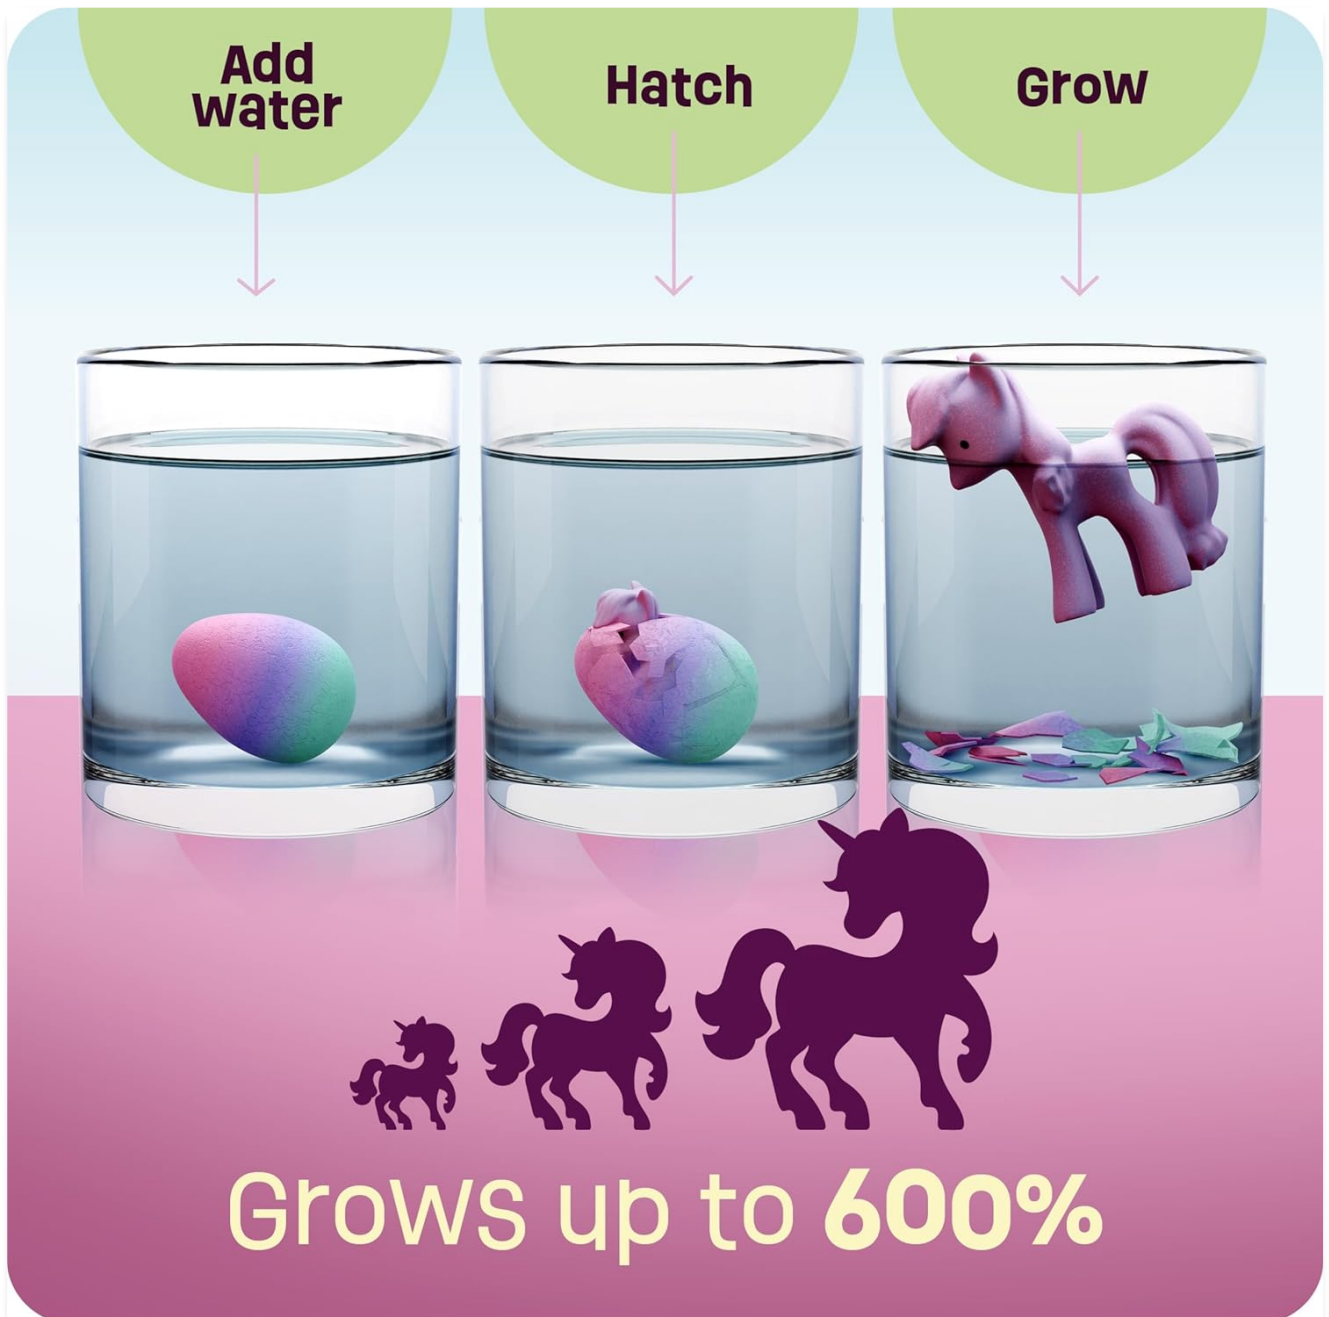


Image: A visual guide demonstrating the three main stages of the unicorn egg's transformation: adding water, the egg beginning to hatch, and the unicorn growing in the water.

OPERATING INSTRUCTIONS

Observe the fascinating transformation of your unicorn egg:

- **Hatching Process:** Within 12-24 hours, the eggshell will begin to crack. The unicorn inside will start to emerge as it absorbs water.
- **Growth Phase:** Over the next 24-48 hours, the unicorn will continue to grow significantly, expanding up to 600% of its original size. Ensure the unicorn remains fully submerged in water during this period for optimal growth.
- **Observation:** You can gently assist the hatching by carefully removing pieces of the eggshell once cracking has begun, if desired. This can sometimes speed up the full emergence of the unicorn.



Image: A child observing a unicorn egg as it hatches in a glass of water, highlighting the engaging nature of the process.

Unicorn HATCHING EGGS



Image: A close-up view of a colorful unicorn figure partially emerged from its cracked eggshell, demonstrating the hatching stage.

MAINTENANCE

After your unicorn has fully grown, you can continue to enjoy it:

- **Drying and Shrinking:** Once removed from water, the unicorn will slowly begin to shrink back to its original size as it dries. This process can take several hours or a day, depending on environmental conditions.
- **Re-growing:** To make your unicorn grow again, simply place it back into water. It will re-absorb water and expand.
- **Cleaning:** If the unicorn becomes slimy or dirty from prolonged water exposure, rinse it gently with clean water.
- **Storage:** Store dry unicorns in a clean, dry place away from direct sunlight when not in use.



every kid loves a surprise

Image: Children engaging with the fully grown unicorn figures, demonstrating their play value after hatching.

Experience the magic

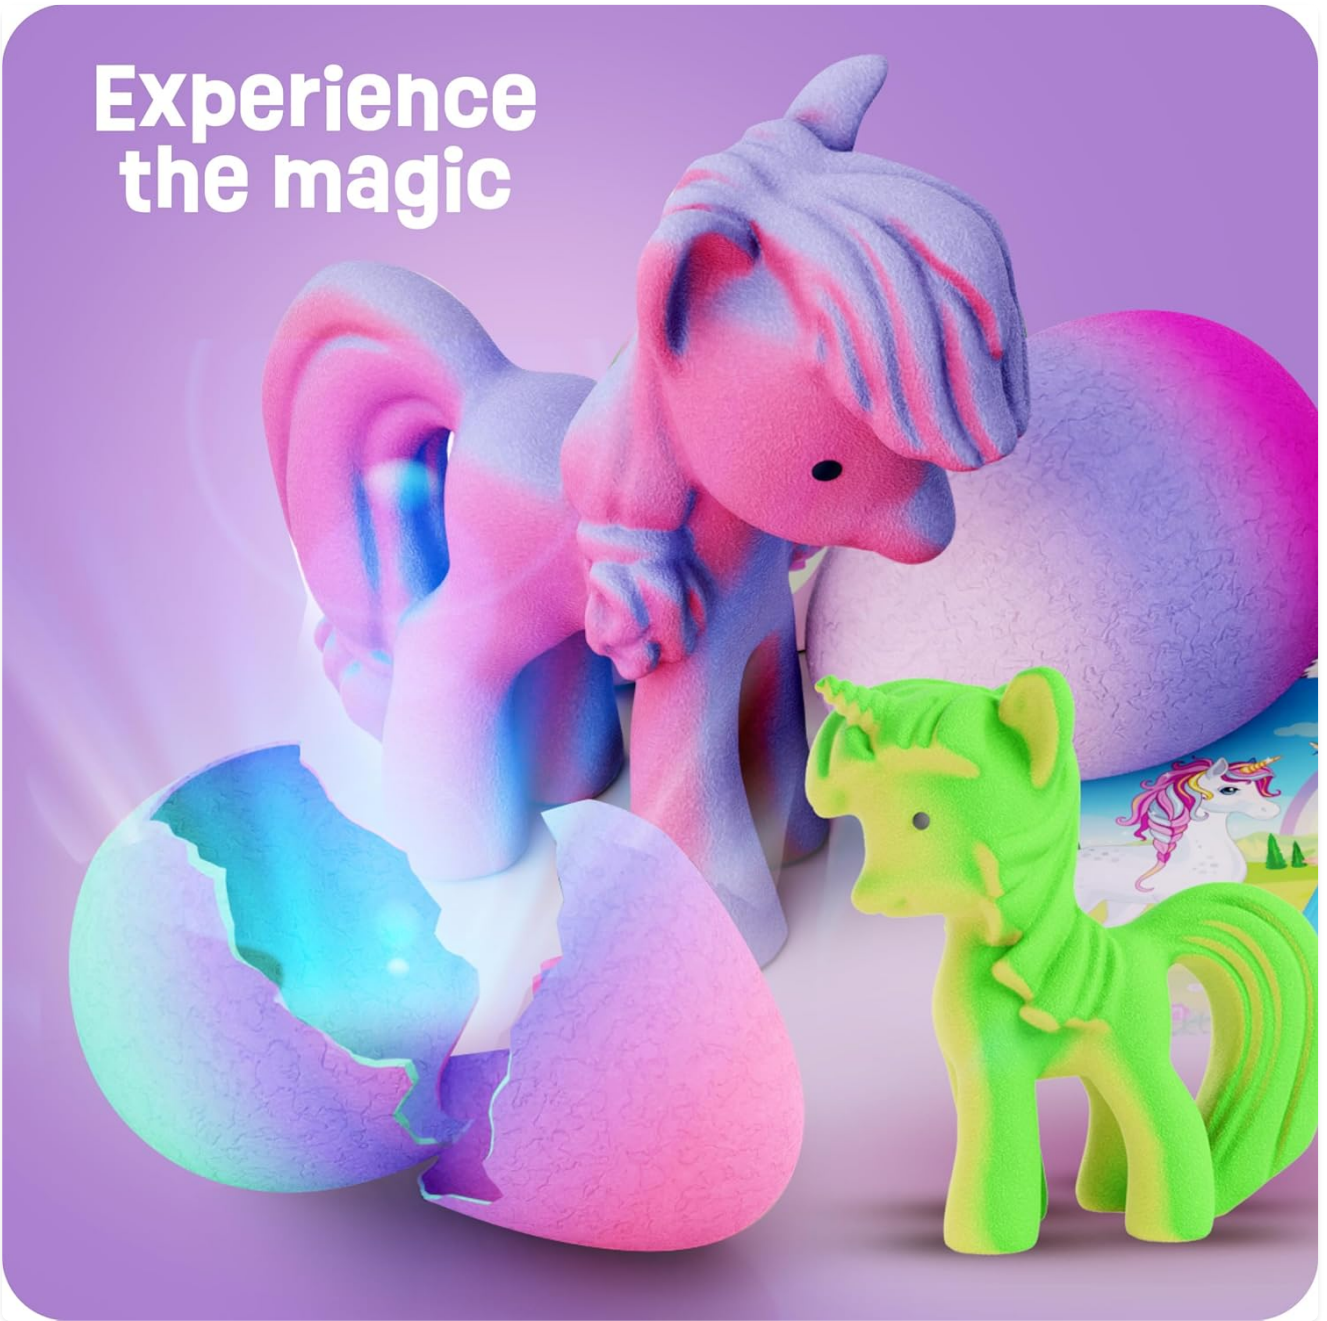


Image: Two large, colorful unicorn figures standing next to a broken eggshell, illustrating their expanded size after the growth process.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Egg not cracking or hatching slowly.	Water temperature too cold; insufficient time; egg not fully submerged.	Ensure water is warm (not hot). Allow more time (up to 48 hours for full growth). Gently assist by removing small pieces of shell once cracking begins. Ensure the egg is fully submerged.

Problem	Possible Cause	Solution
Unicorn not growing to expected size.	Not enough time in water; not fully submerged.	Keep the unicorn in water for the recommended period (up to 48 hours). Ensure it is completely submerged.
Unicorn becomes slimy.	Prolonged exposure to water or impurities in water.	Rinse the unicorn with clean water. Change the water in the container regularly if keeping it submerged for extended periods.

SPECIFICATIONS

Product Dimensions: 6 x 4 x 3 inches

Item Weight: 8.8 ounces

Item Model Number: Gifts for Kids

Manufacturer Recommended Age: 3 years and up

Manufacturer: Dan&Darci

For further assistance, please contact Dan&Darci customer support.