

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Funsicle](#) /

› [Funsicle Activity 8ft x 30in Round Above Ground Swimming Pool with SkimmerPlus Filter Pump Instruction Manual](#)

Funsicle P2000830A

Funsicle Activity 8ft x 30in Round Above Ground Swimming Pool Instruction Manual

Model: P2000830A

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Funsicle Activity 8ft x 30in Round Above Ground Swimming Pool with SkimmerPlus 2-in-1 Filter Pump. Please read all instructions carefully before setup and retain this manual for future reference. Proper installation and maintenance are crucial for the longevity and safe use of your pool.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety guidelines can result in serious injury or death.

- Always supervise children in and around the pool. Drowning can occur quickly and silently.
- Install the pool on a flat, stable, and level surface. Uneven ground can cause the pool to collapse.
- Ensure adequate clearance around the pool. Do not install near overhead power lines or other obstructions.
- Keep electrical cords and devices away from the pool area.
- Do not dive or jump into the pool. The water depth is not sufficient for diving.
- Empty the pool completely when not in use for extended periods or during colder seasons.
- Secure the pool area to prevent unsupervised access by children.
- Always place the pool on a flat, stable surface and supervise children at all times to prevent drowning or injury.

PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact Funsicle customer service.

- Pool Liner (3-ply ToughMesh material)
- Metal Frame Poles (various lengths and connectors)
- SkimmerPlus SFX330 Filter Pump (110-120 volt)
- Type I Filter Cartridge

- Hoses and Clamps for Filter Pump
- Drain Plug
- Instruction Manual



Image: Funsicle Activity 8ft x 30in Round Above Ground Swimming Pool with SkimmerPlus Filter Pump and Type I filter cartridge.

SETUP INSTRUCTIONS

1. Site Preparation

1. Choose a flat, level area in your backyard, free from sharp objects, debris, or slopes.
2. Clear the area of any grass, roots, or rocks that could damage the pool liner.
3. Consider placing a ground cloth or tarp (not included) under the pool for added protection.

2. Pool Assembly

1. Unfold the pool liner and spread it out in the prepared area. Ensure the drain plug is accessible.
2. Assemble the metal frame poles by snapping them into place with the integrated lock pins. Refer to the diagram for correct pole orientation.
3. Insert the assembled poles through the sleeves on the pool liner.
4. Connect the vertical support legs to the horizontal frame poles, ensuring all connections are secure.



Image: Illustration of the strong and sturdy metal frame with lock pins for easy assembly.

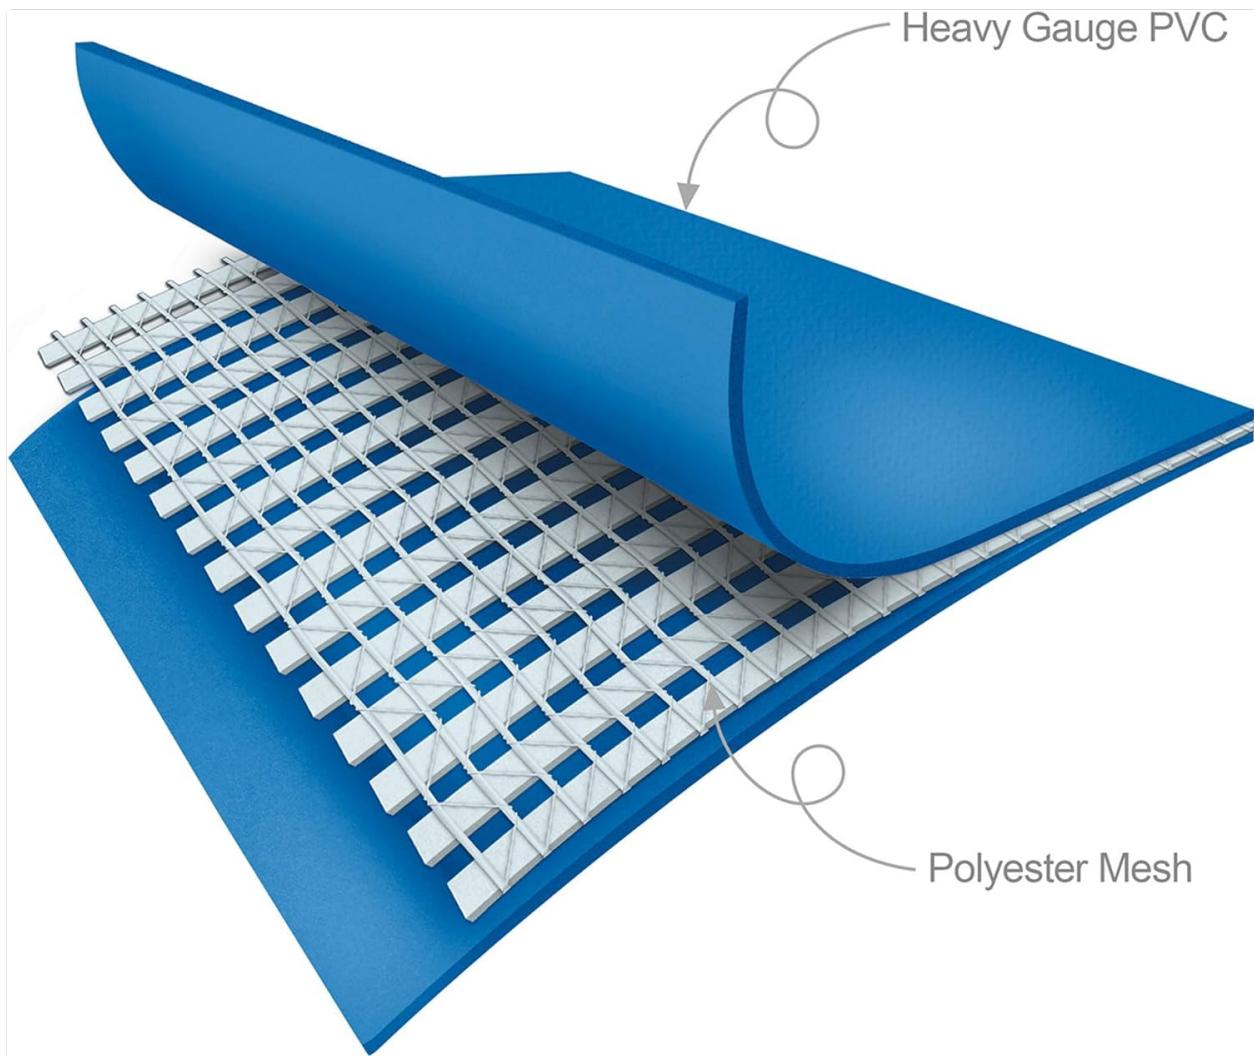


Image: Cross-section view of the durable 3-ply ToughMesh material, showing polyester mesh between heavy gauge PVC layers.

3. Filter Pump Installation

1. Attach the SkimmerPlus SFX330 filter pump to the sidewall of the pool according to the instructions provided with the pump.
2. Ensure all hoses are securely connected and clamps are tightened to prevent leaks.
3. Insert the Type I filter cartridge into the pump housing.
4. Connect the pump to a grounded electrical outlet. Do not use extension cords.

Includes our exclusive 2 in 1 side-mounted SkimmerPlus® filter pump



1.

Skimmer basket picks up debris, leaves & insects



2.

Filter cartridge captures small particles



Look for
Funsicle filters
Type
I

Combines the functions of a skimmer & filter pump in one unit

Filter pump attaches to pool sidewall for easy maintenance and efficient space

Image: Diagram illustrating the SkimmerPlus 2-in-1 filter pump, showing the skimmer basket for debris and the filter cartridge for small particles. The pump has a flow rate of 330 GPH.

OPERATING YOUR POOL

1. Filling the Pool

1. Begin filling the pool with water. As the water level rises, smooth out any wrinkles in the bottom of the liner.
2. Fill the pool to the recommended water line, typically indicated on the pool liner or in the pump manual. Do not overfill.

2. Starting the Filter Pump

1. Once the pool is filled, ensure the pump is properly primed (refer to pump manual for specific instructions).
2. Turn on the filter pump. The pump should run for several hours each day to ensure proper water circulation and filtration.



Image: Water being returned to the pool through the filter pump's outlet, indicating proper circulation.

MAINTENANCE

1. Filter Cartridge Cleaning and Replacement

1. Turn off and unplug the filter pump before performing any maintenance.
2. Remove the filter cartridge from the pump housing.

3. Rinse the filter cartridge with a garden hose daily to remove accumulated debris.
4. Replace the filter cartridge every two weeks, or more frequently if the water appears cloudy or the pump flow rate decreases. Use only Funsicle Type I filter cartridges.



Image: Close-up of the SkimmerPlus filter pump housing and a Type I filter cartridge, highlighting the replaceable filter component.

2. Water Quality

- Regularly test your pool water for pH and chlorine levels using a pool test kit (not included).
- Adjust chemical levels as needed to maintain proper water balance and sanitation.
- Skim the surface of the pool daily to remove leaves, insects, and other floating debris.
- Vacuum the pool bottom as needed to remove settled debris.

3. Draining and Storage

- To drain the pool, attach a garden hose to the drain plug and open the valve.
- Once empty, clean and thoroughly dry the pool liner and frame components.
- Store all components in a dry, protected area during the off-season to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Water is cloudy	Insufficient filtration; improper chemical balance; dirty filter cartridge	Run pump longer; clean/replace filter cartridge; test and adjust water chemicals.
Pump not running	Not plugged in; power outage; clogged impeller; airlock	Check power connection; ensure power supply; clean impeller; prime pump.
Water leaking from pump/hoses	Loose connections; damaged O-rings/seals; cracked housing	Tighten clamps; inspect and replace O-rings/seals; contact customer service for damaged parts.
Pool losing water level	Evaporation; leak in liner or connections	Normal evaporation occurs; check for visible leaks and repair with a patch kit (not included).

SPECIFICATIONS

Feature	Detail
Model Number	P2000830A
Pool Dimensions	8ft (96 inches) Diameter x 30 inches Height
Water Capacity	801 Gallons
Material	3-ply ToughMesh (Polyester mesh between heavy gauge PVC), Metal Frame
Filter Pump Type	SkimmerPlus SFX330 2-in-1 Filter Pump
Filter Cartridge Type	Type I
Power Requirement	110-120 Volt
Assembly Required	Yes
Item Weight	35.91 Pounds



Image: The FunSicle Activity pool, highlighting its 30-inch height.

WARRANTY AND SUPPORT


Your FunSicle Activity 8ft x 30in Round Above Ground Swimming Pool and SkimmerPlus Filter Pump are covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or to order replacement parts, please contact FunSicle customer service. Keep your proof of purchase for warranty validation.

- **Manufacturer:** Polygroup Pacific Limited
- Refer to the FunSicle website or your product packaging for the most current contact information.

Related Documents - P2000830A

	<p><u>FunSicle Oasis Pool User Guide: Setup, Maintenance, and Safety</u></p> <p>Comprehensive user guide for the FunSicle Oasis Pool, covering setup instructions, safety guidelines, maintenance tips, and winterizing procedures for optimal enjoyment and longevity.</p>
	<p><u>FunSicle Activity Pool User Guide: Setup, Safety, and Maintenance</u></p> <p>Comprehensive user guide for the FunSicle Activity Pool, covering setup instructions, safety guidelines, maintenance tips, and parts information. Ensure safe and enjoyable outdoor play.</p>

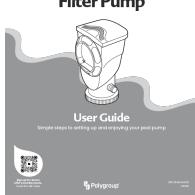	<p>Funsicle Activity Pool User Guide: Setup, Safety, and Maintenance</p> <p>Comprehensive user guide for the Funsicle Activity Pool, covering setup, safety precautions, maintenance, storage, and troubleshooting. Learn how to safely enjoy your outdoor pool.</p>
	<p>Funsicle Activity Pool Benutzerhandbuch: Einrichtung, Sicherheit und Pflege</p> <p>Umfassende Anleitung zur Einrichtung, sicheren Nutzung und Wartung Ihres Funsicle Activity Pools. Enthält wichtige Sicherheitshinweise für Kinder und Erwachsene sowie Aufbau- und Pflegetipps.</p>
	<p>Funsicle SkimmerPlus Filter Pump User Guide</p> <p>Comprehensive user guide for the Funsicle SkimmerPlus Filter Pump, detailing setup, operation, maintenance, and troubleshooting for clean and enjoyable pool water.</p>
	<p>Funsicle Oasis Pool User Guide</p> <p>Comprehensive user guide for the Funsicle Oasis Pool, covering setup, safety, maintenance, and troubleshooting for a safe and enjoyable swimming experience.</p>