

Funsicle P4001648B

Funsicle 16 Foot x 48 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool Instruction Manual

Brand: Funsicle | Model: P4001648B

INTRODUCTION

This manual provides essential information for the safe and efficient setup, operation, and maintenance of your Funsicle Oasis Designer Above Ground Swimming Pool. Please read all instructions carefully before assembly and use.

Key Features:

- Round above-ground pool with a 16-foot diameter and 48-inch height.
- Capacity to hold up to 5,246 gallons of water.
- Stylish cool gray liner and interior honeycomb print.
- SmartConnect technology setup with ultra-strong oval poles for efficient assembly.
- Constructed from reliable 3-ply ToughMesh materials for puncture resistance.
- Matte finish on poles to protect against corrosion.
- Features a 2-in-1 drainage plug for convenient water removal.
- Includes a 110-120v SkimmerPlus SFX1000 filter pump, Type C filter cartridge, SureStep ladder, pool cover, ground cloth, and Deluxe maintenance kit.

SETUP INSTRUCTIONS

Site Preparation:

Select a level, stable area free from sharp objects, debris, and overhead obstructions. Ensure adequate drainage away from the pool area. The ground cloth should be laid out first to protect the pool liner.

Assembly:

The Funsicle Oasis pool utilizes SmartConnect technology with ultra-strong oval poles for a quick and durable assembly. Follow the step-by-step instructions provided in the included manual for connecting the frame components. Ensure all connections are secure before proceeding.



Image: Unboxing the Funsicle pool components, showing the ladder steps and frame poles.

Includes our exclusive 2 in 1 side-mounted SkimmerPlus® filter pump



1. Skimmer basket picks up debris, leaves & insects



2. Filter cartridge captures small particles



Look for
Funicle filters
Type

C

Combines the functions of a skimmer & filter pump in one unit
Filter pump attaches to pool sidewall for easy maintenance
and efficient space

Image: Detail of the SmartConnect oval poles, highlighting the easy snap-in frame system for quick assembly.

Filling the Pool:

Once the frame is fully assembled and the liner is in place, begin filling the pool with water. Smooth out any wrinkles in the liner as the water level rises. Monitor the water level to ensure it does not exceed the recommended maximum fill line.

Your browser does not support the video tag.

Video: An overview of the Funsicle Oasis Outdoor Round Frame Above Ground Swimming Pool in Gray, demonstrating its features and setup.

OPERATING YOUR POOL

Filter Pump Operation:

The included SkimmerPlus SFX1000 filter pump is designed to keep your pool water clean and circulating. Connect the pump according to the instructions, ensuring all hoses are securely fastened. Operate the pump daily for several hours to maintain water clarity.

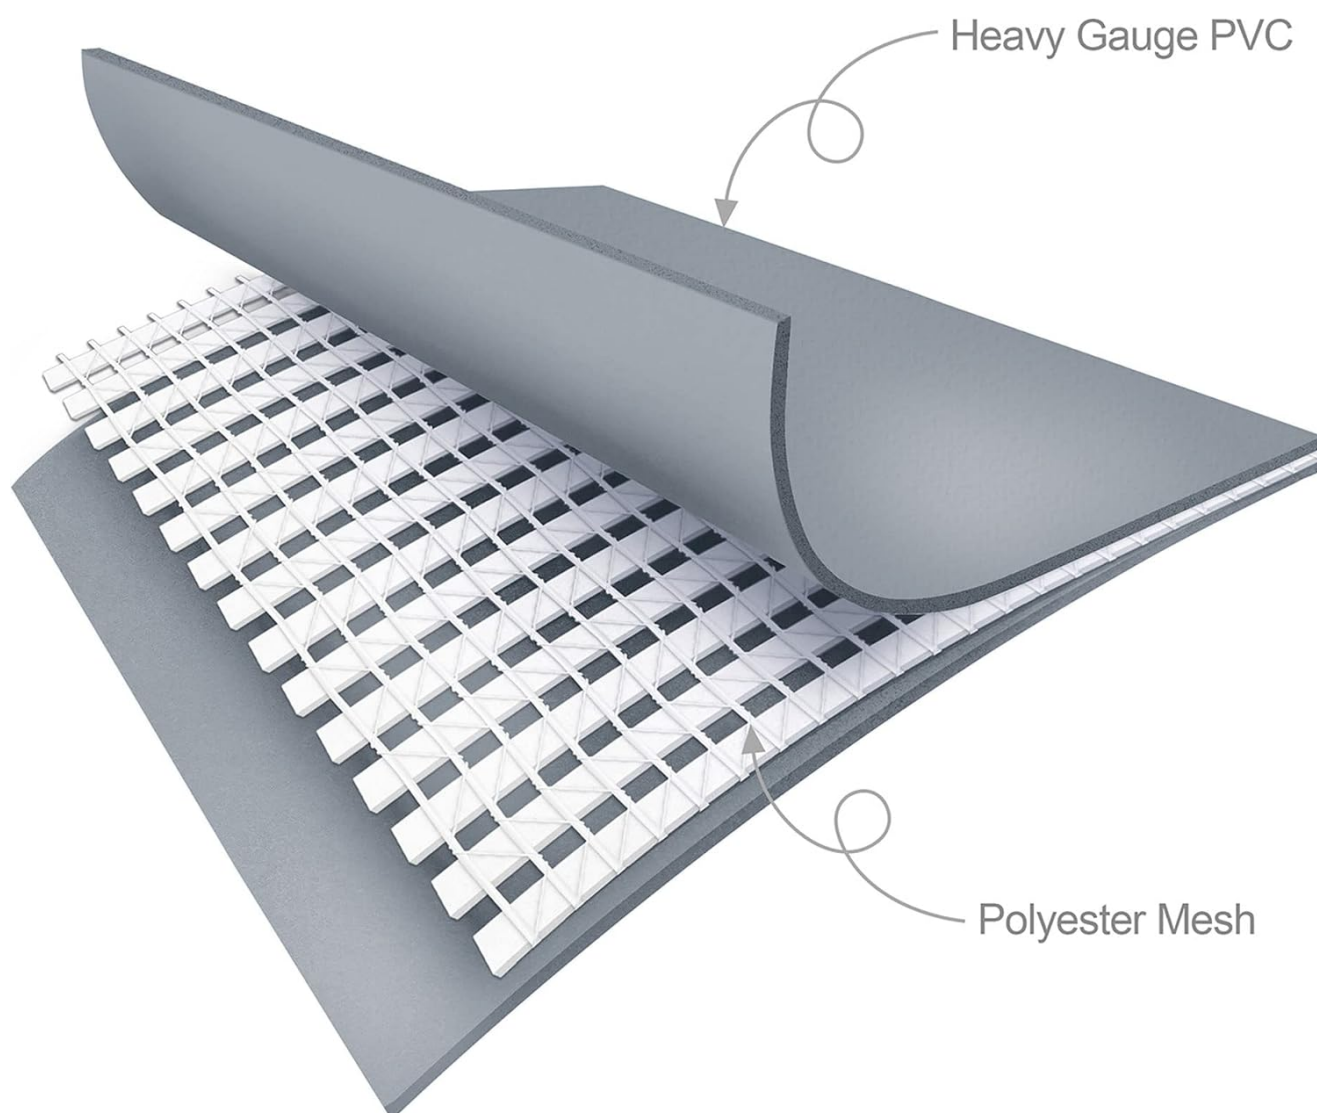


Image: Diagram illustrating the SkimmerPlus 2-in-1 filter pump, showing how the skimmer basket collects debris and the filter cartridge captures small particles.



Image: The SkimmerPlus filter pump unit shown alongside a Type C filter cartridge, ready for installation.



Image: A close-up of the water return jet inside the pool, indicating proper water circulation.

Ladder Use:

The SureStep ladder provides safe and easy access to and from the pool. Always ensure the ladder is placed on a stable, level surface and is securely attached to the pool frame before use. Supervise children at all times when the ladder is in place.



Image: The SureStep ladder, designed for safe and easy access to the pool.

MAINTENANCE GUIDELINES

Water Quality:

Regularly test your pool water for proper chemical balance (pH, chlorine, alkalinity). Adjust chemicals as needed to maintain a healthy and safe swimming environment. Refer to your Deluxe maintenance kit for guidance on water testing and treatment.

Filter Maintenance:

Clean or replace the Type C filter cartridge regularly, typically every two weeks or more frequently depending on usage and water conditions. A clean filter is crucial for effective water filtration.

Pool Cover Use:

Use the included pool cover when the pool is not in use to prevent debris from entering the water and to help retain heat. Secure the cover tightly to avoid it being blown off by wind.



Image: The FunSicle pool with its protective cover and ground cloth in place.

Draining and Storage:

At the end of the swimming season or when not in use for extended periods, drain the pool using the 2-in-1 drainage plug. Clean and thoroughly dry all components before disassembling and storing them in a cool, dry place to prevent mold and prolong product life.

TROUBLESHOOTING COMMON ISSUES

- **Water Leaks:** Inspect the liner for punctures or tears. Small holes can often be repaired with a vinyl repair kit. Check all hose connections for tightness.
- **Cloudy Water:** Ensure the filter pump is running for sufficient hours daily. Clean or replace the filter cartridge. Test and adjust water chemistry as needed.
- **Pump Not Working:** Check power connections and ensure the pump is plugged into a working outlet. Verify that the filter cartridge is not excessively clogged.
- **Difficulty Draining:** Ensure the 2-in-1 drainage plug is fully open and the drainage hose (if used) is not kinked.

PRODUCT SPECIFICATIONS

Specification	Detail
---------------	--------

Brand	Funsicle
Model Number	P4001648B
Product Dimensions	196"L x 196"W x 48"H
Capacity	5246 Gallons
Shape	Oval, Round
Color	Gray
Material	Polyvinyl Chloride (PVC)
Included Components	Filter Pump, Ground Cloth, Filter Cartridge, SureStep Ladder, Pool Cover, Deluxe Maintenance Kit
Assembly Required	Yes
Indoor/Outdoor Usage	Outdoor
UPC	195545003217

WARRANTY AND CUSTOMER SUPPORT

This Funsicle pool, pump, and ladder come with a 1-year manufacturer warranty. For any product-related inquiries, technical support, or warranty claims, please contact Funsicle customer service.

Customer Service:

- Phone: (888) 670-4386
- Website: support.funsicle.com

Please have your model number (P4001648B) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question