

Manuals.plus /

› FOHERE /

› FOHERE Electric Cheese Grater GS-907 Instruction Manual

## FOHERE GS-907

# FOHERE Electric Cheese Grater GS-907 Instruction Manual

Model: GS-907

## INTRODUCTION

Thank you for choosing the FOHERE Electric Cheese Grater. This versatile kitchen appliance is designed to simplify your food preparation by quickly and efficiently slicing, shredding, and grinding various ingredients such as fruits, vegetables, cheeses, and nuts. With its powerful 150W motor and interchangeable cones, you can achieve different textures and cuts with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.

**FOHERE**

**4 IN 1 ELECTRIC CHEESE GRATER**

Getting Your Food Preparation Safe and Faster



*The FOHERE Electric Grater offers faster processing, one-button operation, and multiple attachments compared to manual chopping.*

## SAFETY INSTRUCTIONS

To prevent personal injury or damage to the appliance, always follow these basic safety precautions:

- Read all instructions before use.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the food pusher provided.
- Do not immerse the motor base in water or other liquids.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Ensure all parts are correctly assembled before operating.
- Do not use outdoors.

## PACKAGE CONTENTS

Verify that all items are included in your package:

- Machine Base
- Feed Chute
- Food Pusher
- Slicing Cone
- Grinding Cone
- Coarse Grating Cone
- Fine Grating Cone



*The complete set of components for your FOHERE Electric Grater.*

## SETUP

Follow these steps to assemble your electric grater:

1. Place the machine base on a stable, flat surface.
2. Attach the feed chute to the machine base by turning it counter-clockwise until it locks into place.
3. Select the desired blade cone (slicing, grinding, coarse grating, or fine grating).
4. Insert the chosen blade cone into the feed chute and rotate it clockwise until it is securely seated.
5. Place the food pusher into the top opening of the feed chute.

## THE INSTALLATION STEPS



*Visual guide for the quick and easy installation steps.*

Your browser does not support the video tag.

*Video: Demonstrates the easy installation of the FOHERE Electric Cheese Grater, including attaching the feed chute and inserting different blades.*

## OPERATING INSTRUCTIONS

The FOHERE Electric Cheese Grater features a simple one-button operation for quick and efficient food processing. Always ensure the appliance is properly assembled before use.

### General Operation

1. Plug the appliance into a power outlet.
2. Place a bowl or container under the outlet of the feed chute to collect processed food.
3. Place the food item into the feed chute. For larger items, you may need to cut them into smaller pieces that fit the chute.
4. Press the 'ON' button to start the motor.
5. Use the food pusher to gently guide the food towards the rotating blade. Do not force the food.
6. Once finished, press the 'OFF' button and unplug the appliance.

### Using Different Cones

- **Slicing Cone:** Ideal for creating thin slices of cucumbers, potatoes, carrots, and zucchini.
- **Fine Grating Cone:** Perfect for finely grating ingredients like carrots, beets, cucumbers, zucchini, and hard cheeses.
- **Coarse Grating Cone:** Suitable for coarser shreds of potatoes, carrots, beets, cucumbers, zucchini, and cheeses.
- **Grinding Cone:** Best for grinding nuts, chocolate, and hard cheeses into a fine powder or crumb.



## SLICING BLADE

Suitable for cucumber, potato, carrot, squash, etc



*The Slicing Cone is perfect for uniform slices of vegetables.*



## FINE GRATING BLADE

Suitable for cucumber, potato, carrot, squash, onion, etc



*Achieve fine shreds with the Fine Grating Cone.*



## COARSE GRATING BLADE

Suitable for cucumber, potato, carrot, squash, onion, etc



*The Coarse Grating Cone provides thicker, more robust shreds.*



*Use the Grinding Cone for nuts, chocolate, and hard cheeses.*

Your browser does not support the video tag.

*Video: Demonstrates the electric grater in action, showcasing its ability to process various ingredients like cheese, vegetables, and nuts with different cones.*

## MAINTENANCE AND CLEANING

---

Proper cleaning and maintenance will extend the life of your FOHERE Electric Cheese Grater.

1. Always unplug the appliance before cleaning.
2. The motor base should only be wiped clean with a damp cloth. Never immerse the motor base in water or any other liquid.
3. All detachable parts (feed chute, food pusher, and blade cones) can be easily washed with water and mild detergent.
4. The detachable parts are NOT dishwasher safe. Hand wash only.
5. Ensure all parts are completely dry before reassembling or storing.



**4 in 1 Electric Cheese Grater**

You can do whatever you want

- SLICING
- SHREDDING
- GRINDING

*Easy cleaning of detachable parts under running water.*

Your browser does not support the video tag.

*Video: Quick demonstration of disassembling and cleaning the components of the electric grater.*

## **TROUBLESHOOTING**

If you encounter any issues with your FOHERE Electric Cheese Grater, refer to the following common

problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; parts not assembled correctly.	Ensure the power cord is securely plugged in. Check if the ON/OFF switch is in the 'ON' position. Verify that the feed chute and blade cone are correctly locked into place.
Food is not processing efficiently.	Incorrect blade cone for food type; food too large or too soft; motor overloaded.	Ensure you are using the appropriate blade cone for the food item. Cut larger food items into smaller, manageable pieces. Do not force food into the chute; apply gentle, even pressure with the food pusher.
Appliance stops during operation.	Overheating; food jammed.	Unplug the appliance and allow it to cool down for 15-20 minutes. Check for any food jams in the blade cone or feed chute and carefully remove them.
Excessive vibration or noise.	Improper assembly; unstable surface.	Ensure all parts are securely assembled. Place the appliance on a stable, flat, and dry surface.

*If the problem persists after trying these solutions, please contact customer support.*

## SPECIFICATIONS

- **Brand:** FOHERE
- **Model Number:** GS-907
- **Colour:** Silver
- **Material:** Stainless Steel (blades), Plastic (housing)
- **Power:** 150W
- **Included Components:** Machine Base, Feed Chute, Food Pusher, 4 Interchangeable Cones
- **Item Length:** 40 Centimeters
- **Dishwasher Safe:** No (detachable parts are hand-wash only)

## WARRANTY AND SUPPORT

The FOHERE Electric Cheese Grater Model GS-907 comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact FOHERE customer service through the retailer where the product was purchased or visit the official FOHERE website for contact information.

Please retain your proof of purchase for warranty validation.