

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CUPEISI](#) /

› [Android 15 Tablet, 10.1 inch 12GB RAM+64GB ROM 1TB Expandable, 2 in 1 Tablets with Keyboard Case Mouse Stylus, 1.8GHz Quad-core, 1280*800 IPS Touch Screen, 8MP Dual Camera, 5G WiFi 6 BT 5.0 Tablet 12GB+64GB Black](#)

CUPEISI CP20

CUPEISI CP20 Android 15 Tablet User Manual

Model: CP20

1. INTRODUCTION

Thank you for choosing the CUPEISI CP20 Android 15 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly to ensure optimal performance and longevity of your tablet.

2. WHAT'S IN THE Box

Verify that all items are present in your package:

- CUPEISI CP20 Android 15 Tablet
- Wireless Keyboard
- Foldable Protective Cover
- Bluetooth Mouse
- Stylus
- Type-C Cable



Image: The CUPEISI CP20 Tablet alongside its accessories, including the wireless keyboard, Bluetooth mouse, stylus, and foldable protective cover.

3. PRODUCT FEATURES AND COMPONENTS

The CUPEISI CP20 Tablet is designed for versatility and performance, offering a seamless user experience for both work and entertainment.

3.1 Key Features

- **Operating System:** Stable Android 15.0 system.
- **Processor:** Built-in 1.8GHz Quad-core CPU for efficient multitasking.
- **Memory & Storage:** 12GB RAM (4GB+8GB expansion) and 64GB ROM, expandable up to 1TB via microSD card.
- **Display:** Stunning 10.1-inch 1280x800 IPS HD touch screen for immersive visuals and eye protection.

- **Battery:** Powered by a 6000mAh battery, providing approximately 6 hours of regular operation and up to 12 hours of standby time. Charges via 5V2A Type-C port.
- **Cameras:** 8MP rear camera with auto-focus and flash, and a 2MP front camera for clear video calls and photos.
- **Connectivity:** Supports 5G WiFi 6 and Bluetooth 5.0.
- **2-in-1 Functionality:** Transforms into a laptop or computer mode with the included Bluetooth keyboard, wireless mouse, and foldable protective case.

Veidoo 10.1 inch Tablet -Faster Speed, Larger Space

 15.0
Android 15.0

 **CPU**
Quad-core

 **Wi-Fi**
2.4+5G wifi

 **Battery**
6000 mAh

 **IPS**
1280*800

 **12GB+64GB**
(4GB+8GB)

 **Ratio**
10.1 inch

 **Camera**
High definition



Image: Overview of the tablet's core specifications and features.

3.2 Physical Components

Familiarize yourself with the tablet's physical layout:

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust audio levels.
- **Type-C Port:** For charging and data transfer.
- **TF/SIM Card Slot:** Insert a microSD card for expanded storage.
- **Front Camera:** For video calls and selfies.
- **Rear Camera & Flash:** For high-quality photos and videos.
- **Speakers:** Two speakers for audio output.



Image: Labeled diagram of the tablet's ports and buttons.

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the Type-C cable to the tablet's charging port and the other end to a compatible power adapter (5V2A recommended). The battery indicator will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power Button until the screen lights up.
- **To Power Off:** Press and hold the Power Button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power Button, then select 'Restart'.

4.3 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap **Connect**.

4.4 Pairing Bluetooth Accessories

To use the wireless keyboard and Bluetooth mouse, they must be paired with your tablet.

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth.
4. The tablet will scan for available devices. Select the keyboard or mouse from the list.
5. Follow any on-screen prompts to complete the pairing process.



Image: Instructions for connecting the wireless keyboard and mouse via Bluetooth.

4.5 Inserting a MicroSD Card

To expand storage, insert a microSD card (up to 1TB) into the TF/SIM card slot. Ensure the tablet is powered off before inserting or removing the card.

5. OPERATING YOUR TABLET

5.1 Basic Navigation

Navigate the Android interface using touch gestures:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-zoom:** Enlarge or shrink content.
- **Long press:** Access contextual menus or move icons.

5.2 Using Keyboard and Mouse

Once paired, the keyboard and mouse function similarly to a laptop. The keyboard allows for efficient typing, while the mouse provides precise cursor control, enhancing productivity.



Sleek & Functional

Bring Convenience to Your Life

Image: The tablet in laptop mode, demonstrating its use for productivity tasks.

5.3 Camera Usage

Open the Camera app to capture photos and videos. Switch between the 2MP front camera and the 8MP rear camera as needed. The rear camera features auto-focus and flash for improved image quality.



Image: Demonstrating the tablet's front and rear camera functionality for video calls and photography.

5.4 App Installation and Management

Download and install applications from the Google Play Store. To manage installed apps, go to **Settings > Apps**.

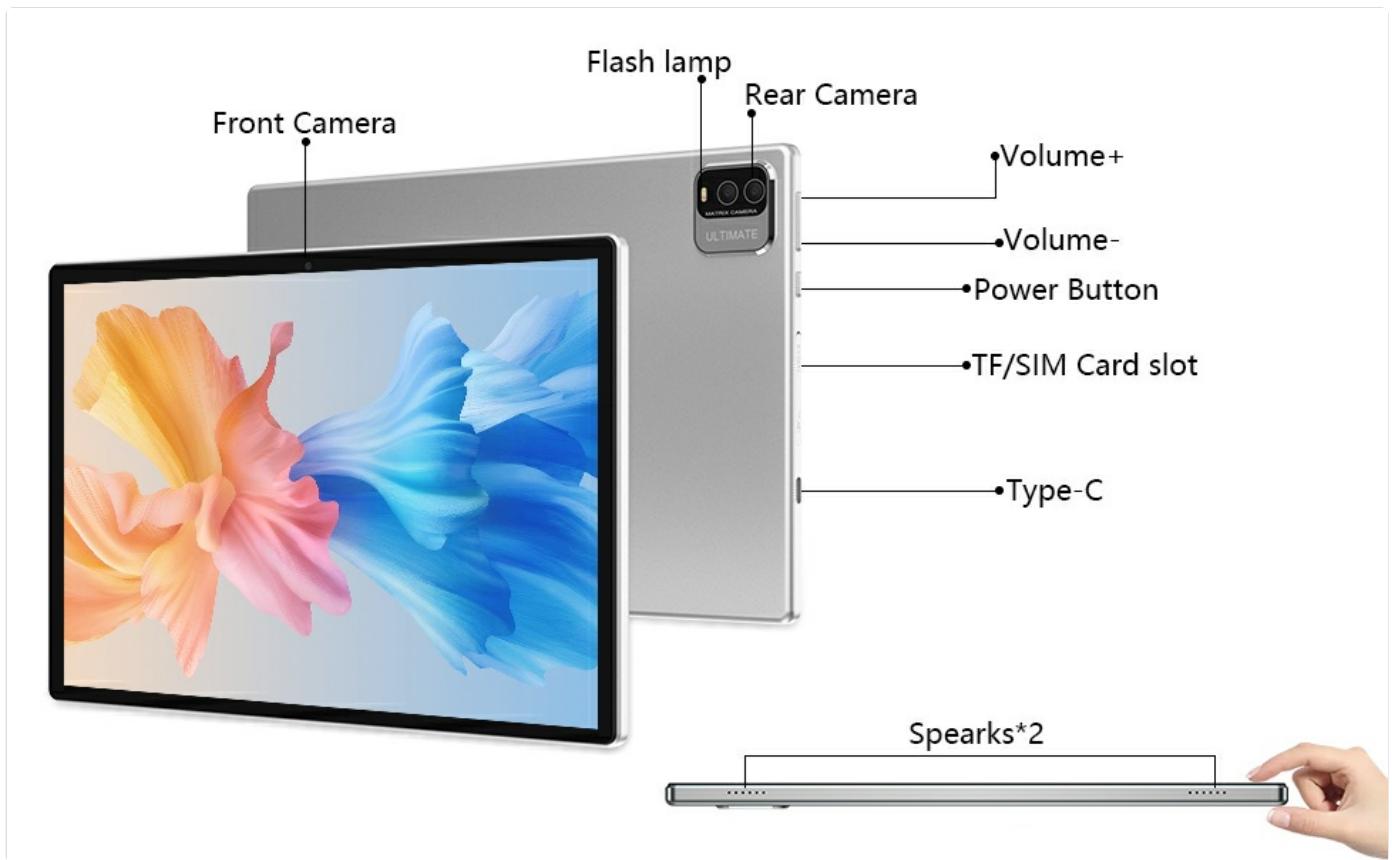


Image: The tablet running Android 15 OS, showing popular applications like YouTube, Google Play, and Netflix.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

6.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

6.3 Storage Management

To maintain optimal performance, periodically review and manage your tablet's storage. Delete unnecessary files, uninstall unused apps, and move large media files to external storage (microSD card) if applicable. Go to **Settings > Storage** to view usage and free up space.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your CUPEISI CP20 Tablet.

7.1 Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
- Perform a forced restart by pressing and holding the Power Button for 10-15 seconds.

7.2 Slow Performance

- Close unused applications running in the background.
- Clear cached data for apps (Settings > Apps > [App Name] > Storage & cache > Clear cache).

- Ensure sufficient free storage space.
- Restart the tablet periodically.

7.3 Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect (Settings > Network & internet > Wi-Fi > [Network Name] > Forget).

7.4 Rapid Battery Drain

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Limit background app refresh.
- Check battery usage in Settings > Battery to identify power-hungry apps.

8. SPECIFICATIONS

Feature	Specification
Brand	CUPEISI
Model Name	CP20
Operating System	Android 15
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	1.8 GHz Quad-core
RAM	12 GB (4GB+8GB expansion)
Flash Memory Size	64 GB
Expandable Storage	Up to 1TB (microSD)
Rear Webcam Resolution	8 MP
Front Camera Resolution	2 MP
Wireless Type	802.11ax (5G WiFi 6)
Bluetooth	Bluetooth 5.0
Battery Capacity	6000mAh Lithium Polymer
Average Battery Life	8 Hours
Item Weight	1 pounds
Product Dimensions	9.7 x 6.5 x 0.3 inches

9. WARRANTY AND SUPPORT


For warranty information and technical support, please refer to the documentation included with your purchase or visit the official

CUPEISI website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact CUPEISI customer service for assistance.

© 2025 CUPEISI. All rights reserved.

Related Documents - CP20

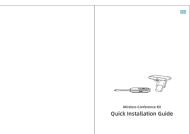	<p><u>CP20 User Guide: Setup, Features, and Troubleshooting for your Tablet PC</u></p> <p>Comprehensive user guide for the CP20 Tablet PC, covering setup, function overview, settings, network connection, app management, multimedia, specifications, and troubleshooting. Learn how to use your device effectively.</p>
	<p><u>Coopers CP20 Tablet PC User Manual and Support</u></p> <p>Comprehensive guide for the Coopers CP20 tablet PC, covering setup, features, and support. Includes technical specifications and troubleshooting.</p>
	<p><u>Linkvil Wireless Conference Kit Quick Installation Guide</u></p> <p>A quick installation guide for the Linkvil Wireless Conference Kit, detailing product introduction, setup, usage, and regulatory information for seamless 4K wireless screen sharing.</p>
	<p><u>Growplay Compact Frame Monkey Bars: Assembly, Maintenance, and User Manual</u></p> <p>Comprehensive assembly, maintenance, and user guide for the Growplay Compact Frame Monkey Bars (Model CP20, MR1800KIT). Learn safe installation, usage, and care for this backyard playground equipment.</p>

	<p><u>LINAK CB20 OpenBus Control Box Data Sheet</u></p> <p>Detailed data sheet for the LINAK CB20 OpenBus control box, outlining its features, specifications, compatibility, and ordering information for actuators and accessories.</p>
	<p><u>PULS CP20.481-ETC 480W 48V 10A EtherCAT DIN Rail Power Supply Installation Manual</u></p> <p>Comprehensive installation manual for the PULS CP20.481-ETC single-phase DIN rail power supply. Details product description, intended use, installation instructions, technical data, and functional descriptions. Features EtherCAT interface.</p>