

[Manuals.plus](#) /

> [Ikea](#) /

> Ikea METOD Corner Wall Cabinet with Shelves, 68 x 60 cm, White/Light Grey Instruction Manual

Ikea IK.691.422.38

Ikea METOD Corner Wall Cabinet with Shelves Instruction Manual

Model: IK.691.422.38 | Dimensions: 68 x 60 cm | Color: White/Light Grey

PRODUCT OVERVIEW

The Ikea METOD Corner Wall Cabinet is designed to provide efficient storage in your kitchen or utility space. This cabinet features a robust 18 mm thick structure, an adjustable shelf for customizable storage, and a door that can be mounted to open from either the right or left side, offering flexibility in installation.

This manual provides essential information for the assembly, operation, and maintenance of your new cabinet.

SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. Refer to the included assembly diagram for detailed step-by-step instructions. Basic tools such as a screwdriver, hammer, and level are typically required.

- Unpack Components:** Carefully remove all parts from the packaging. Verify against the parts list provided in the separate assembly guide.
- Assemble Cabinet Frame:** Follow the assembly guide to connect the side panels, top, and bottom panels using the provided fasteners. Ensure all connections are secure.
- Install Wall Mounting Hardware:** This cabinet is designed for wall mounting. Secure the appropriate wall mounting brackets to the wall according to the assembly guide, ensuring they are level and capable of supporting the cabinet's weight. Use suitable wall plugs for your wall type.
- Mount Cabinet to Wall:** Carefully lift and attach the assembled cabinet frame to the wall mounting hardware. Secure it firmly.
- Install Adjustable Shelf:** Insert the shelf supports into the desired holes inside the cabinet. Place the adjustable shelf onto the supports. You can reposition the shelf at any time to suit your storage needs.
- Attach Door:** Decide whether you want the door to open from the right or left. Attach the hinges to the door and then to the cabinet frame as per the assembly guide. Adjust the hinges to ensure the door hangs straight and closes properly.



Image 1: The Ikea METOD Corner Wall Cabinet with one door partially open, showcasing the interior with an adjustable shelf. The cabinet is white with a light grey finish.



Image 2: A close-up detail of the cabinet door's edge, highlighting the smooth, light grey finish and robust construction.

OPERATING INSTRUCTIONS

The Ikea METOD Corner Wall Cabinet is designed for straightforward use and flexible storage.

- **Door Operation:** Gently open and close the cabinet door using the handle. Avoid forcing the door to prevent damage to hinges or the cabinet structure.
- **Adjusting Shelves:** To adjust the height of the internal shelf, first remove any items from the shelf. Lift the shelf, remove the shelf supports, and reinsert them into the desired holes. Place the shelf back onto the supports, ensuring it is level and secure before placing items back on it.
- **Storage Capacity:** Distribute weight evenly on the shelves. Avoid overloading the cabinet, as this can compromise its stability and potentially damage the shelves or mounting.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your Ikea METHOD cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a soft cloth dampened with water or a mild, non-abrasive cleaner. Dry immediately with a clean, dry cloth. Avoid using harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the surface.
- **Hinge Check:** Periodically check the door hinges and mounting screws for tightness. Tighten if necessary to ensure proper door function and stability.
- **Material Care:** The cabinet components are made with materials like polypropylene. These materials are generally easy to clean and maintain with standard household cleaning methods.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Door Does Not Close Properly:** Check if the hinges are loose. Tighten the hinge screws on both the door and the cabinet frame. If the door is still misaligned, adjust the hinge screws that control the door's position (refer to the hinge manufacturer's instructions or the assembly guide).
- **Shelf Wobbles or Sags:** Ensure the shelf supports are fully inserted into the holes and are of the correct type. Verify that the shelf is not overloaded. Redistribute items if necessary.
- **Cabinet Feels Unstable on Wall:** This indicates a potential issue with the wall mounting. Immediately remove items from the cabinet. Re-check the wall mounting brackets and fasteners. Ensure they are securely attached to the wall and that appropriate wall plugs were used for your wall type. If unsure, consult a professional.
- **Scratches or Minor Damage:** For minor scratches, touch-up paint or repair kits may be available from the manufacturer or a suitable hardware store.

SPECIFICATIONS

Feature	Detail
Brand	Ikea
Model Number	IK.691.422.38
Color	White / Light Grey
Dimensions (approx.)	68 cm (width) x 60 cm (depth)
Special Features	Adjustable shelf, Reversible door mounting
Mounting Type	Wall Mount
Included Components	Shelves
Reinforcement Material	Polypropylene

WARRANTY AND SUPPORT

This product is subject to a 30-day return policy for refund or replacement from the date of purchase. For specific warranty details, please refer to the terms and conditions provided at the time of purchase or contact Ikea customer service directly.

For further assistance, technical support, or to inquire about replacement parts, please visit the official Ikea website or contact their customer service department.

© 2023 Ikea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question