

[Manuals.plus](#) /

> [Ikea](#) /

> IKEA PJÄTTERYD Deer Picture (50 x 70 cm) Instruction Manual

Ikea PJÄTTERYD

IKEA PJÄTTERYD Deer Picture (50 x 70 cm) Instruction Manual

Model: PJÄTTERYD | Brand: IKEA

INTRODUCTION

This instruction manual provides essential information for the proper setup, use, and care of your IKEA PJÄTTERYD Deer Picture set. This set includes two unframed art prints, each measuring 50 x 70 cm, featuring a motif created by Tania Bello. The artwork depicts deer within a natural, stylized setting, printed on linen material.

SETUP AND INSTALLATION



Image: The two PJÄTTERYD Deer Pictures, showcasing the complete artwork set.

The IKEA PJÄTTERYD pictures are unframed canvas prints designed for wall display. Follow these guidelines for installation:

1. **Unpacking:** Carefully remove the pictures from their packaging. Inspect both prints for any signs of damage.
2. **Location Selection:** Choose a suitable wall location. Avoid direct sunlight or areas with high humidity, as these conditions can affect the longevity and appearance of the artwork. Ensure the wall material can support the weight of the pictures.
3. **Mounting:** As these are unframed canvas prints, they typically feature a wooden stretcher bar frame on the back. They can be hung directly onto wall hooks or screws.
 - Measure and mark the desired hanging points on the wall.
 - Install appropriate wall anchors and screws/hooks suitable for your wall type (e.g., drywall, plaster, concrete).
 - Carefully hang each picture, ensuring it is level and securely seated on the hook(s).
4. **Arrangement:** The set includes two complementary pieces. Consider hanging them side-by-side with a small gap for a cohesive display, or in separate locations as desired.



Image: The two PJÄTTERYD Deer Pictures displayed on a wall, illustrating a common setup arrangement.



Image: Detail of the canvas edge, showing the linen material wrapped around the stretcher bar.

USAGE AND DISPLAY

Once installed, the IKEA PJÄTTERYD Deer Pictures are intended for decorative purposes. Ensure they are hung securely to prevent accidental falls. The artwork is suitable for various indoor environments, including living rooms, bedrooms, and offices, contributing to the aesthetic appeal of the space.

MAINTENANCE AND CARE

To maintain the quality and appearance of your PJÄTTERYD pictures, follow these care instructions:

- **Dusting:** Gently dust the surface of the canvas with a soft, dry cloth or a feather duster regularly to prevent dust buildup.
- **Cleaning:** For light marks or smudges, lightly dampen a clean, soft cloth with water and gently wipe the affected area. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the print and linen material.
- **Environmental Conditions:** Keep the pictures away from direct sunlight, extreme temperatures, and high humidity to prevent

- fading, warping, or material degradation.
- **Handling:** When moving or re-hanging the pictures, handle them by the stretcher bar frame to avoid touching the printed surface directly.

TROUBLESHOOTING

This section addresses common concerns related to decorative art prints:

- **Picture appears crooked:** Ensure the wall hook(s) are level and the picture is properly seated. Adjust as necessary.
- **Dust accumulation:** Regular gentle dusting with a soft, dry cloth is recommended.
- **Minor marks/smudges:** Refer to the "Maintenance and Care" section for cleaning instructions. Avoid aggressive scrubbing.
- **Picture falls from wall:** This indicates improper installation. Ensure appropriate wall anchors and hooks are used for your wall type and that the picture is securely hung. Consult a professional if unsure about wall mounting.

PRODUCT SPECIFICATIONS

Product Name	PJÄTTERYD Picture
Brand	IKEA
Model Number (Manufacturer Reference)	IK.505.180.43
ASIN	B0BVWMTWZ8
Motif Artist	Tania Bello
Dimensions (each picture)	70 cm (Height) x 50 cm (Width) x 0.03 cm (Depth)
Material	Linen
Number of Items	2 (pack quantity)
Theme	Deer
Orientation	Landscape
Frame Type	Unframed
Wall Art Form	Art Print
Manufacturer	IKEA
Date First Available	31 Jan. 2023

WARRANTY INFORMATION

No specific warranty information is provided in the product details. For details regarding potential warranties or guarantees, please refer to the purchase documentation or contact IKEA customer service directly.

CUSTOMER SUPPORT

For further assistance, questions, or concerns regarding your IKEA PJÄTTERYD Deer Picture, please contact IKEA customer service through their official website or the contact information provided with your purchase. When contacting support, please have your product model (PJÄTTERYD) and manufacturer reference (IK.505.180.43) available.

© 2023 IKEA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BVWMTWZ8>

More documents and user manuals: <https://manuals.plus/>